

## INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Regular screwdriver and hammer.

 Assemble door stop by pressing rubber tips onto threaded and fixed door stop arms and screw together

(See illustration).

2. Using screwdriver and hammer, carefully remove pin (A)

from top hinge.

 Position door stop on top of hinge with threaded arm facing door. Tap hinge pin (A) into hinge using hammer. If hinge pin (A) is too large, remove bushing (B).

4. Adjust stop for desired degree of opening by turning threaded arm (C).

NOTE: Two hinge pin door stops are recommended per door.







HINGE-PIN

REMOVABLE

**ADJUSTMEN** 

BOLT

BUSHING

