




0248
08

(EN) FRAME KIT ASSEMBLY INSTRUCTIONS FOR 2x4 WALLS

(ES) INSTRUCCIONES DE MONTAJE DEL KIT PARA PAREDES 2x4

2x4

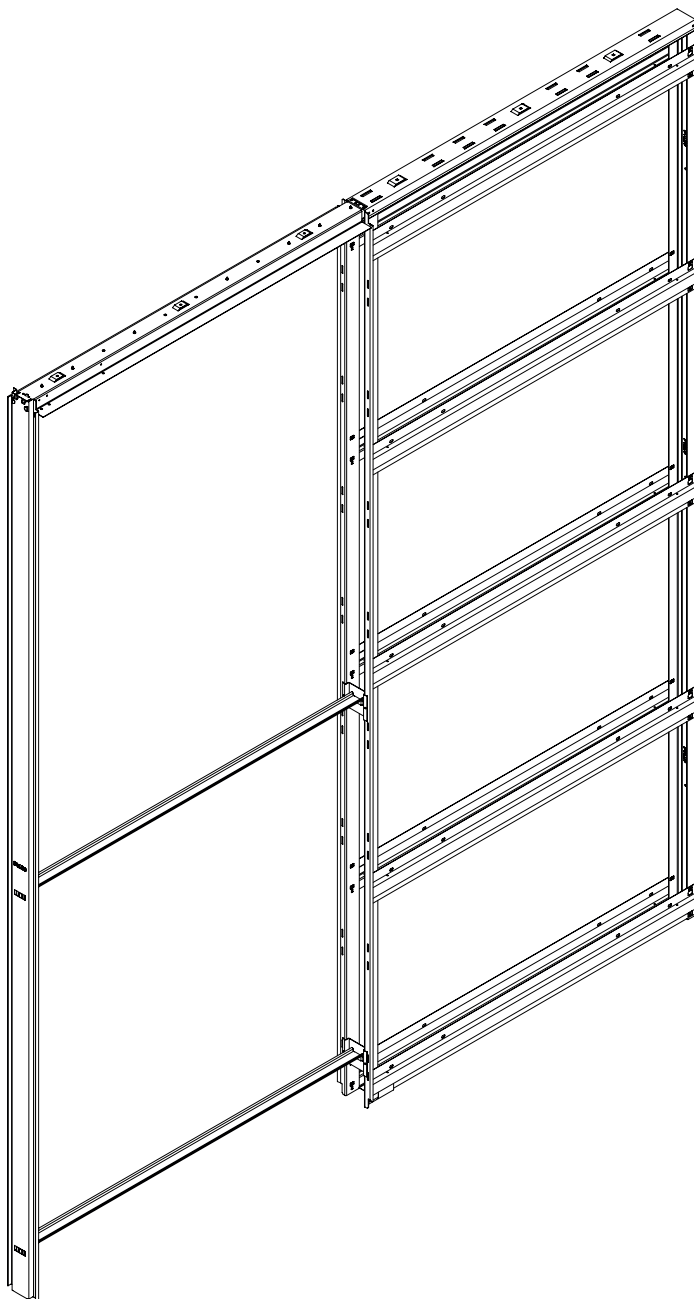



(EN)

If you follow carefully these instructions for the assembly and installation process your life will be easier!

A pair of tressles are very useful when assembling the frames.

Some parts may have sharp edges so use gloves and be careful when handling the parts.

All ECLISSE products are fully inspected and tested before they leave the factory.




(ES)

Seguir las instrucciones con atención. Para un montaje correcto, utilizar las herramientas indicadas, y para una correcta funcionalidad, ensamblar en los soportes adecuados. Algunas partes del producto pueden contener superficies punzantes y/o cortantes. Se necesita utilizar dispositivos de protección adecuados y proteger los espacios de trabajo. "ECLISSE SRL" no asume responsabilidad algunapor los daños derivados en la utilización no conforme a estas instrucciones.

Todos los componentes del contramarco están testados y controlados en "ECLISSE SRL".

MANDATORY TOOLS HERRAMIENTAS OBLIGATORIAS PARA EL MONTAJE

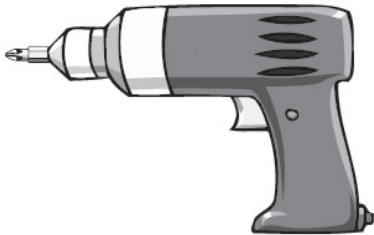

DRILL
DESTORNILLADOR



PH2 PZ2




HAMMER
MARTILLO



GLOVES
GUANTES



TAPE MEASURE
METRO

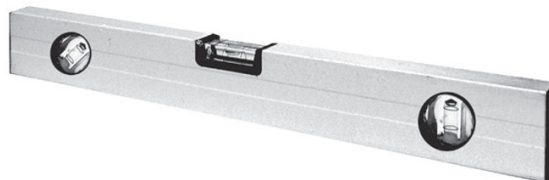

LEVEL
NIVEL DE BURBUJA



PLUMB LINE
PLOMADA




FRAME COMPONENTS / COMPONENTES DEL KIT



CENTRAL VERTICAL / MONTANTES VERTICALES DELANTERO




POCKET HORIZONTALS (N° 8 PCS FOR H = 80" - 84" / N° 10 PCS FOR H = 96")
REFUERZOS HORIZONTALES (N° 8 PARA H = 80" - 84" / N° 10 PARA H = 96")




REAR VERTICAL / MONTANTE VERTICAL TRASERO



POCKET HEADER / SUBREPUERTA




TO BEAM WITH TRACK / GUIA COMPLETA DE RIEL



METAL DOOR POST / MONTANTE DE TOPE DE METAL



BRACERS (FOR ASSEMBLY PURPOSE ONLY) /
DISTANCIADORES (SOLO PARA INSTALACION)

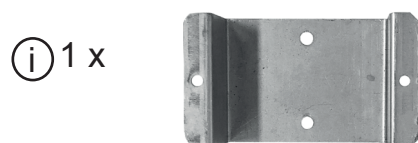

BRACKET / SOPORTE





RUNNER KIT / HERRAMIENTAS



-  9 X ST FH #8 X 3/8" (4,2 X 9,5 mm) ZNB
-  2 X ST FH #6 X 3/8" (3,5 X 9,5 mm) ZNB
-  72 X ST FH #7 X 1" (3,9 X 25 mm)


STEP

1

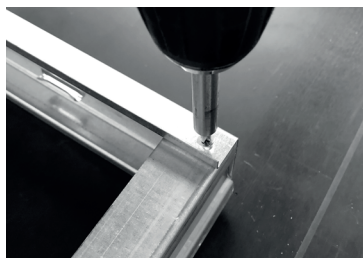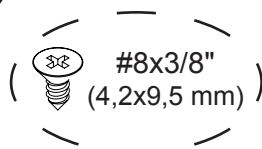

Assemble the Pocket Header (d) to the Central Vertical (a) and Rear Vertical (c).

Ensamblar el Sobrepuerta (d) en el Montantes Verticales Delantero (a) y el Montante Vertical Trasero (c).

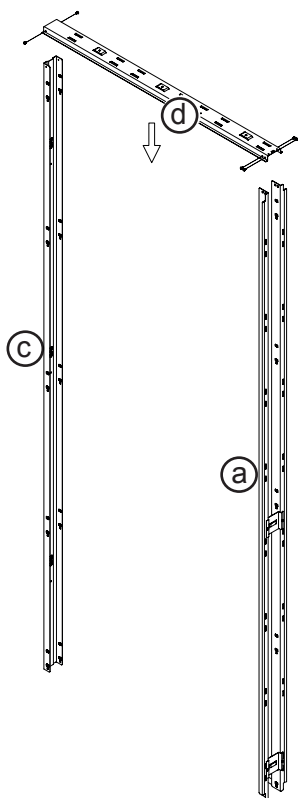


STEP

2




Assemble the Pocket Horizontals (b) securely on Central Verticals (a) and Rear Verticals (c) at the predetermined positions. Make sure they are firmly locked in placed.

Encajar los Refuerzos Horizontales (b) de forma segura en los Montantes Verticales Delantero (a) y el Montante Vertical Trasero (c) en las posiciones predeterminadas. Asegúrese de que estén firmemente bloqueados en su lugar.

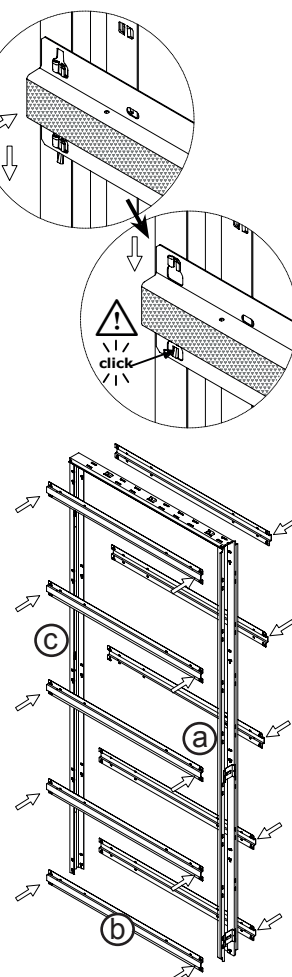


STEP

3

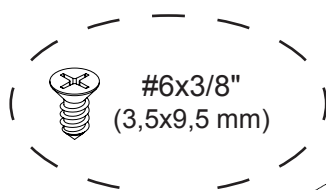

Fix the bracket (i) at the bottom of the Central Verticals with screws.

Fijar el Soporte (i) en la parte inferior de los Montantes Verticales Delantero con tornillos.

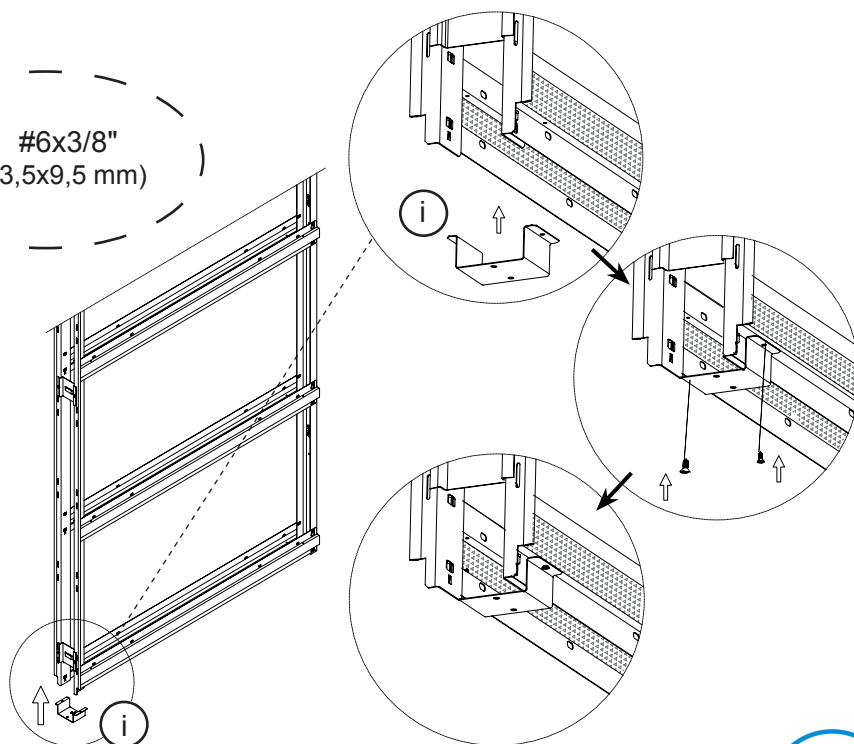


STEP

4




Insert the Top Beam with Track (e) into the Pocket Header (d) until it clicks into place and fix the Top Beam with Track (e) to the Pocket Header (d) using the screws.

Introducir la Guía Completa de Riel (e) en el Sobrepuerta (d) y empujar hasta el "click" y atornillar la Guía Completa de Riel (e) desde arriba al Sobrepuerta (d) con los tornillos.

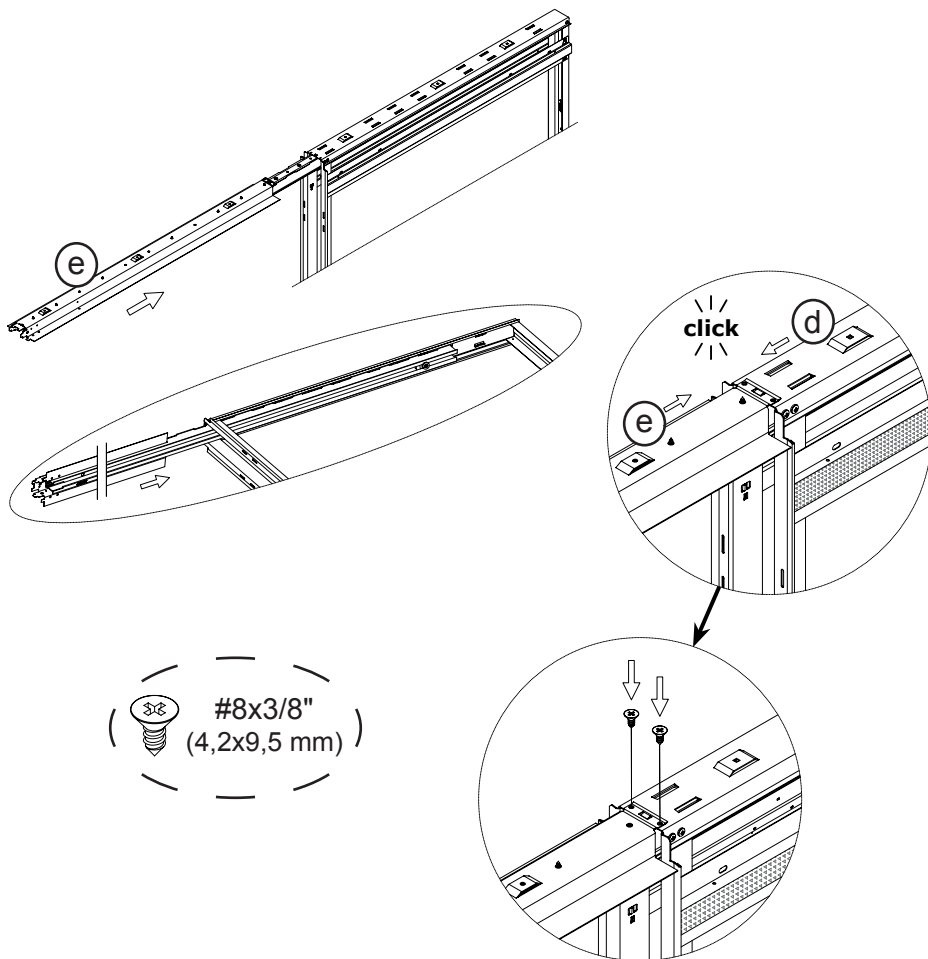


STEP

5

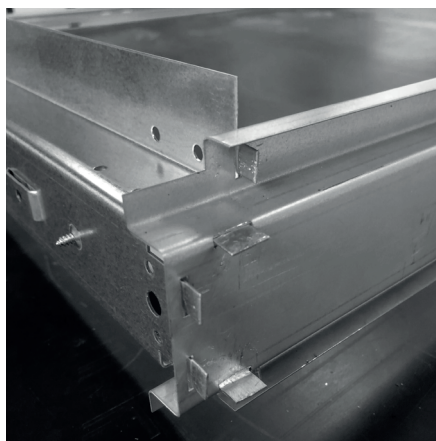


Insert the metal tongues at the Top Beam with Track (e) into the slots at the top of the Metal Door Post (f).

Ensamblar el Montante de Tope (f) al riel introduciendo las lenguetas de la Guía Completa de Riel (e).

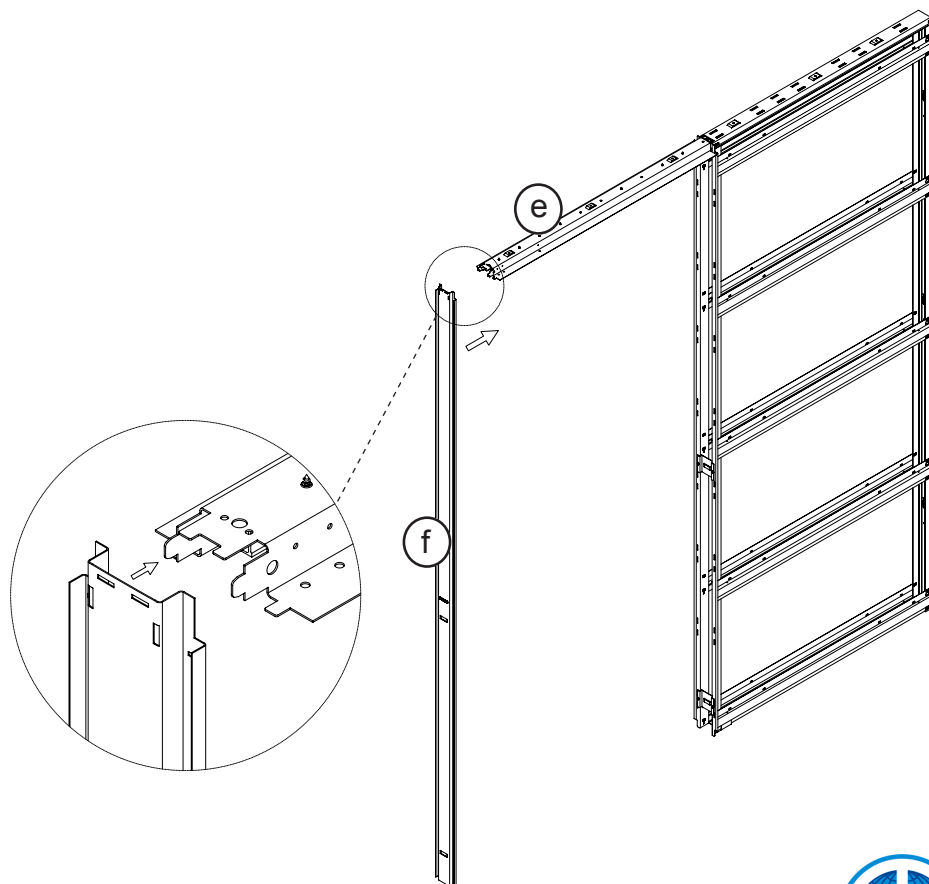




STEP

6

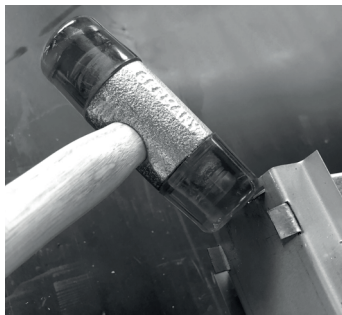


Using a hammer bend the metal tongues at the top (e) of the Metal Door Post (f).

Doblar las lenguetas de la Guía (e) al Montante de Tope (f) con un martillo.

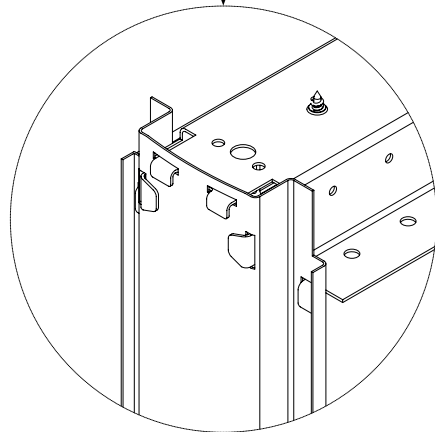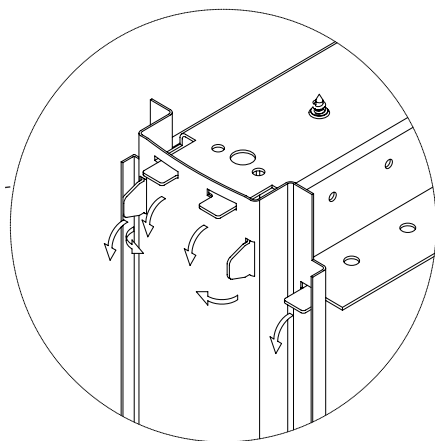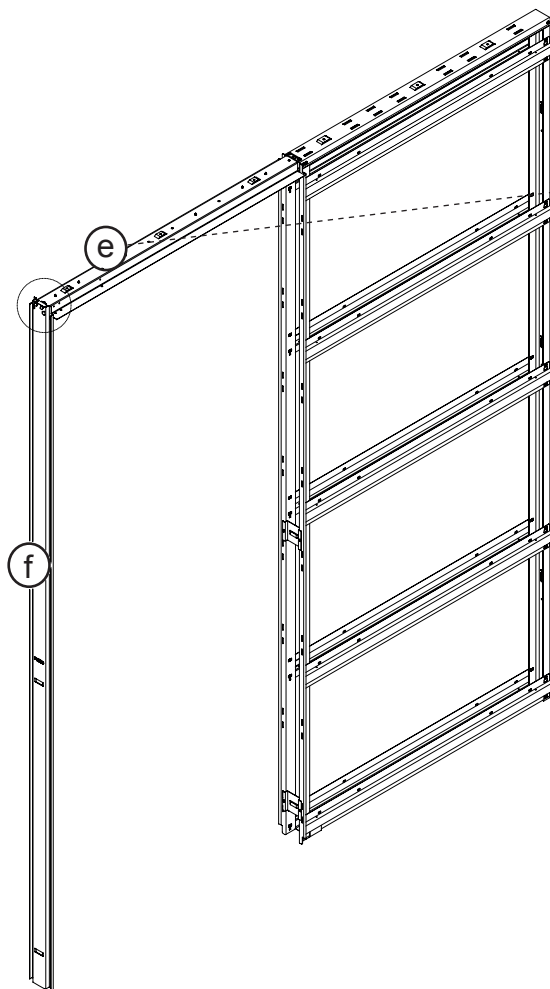




STEP

7

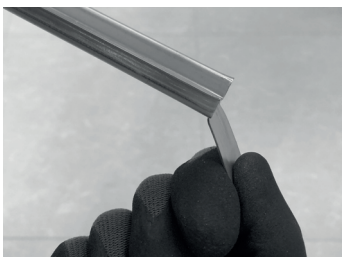

*For assembly purposes only.
Remove prior installation.














**Solo para fines de montaje.
Eliminar antes de la instalación.*

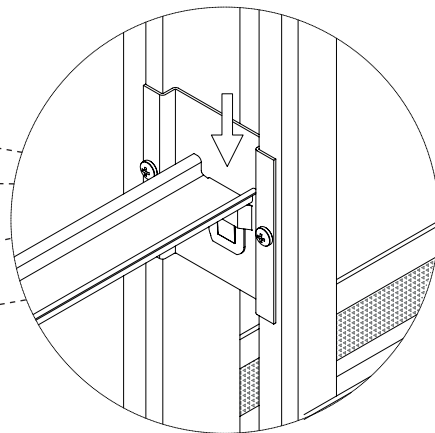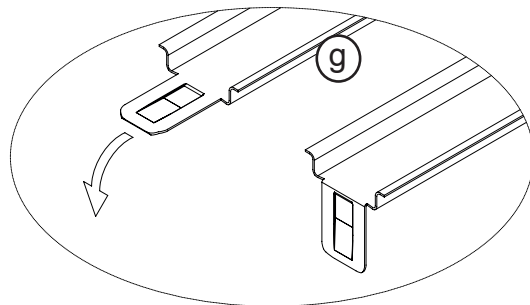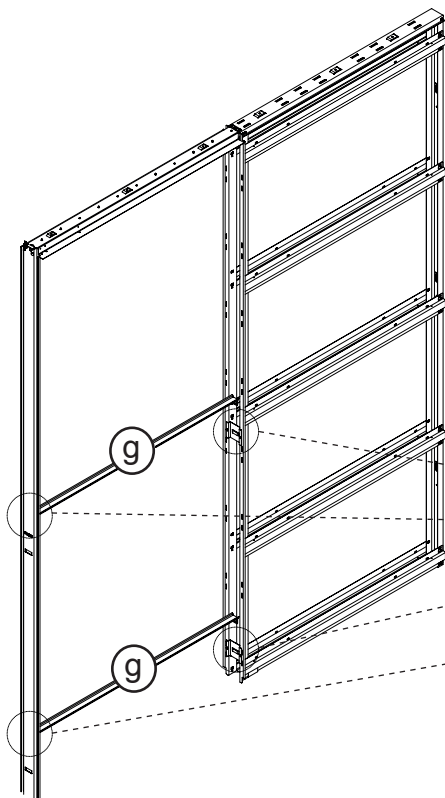

Bend the ends of the Bracers (g) backwards through 90 degrees and locate in the positions on Central Vertical (a) and Metal Door Post (f).

STEP

8

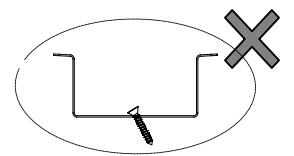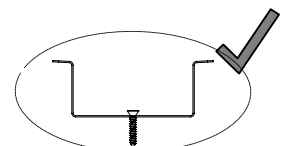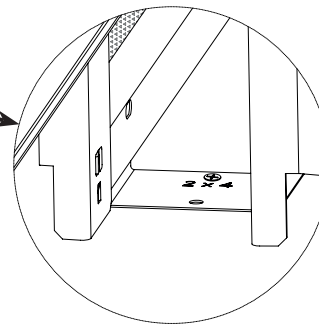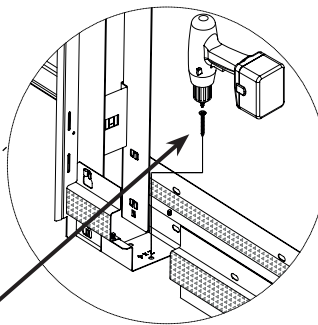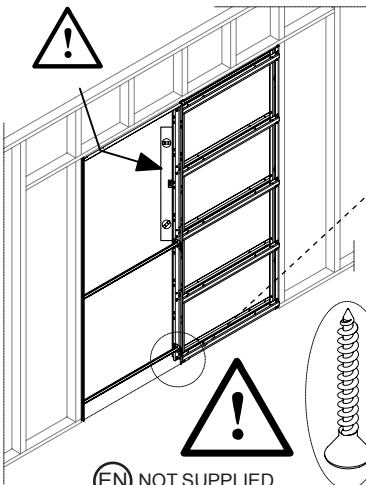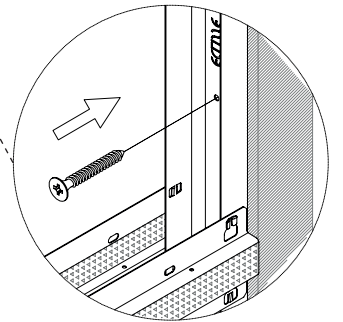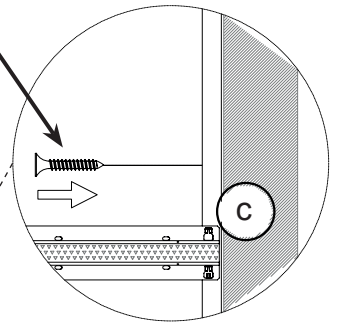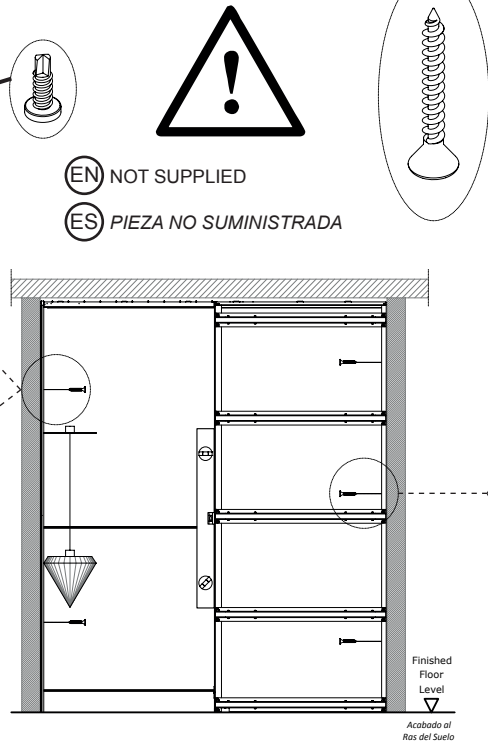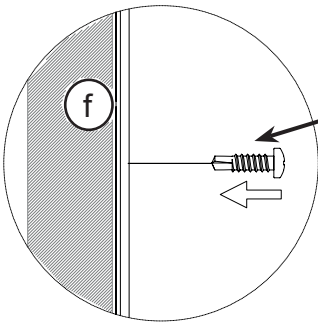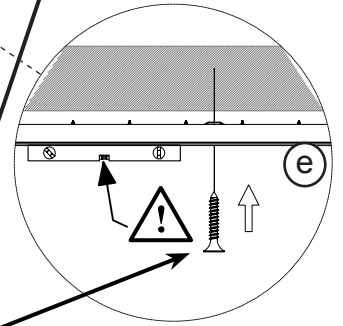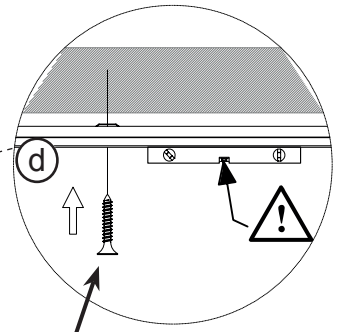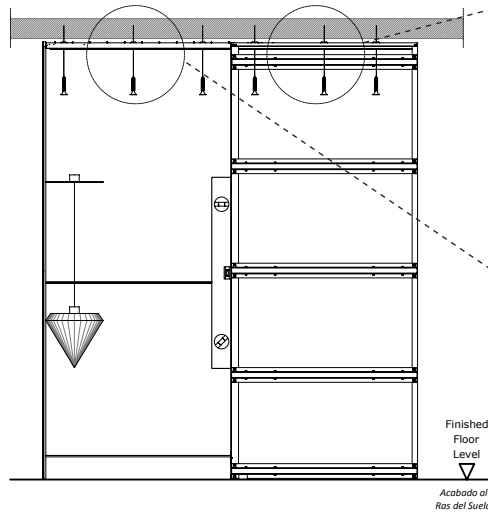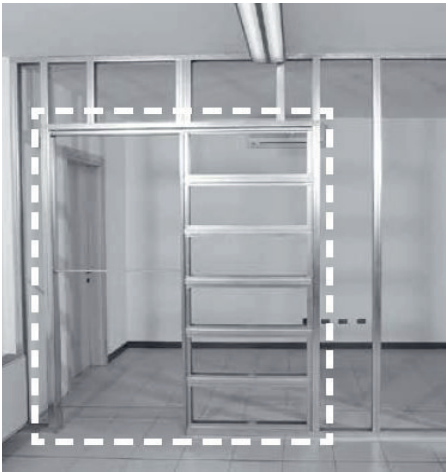


(EN) NOT SUPPLIED
(ES) PIEZA NO SUMINISTRADA

Helpful Installation Tip: Install at the finished floor level.




STEP



9

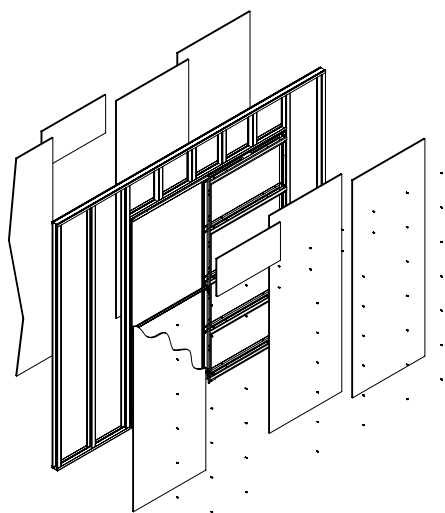

DRYWALL LAYERS:
PLACAS DE CARTON YESO:


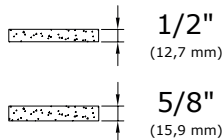


#7 x 1"
(3,9x25 mm)

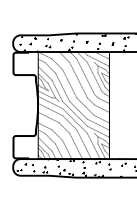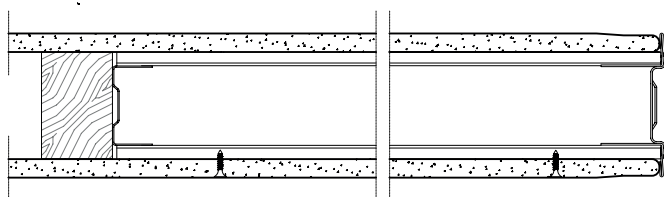

DRYWALL LAYERS


PLACAS DE CARTON YESO

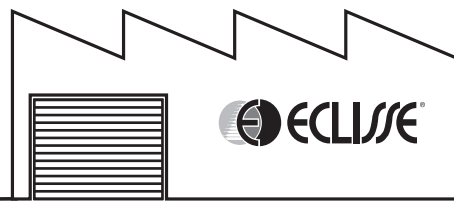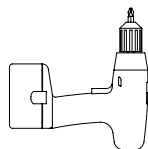

603024808

(US) EURO ARCHITECTURAL, LLC - Tel.: 001 800 614 1474 - info@euro-arch.com - www.eclisse.us

www.eclisse.us

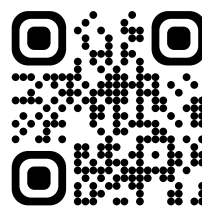

**TRADEMARK
HARDWARE**
WORLD OF QUALITY HARDWARE
WWW.TMHARDWARE.COM