



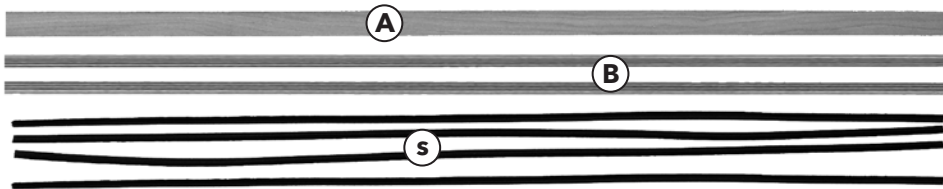


JAMB KIT INSTALLATION - DOUBLE DOOR

KIT CONTENTS

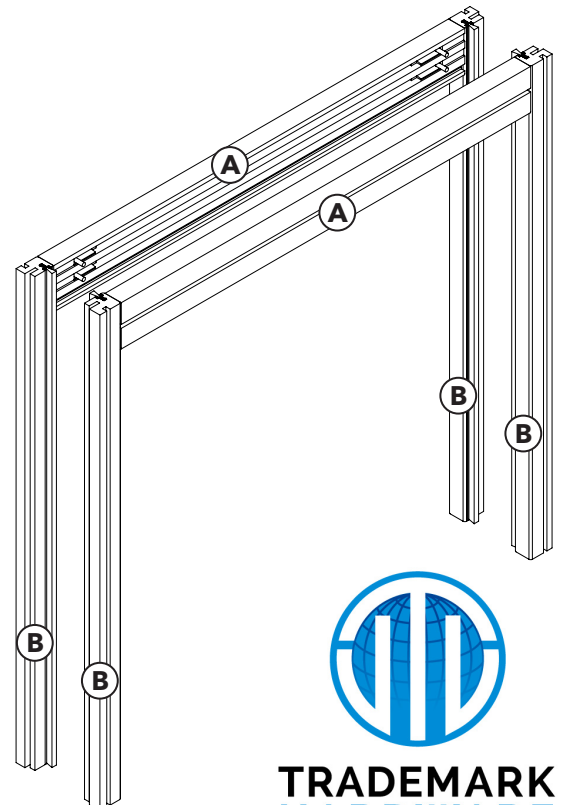

- (A) Jamb Headers
- (B) Split Jambs (4 pcs)
- (e) Metal Bracket (1 pcs)
- (f) Bolt (8 pcs)
- (s) Brushes (4 pcs)

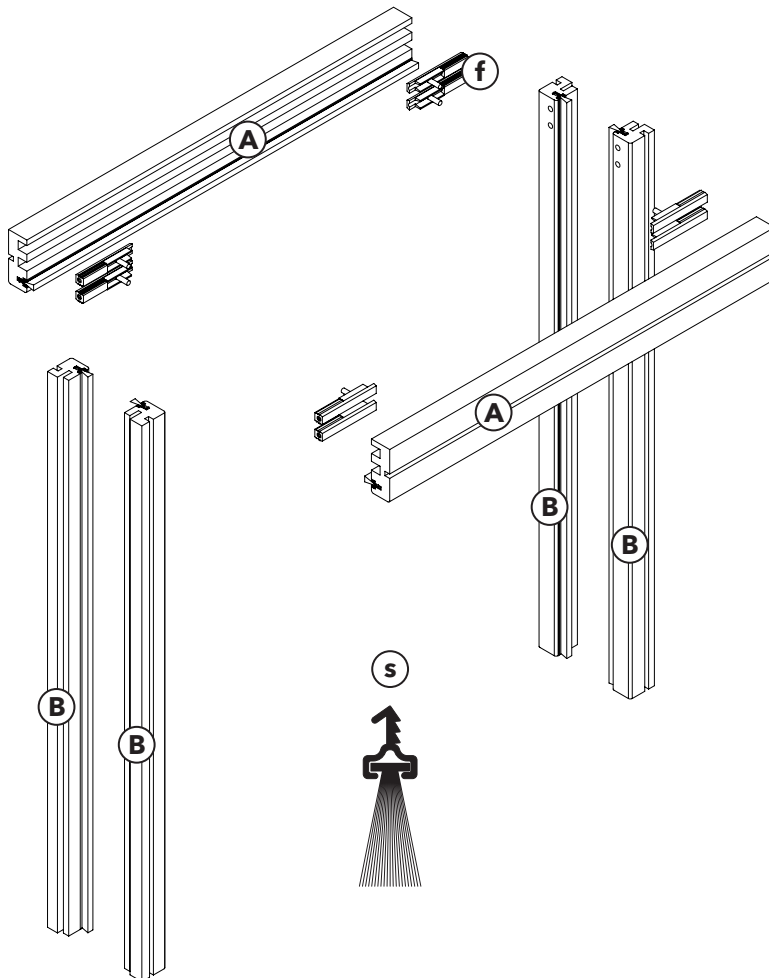


Note: Brushes (s) not to be used if you're using 1-3/4" thick door.




**TRADEMARK
HARDWARE**
WORLD OF QUALITY HARDWARE
WWW.TMHARDWARE.COM

JAMB KIT INSTALLATION - DOUBLE DOOR

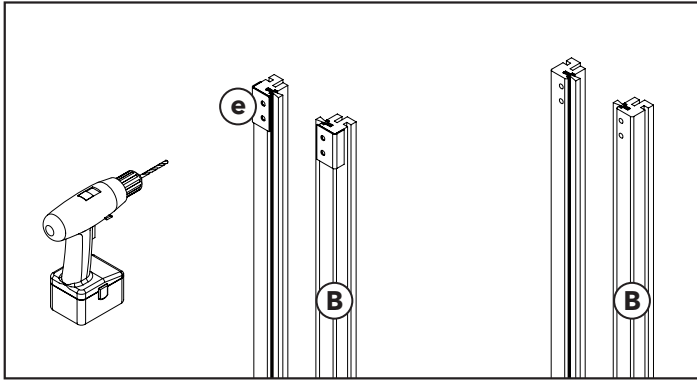


Step 1

Position the metal brackets (**e**) as indicated on the drawing and drill the split jamb (**B**). Use a 4 mm bit.

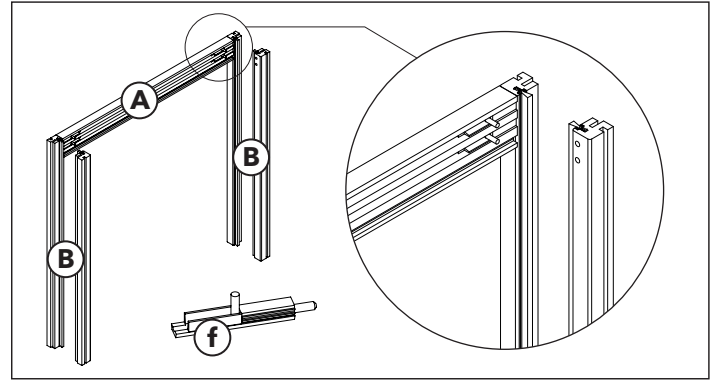

Step 4


Attach the jamb header (**A**) with bolts (**f**) to split jambs (**B**) using the metal brackets (**e**).

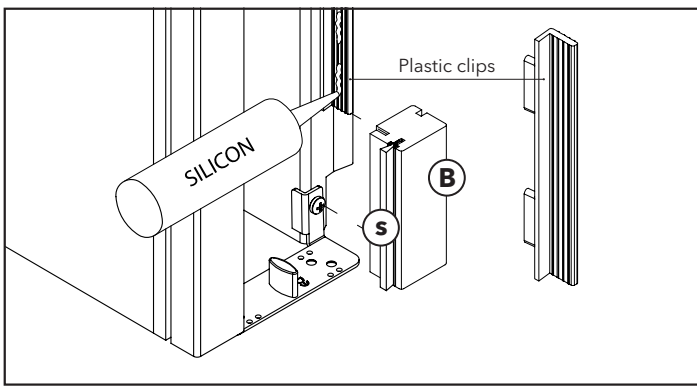

Step 2

Cut the split jambs (**B**) to the size of the system purchased.


Note: This should only be done once finished flooring has been installed.

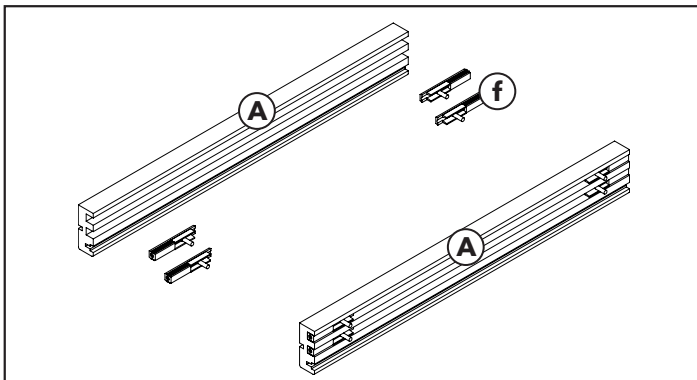

Step 3

Cut the jamb headers (**A**) into two lengths equal to the space remaining between the split jambs (**B**).

Insert the bolts (**f**) (4 pcs on each header piece).

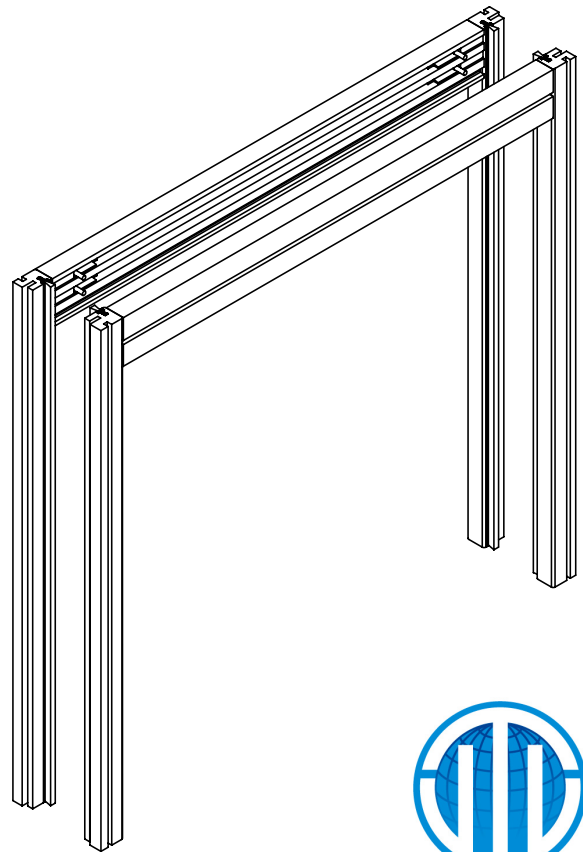

**TRADEMARK
HARDWARE**
WORLD OF QUALITY HARDWARE
WWW.TMHARDWARE.COM



EURO ARCHITECTURAL, LLC
700 West 190TH ST. GARDENA, CA 90248
info@euro-arch.com - www.eclisse.us
Toll Free: 1 800 614 1474