



**TRADEMARK
HARDWARE**

WORLD OF QUALITY HARDWARE

INSTALLATION INSTRUCTIONS


TOOLS REQUIRED: Drill, 1" spade bit, chisel and Phillips screwdriver.

FOR DOOR INSTALLATION

1. Position pull approximately 1" from edge of door (facing in) and approximately $\frac{1}{2}$ way up from floor. Mark top of pull with tape.
2. Measure down from tape $\frac{7}{8}"$ and $1 \frac{7}{16}"$ on vertical line and mark hole centers.
3. Drill two 1" holes $\frac{1}{2}"$ deep. Chisel remaining wood between holes to same depth.
4. Position and secure.

FOR WINDOW INSTALLATION -

1. Position pulls equally spaced on lower rail of bottom window and follow same instructions, except install horizontally.

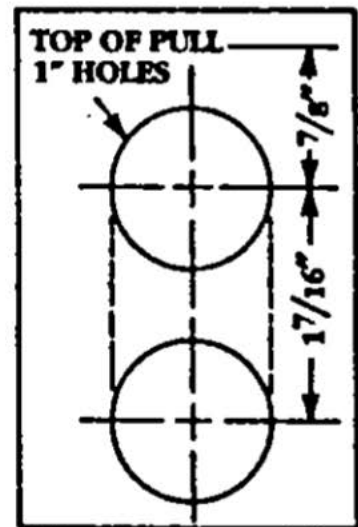

Ives 22

