



**TRADEMARK  
HARDWARE**

WORLD OF QUALITY HARDWARE

## INSTALLATION INSTRUCTIONS


**TOOLS REQUIRED:** Drill,  $\frac{3}{4}$ " spade bit and pencil.

**FOR DOOR APPLICATION (A):**

1. Position, mark, bore  $\frac{3}{4}$ " dia.  $\times$   $\frac{3}{8}$ " deep hole, and insert pull.

**FOR WINDOW APPLICATION (B):**

1. Center pulls (two recommended) approximately  $1\frac{3}{4}$ " apart on lower rail of bottom window. Mark, bore holes  $\frac{3}{4}$ " dia.  $\times$   $\frac{3}{8}$ " deep and insert pulls.

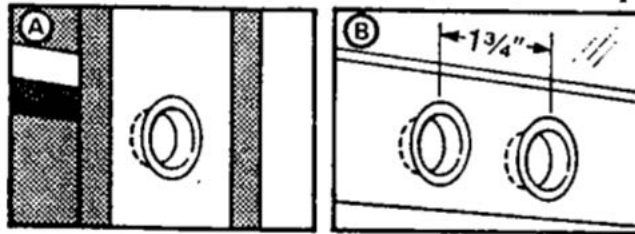

# Ives 218

