


## 1. Thread Drive Bar Cylinder


Use Cylinder Key to thread Drive Bar Cylinder clockwise on interior side of door.

Note: Drive Bar Socket must be in the 12 o' clock position as shown.

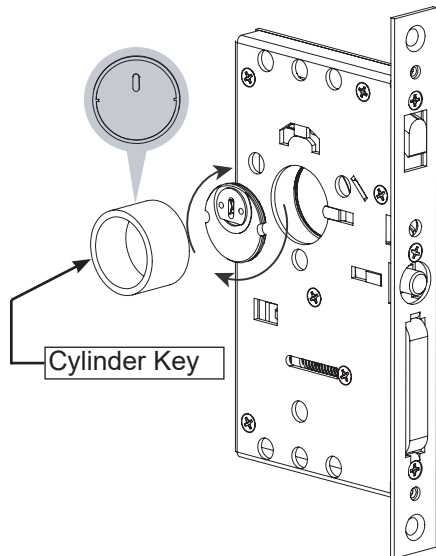


Note: Notches on cylinder must be parallel with the horizontal plane when fully screwed into lock body.

## 2. Install Lock Body

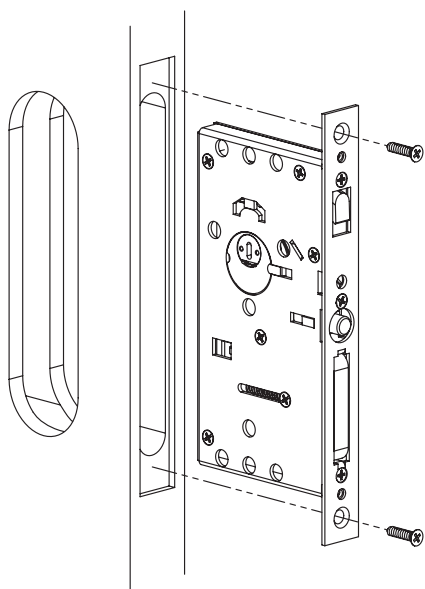

See template for door prep specifications

## 3. Install Outside Plate and Thread Key Cylinder

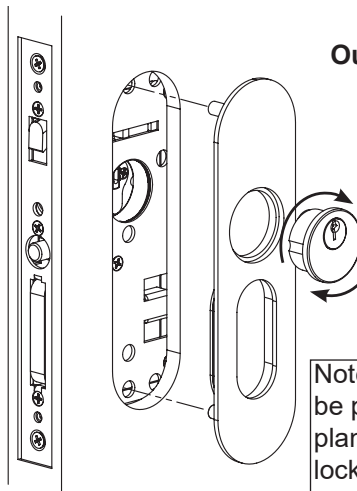

Outside


TRIMS VARY  
NARROW OVAL SHOWN

Install Key Cylinder by threading it clockwise onto lock body plate.


Note: Key Cylinder notches must be parallel with the horizontal plane when fully screwed into lock body.

## 4. Tighten Key Cylinder


Tighten locking screw to engage notches on cylinder

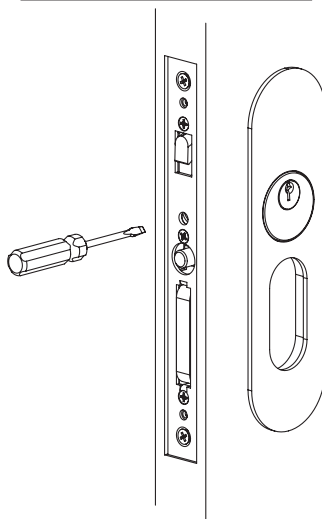


## 5. Mount Inside Plate

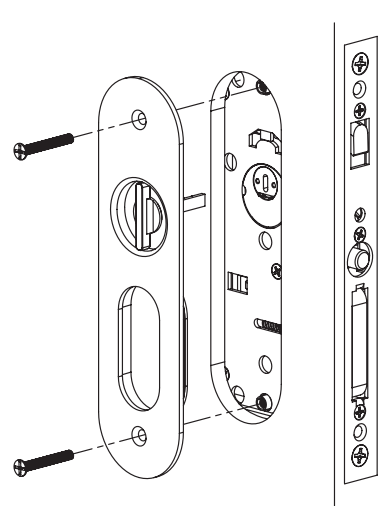

## 6. Install Trim Plate

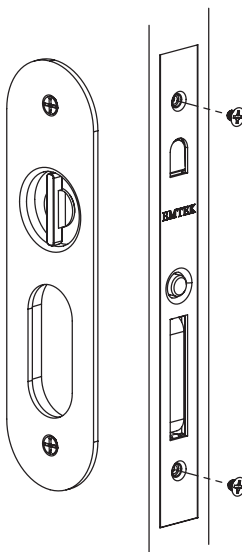

## Door Jamb Prep.

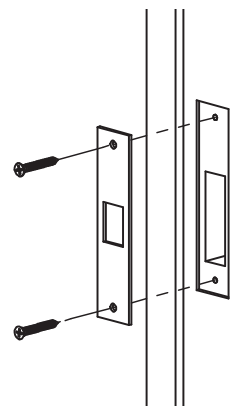

See template for door jamb prep specifications