
PFT-34 Transom Patch with Pivot Glass Fabrication Sketch

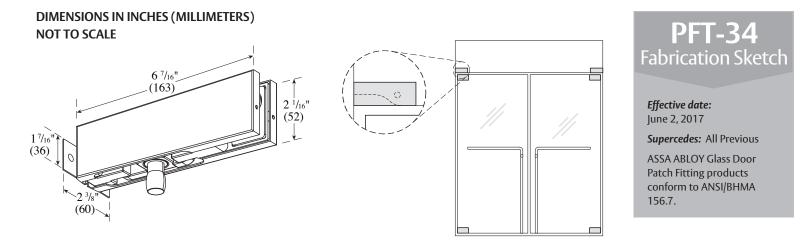

ASSA ABLOY


The global leader in door opening solutions

For installation instructions please visit our website www.assaabloyglass.us



USE FABRICATION SKETCH TO DRILL AND CUT GLASS.

Cut away glass (shaded area) along dotted line to match sketch dimensions. Drill ¹³/₁₆" (20 mm) diameter hole.

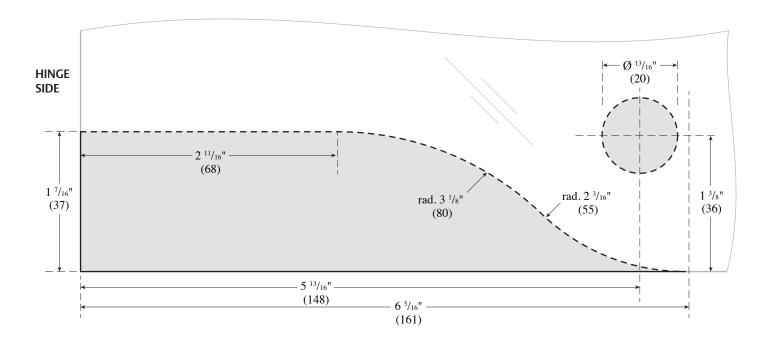

Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.







