
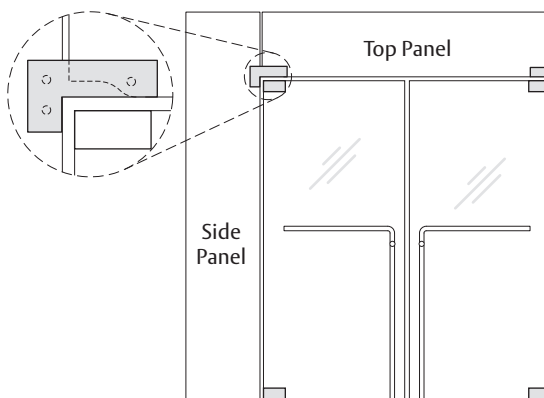


PFT-40 Sidelite Transom Patch Fitting Glass Fabrication Sketch

For installation instructions please visit our website www.assaabloyglass.us

DIMENSIONS IN INCHES (MILLIMETERS) NOT TO SCALE

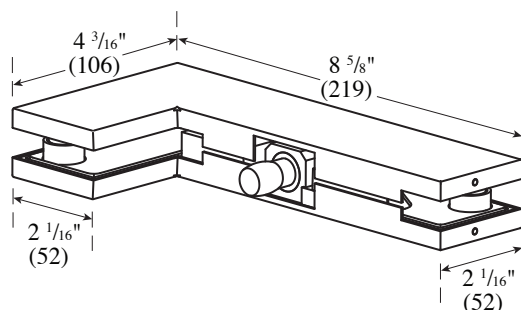


PFT-40 Fabrication Sketch

Effective date:
June 2, 2017

Supersedes: All Previous
ASSA ABLOY Glass Door
Patch Fitting products
conform to ANSI/BHMA
156.7.

USE FABRICATION SKETCH TO DRILL AND CUT GLASS.

Cut away glass (shaded area) along dotted line to match sketch dimensions. Drill 13/16" (20 mm) diameter holes.

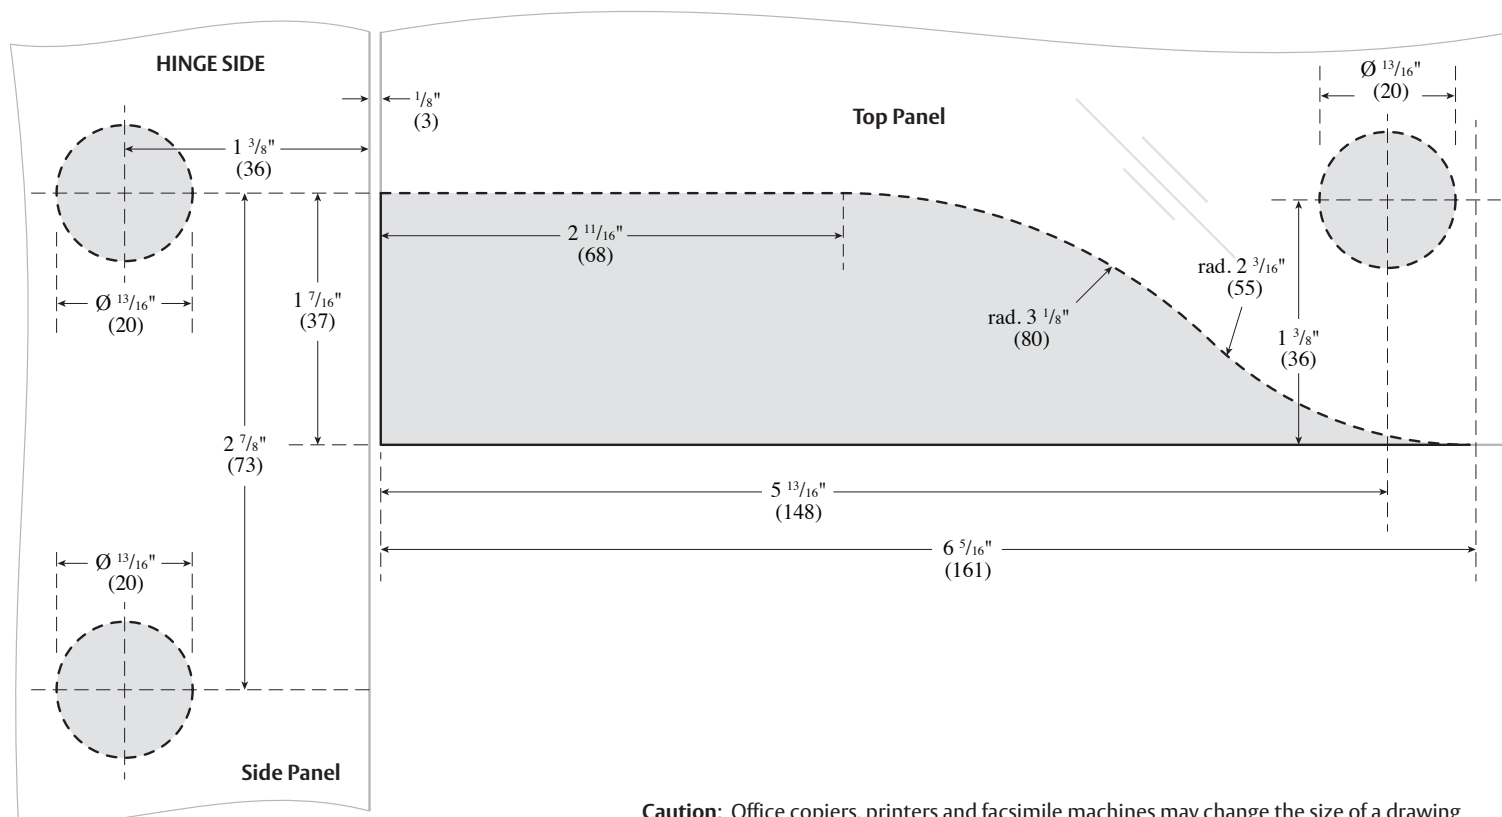

Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.