
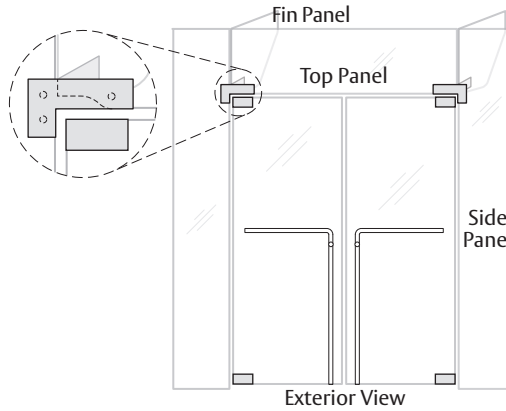


PFT-41 RH & LH Sidelite Transom Patch Fitting w/Fin Glass Fabrication Sketch

For installation instructions please visit our website www.assaabloyglass.us

**DIMENSIONS IN INCHES (MILLIMETERS)
NOT TO SCALE**

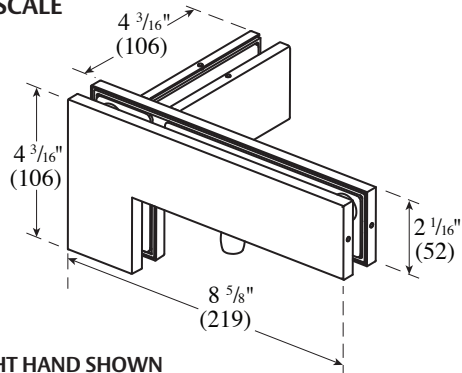

PFT-41 Fabrication Sketch



Effective date:
June 2, 2017

Supersedes: All Previous
ASSA ABLOY Glass Door
Patch Fitting products
conform to ANSI/BHMA
156.7.

USE FABRICATION SKETCH TO DRILL AND CUT GLASS.

Cut away glass (shaded area) along dotted line to match sketch dimensions. Drill five $\frac{13}{16}$ " (20 mm) diameter holes.

**Sketch shown for RIGHT HAND. Flip
horizontal for LEFT HAND preparation.**

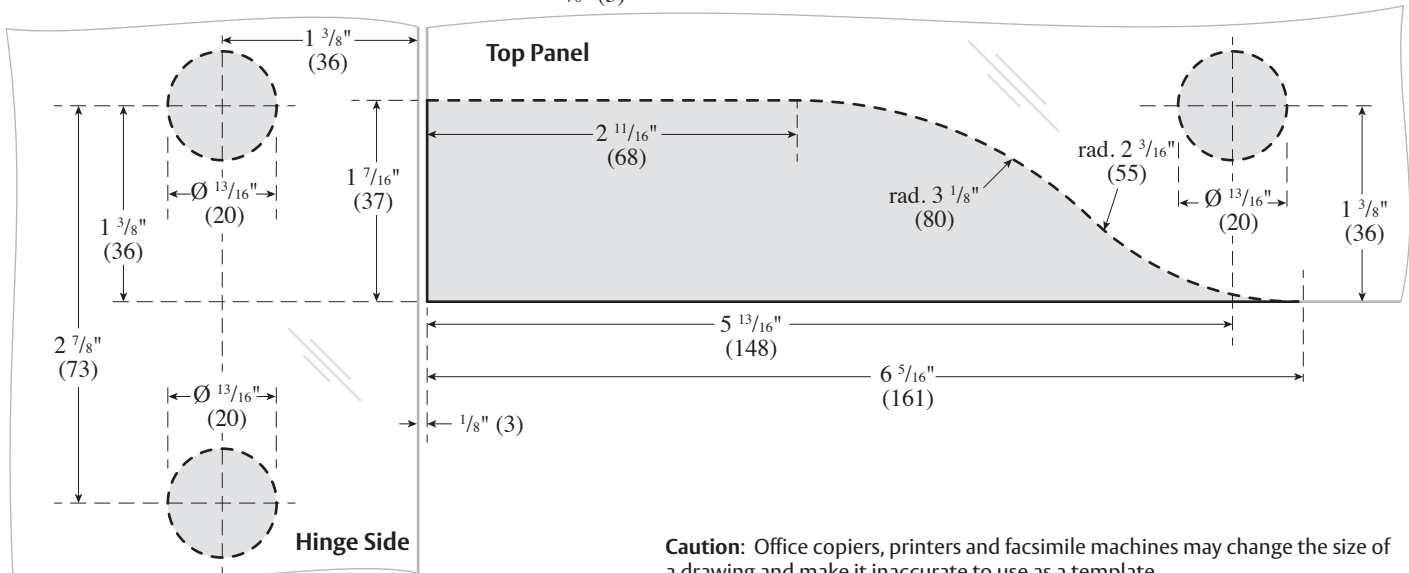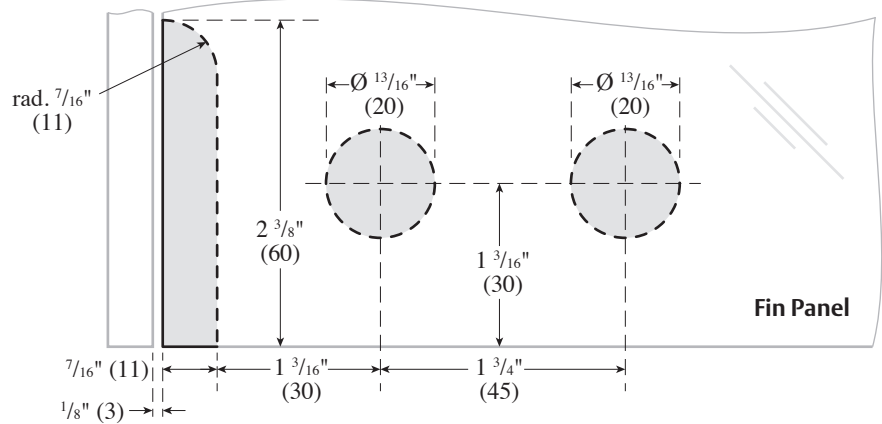

Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.



www.tmhardware.com



845-388-1300



845-388-1388



sales@tmhardware.com