



PFT-70 Transom Stop Patch Glass Fabrication Sketch

ASSA ABLOY

The global leader in
door opening solutions

For installation instructions please visit our website www.assaabloyglass.us

DIMENSIONS IN INCHES (MILLIMETERS)
NOT TO SCALE

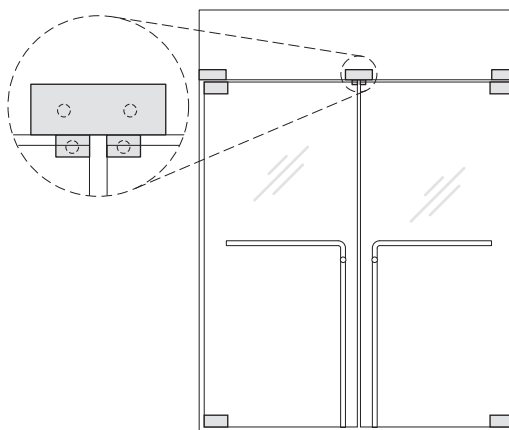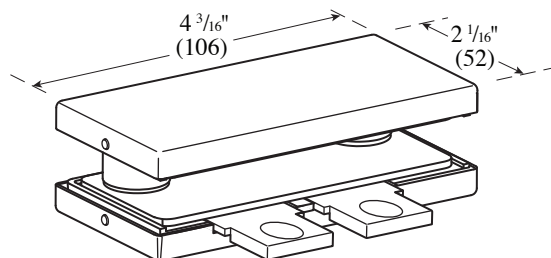


PFT-70 Fabrication Sketch

Effective date:
June 2, 2017

Supersedes: All Previous
ASSA ABLOY Glass Door
Patch Fitting products
conform to ANSI/BHMA
156.7.

USE FABRICATION SKETCH TO DRILL GLASS.

Drill two $\frac{13}{16}$ " (20 mm) diameter holes.

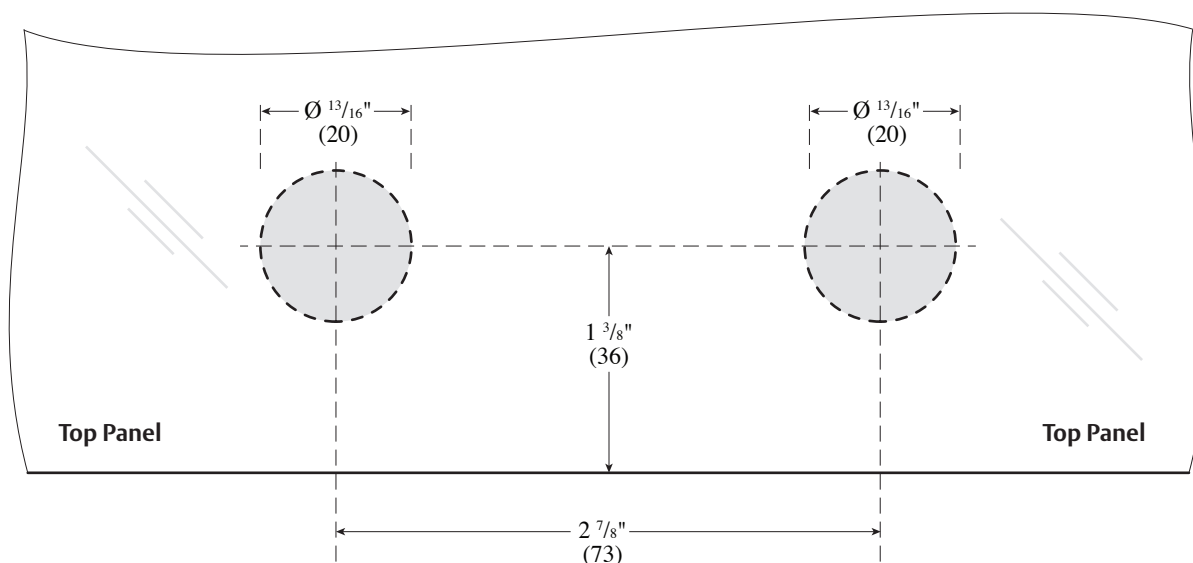

Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.