
PFS-80 Sidelite Connector Patch Installation Instructions



ASSA ABLOY


The global leader in door opening solutions

For Installation Assistance, Call 855.594.6989 • www.assaabloyglass.us

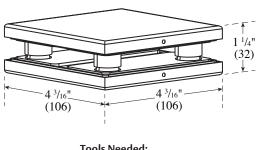


Tools Needed: Torque Wrench and Bit 5mm Hex Wrench

NOT TO SCALE

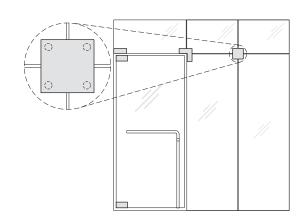

Parts Included

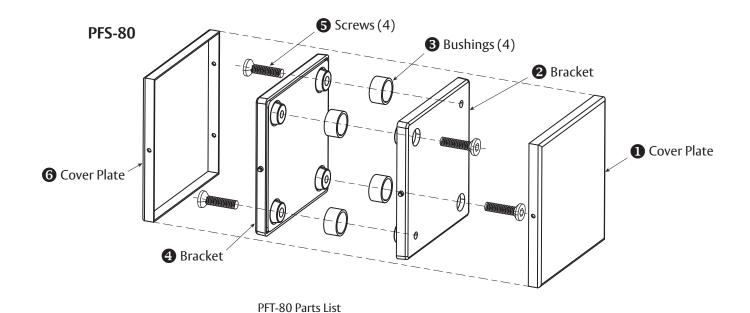

Cover Plate
Bracket
Bushings (4)
Bracket

Cover Plate


1 ¹/₁₆" - M6 x 27 Screws (4)

1. Prepare the Glass

USE FABRICATION SKETCH TO DRILL AND CUT GLASS.

• Drill four $^{13}/_{16}$ " (20 mm) diameter holes.

NOT TO SCALE DIMENSIONS IN INCHES (MILLIMETERS)

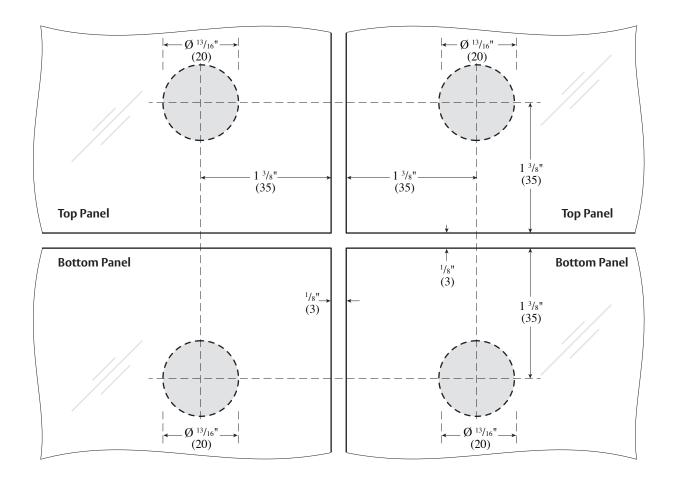


Caution: Office copiers, printers and facsimile machines may change the size of a drawing and make it inaccurate to use as a template.

2. Fasten Support Brackets


Make sure the surface is thoroughly cleaned and remove all screws.

- Insert the four Bushings 3 into prepped 13/16" (20 mm) diameter holes.
- Place Bracket 2 into prepped area of glass door, join Bracket 4 from the other side. Insert two Screws 5 into Bracket 4 and tighten with 5 mm hex wrench to hold Brackets together. Do not tighten completely to allow for adjustments throughout installation.
- Insert two remaining Screws 5 into Bracket 2, align fitting to desired position. Torque both Screws to 12 nm. Then tighten Bracket 4 Screws to 12 nm.

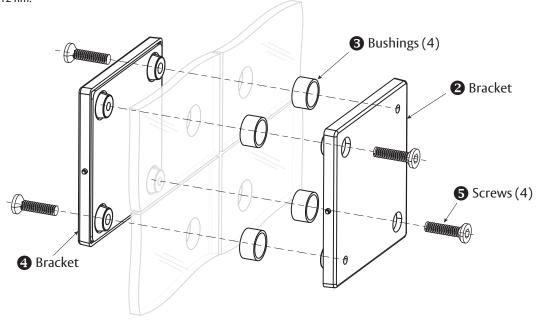

3. Adhere Cover Plates

- Remove adhesive strip paper on both Brackets (2, 4) to adhere Cover Plates 0 & 6.
- Hook Cover Plates **①** & **6** over hinge side locking pin.
- Push in spring loaded locking pin on opposite side of Bracket.
- Snap on Cover Plates.

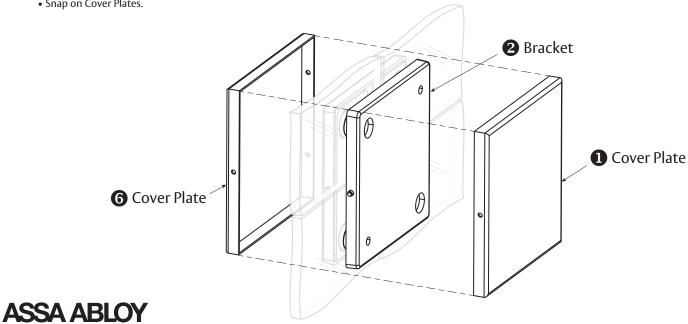

ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience



www.assaabloyglass.us

USA: ASSA ABLOY Glass Solutions Rockwood, PA 15557 Phone: 855.594.6989