



## Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. For door reinforcement see template 7400-0000.
6. Prepare mounting holes when installing trim.
7. Provide adequate internal support to prevent door deformation after trim is bolted to the device.
8. Dimensions given about a centerline are symmetrical.
9. Unspecified radii 1/8 (3) maximum.

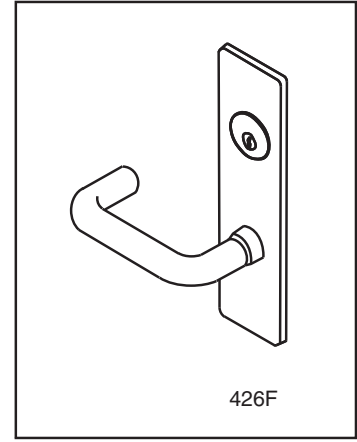

Note: Lever design prefix does not affect door prep.

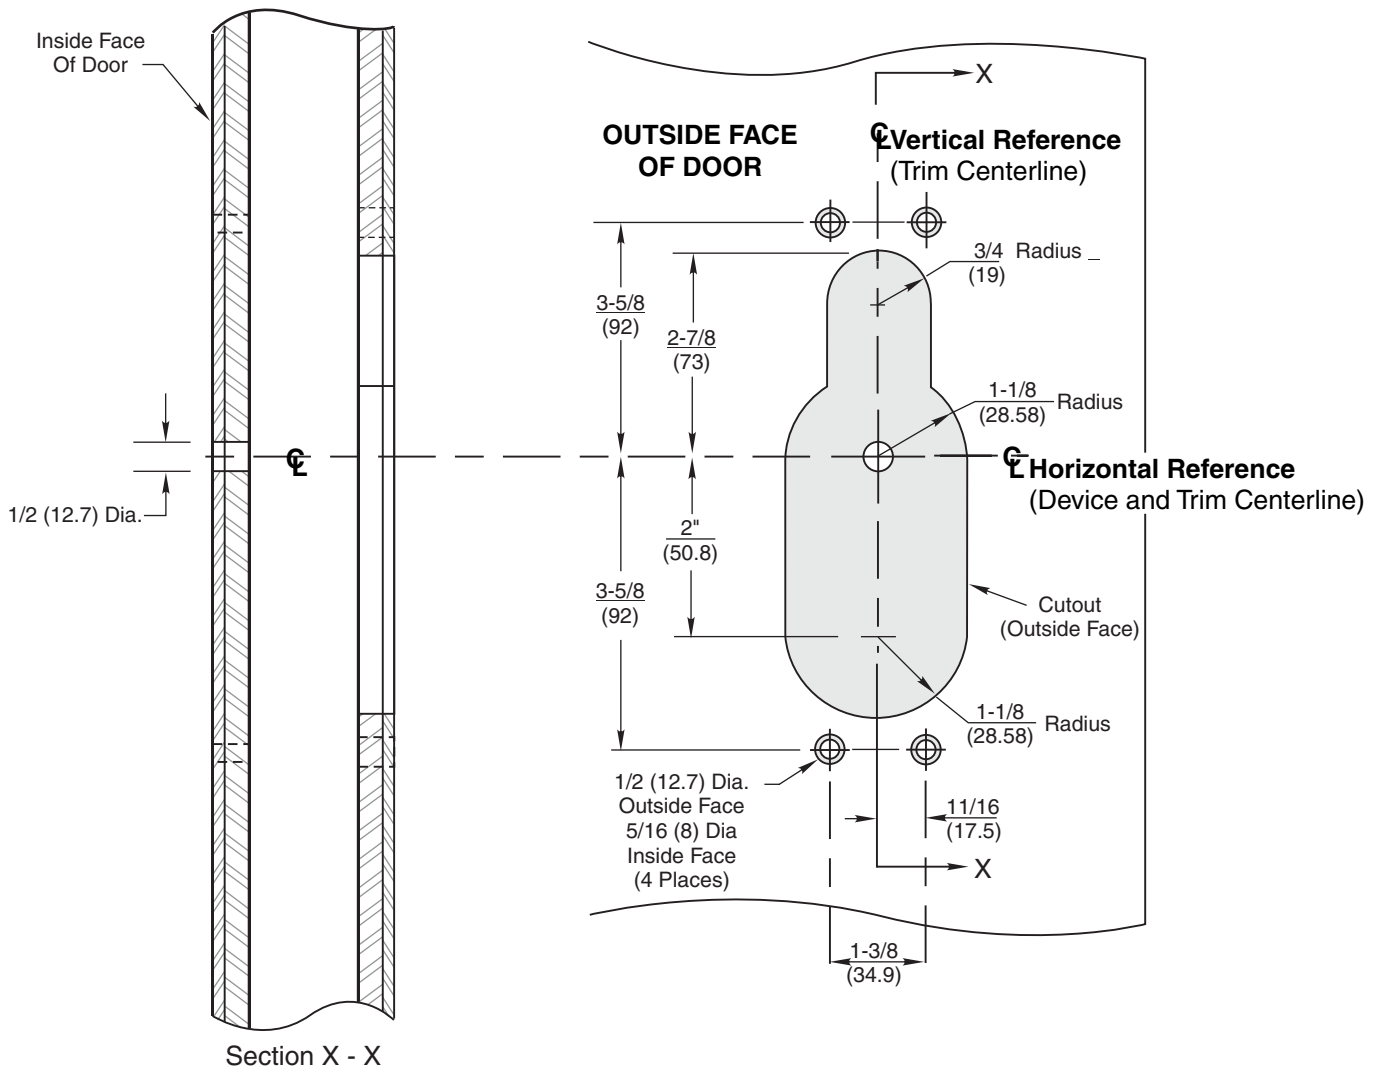

**426F Trim**  
**With 1800(F), 6100(F) or 6170(F) Series**  
**Rim and Vertical Rod Exit Devices**  
**Metal Door Preparation**



1-800-438-1951  
[www.yalelocks.com](http://www.yalelocks.com)

TEMPLATE NUMBER

**7400-0426**

DATE

**06-15**