



Notes:

1. This template is an addition to the device template.
Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.
8. Unspecified radii 1/8 (3) maximum.

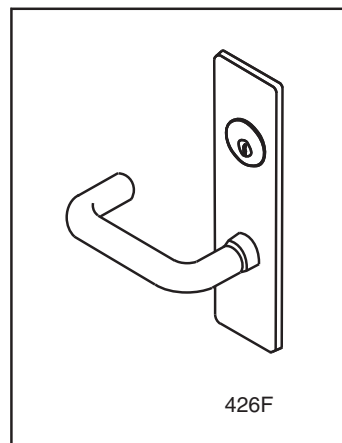

Note: Lever design prefix does not affect door prep.

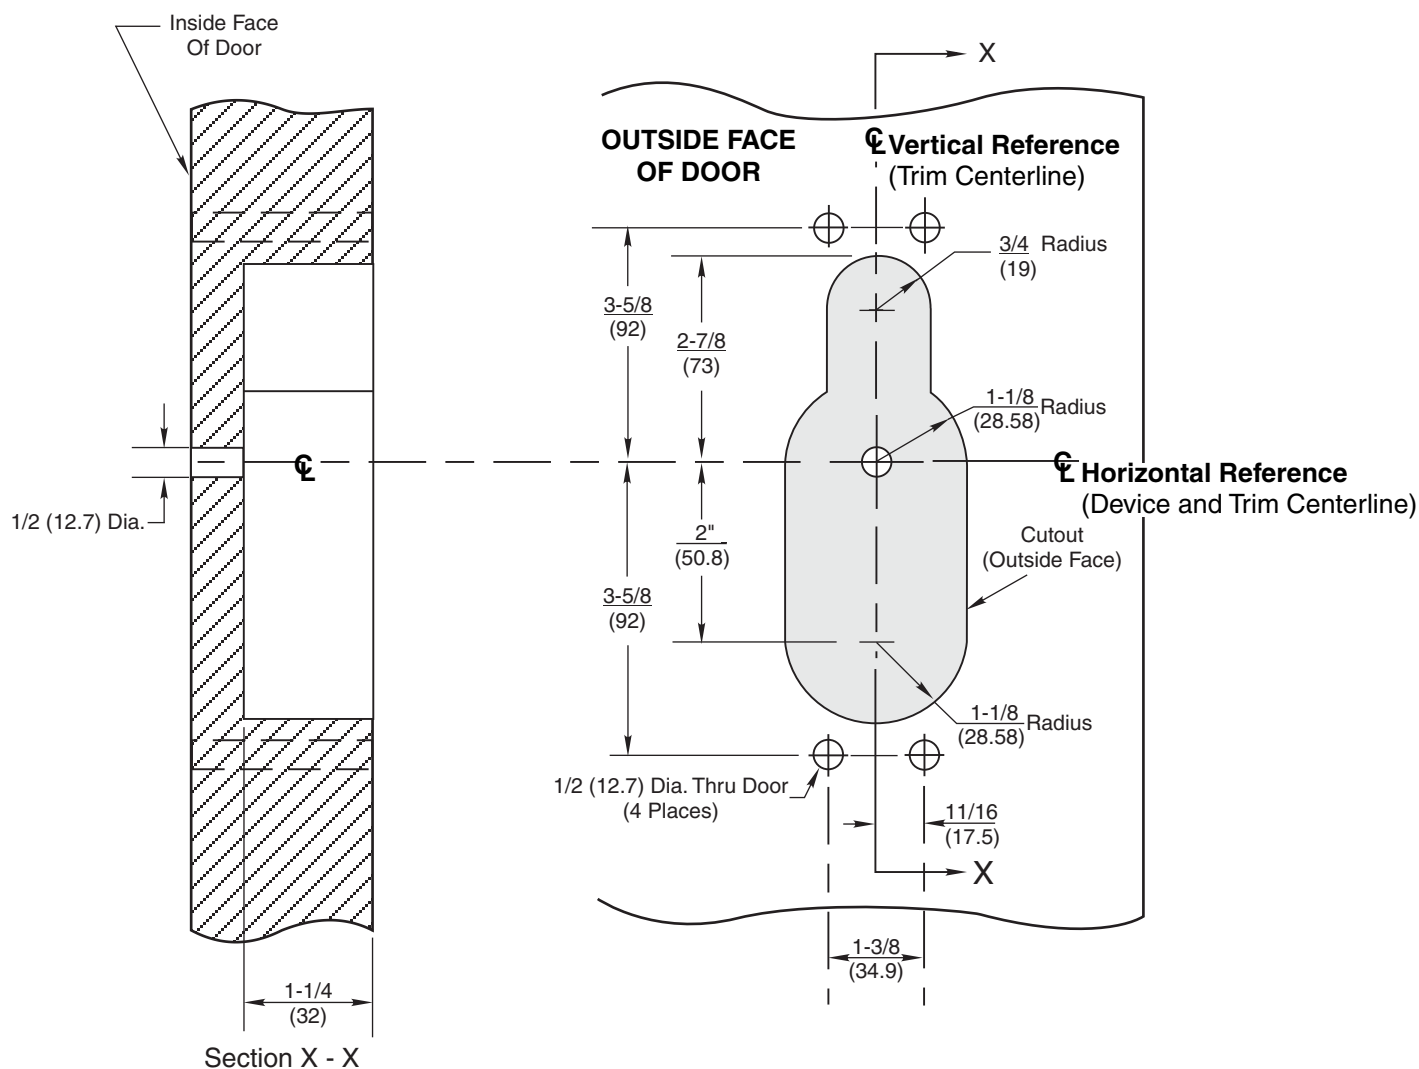

426F Trim

With 1800(F), 6100(F) or 6170(F) Series
Rim and Vertical Rod Exit Devices

Wood Door Preparation



1-800-438-1951
www.yalelocks.com

TEMPLATE NUMBER

7400-1426

DATE

06-15