



## Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Provide adequate structural support to maintain door integrity during operation.
6. Prepare mounting holes when installing trim.
7. Dimensions given about a centerline are symmetrical.
8. For dummy trim, center hole from inside face may be omitted.

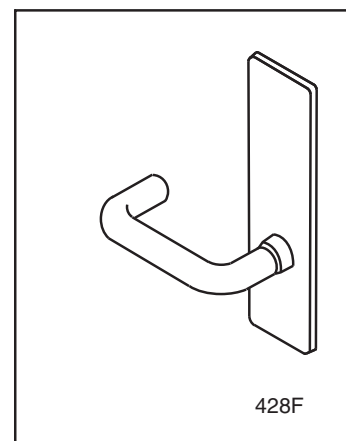

Note: Lever design prefix does not affect door prep.

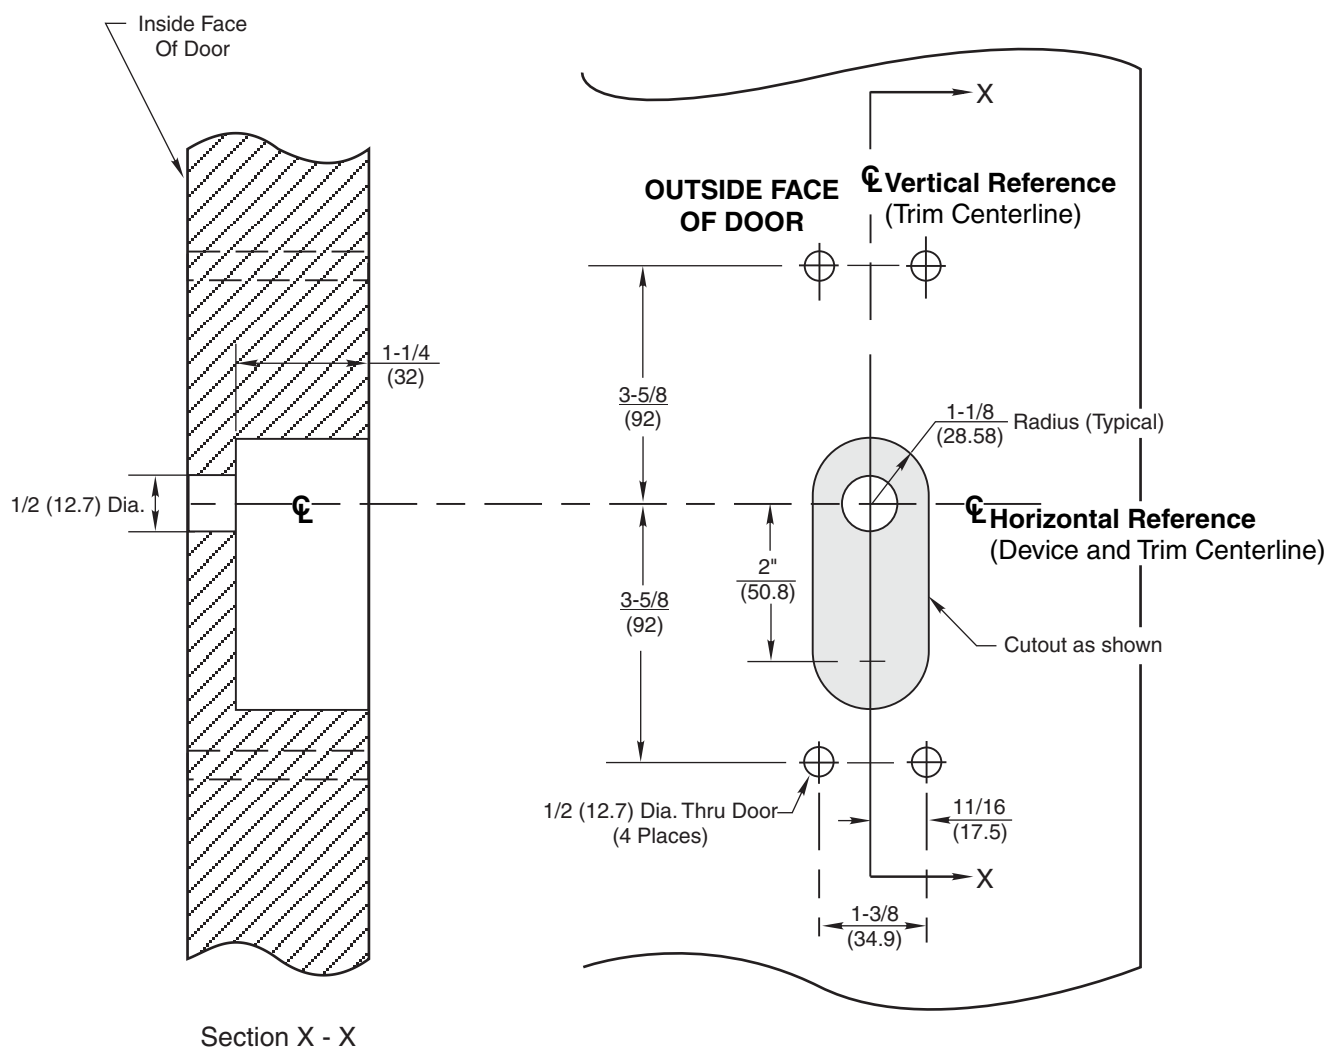

### 428F Trim With 1800(F), 6100(F) or 6170(F) Series Rim and Vertical Rod Exit Devices Wood Door Preparation



1-800-438-1951  
www.yalelocks.com

TEMPLATE NUMBER

7400-1428

DATE

06-15