



Notes:

1. This template is an addition to the device template. Locate centerlines using horizontal and vertical references on device template.
2. Do not scale drawing.
3. Dimensions are in inches (mm).
4. LHR door shown. Preparation is typical for both door hands.
5. Prepare mounting holes when installing trim.

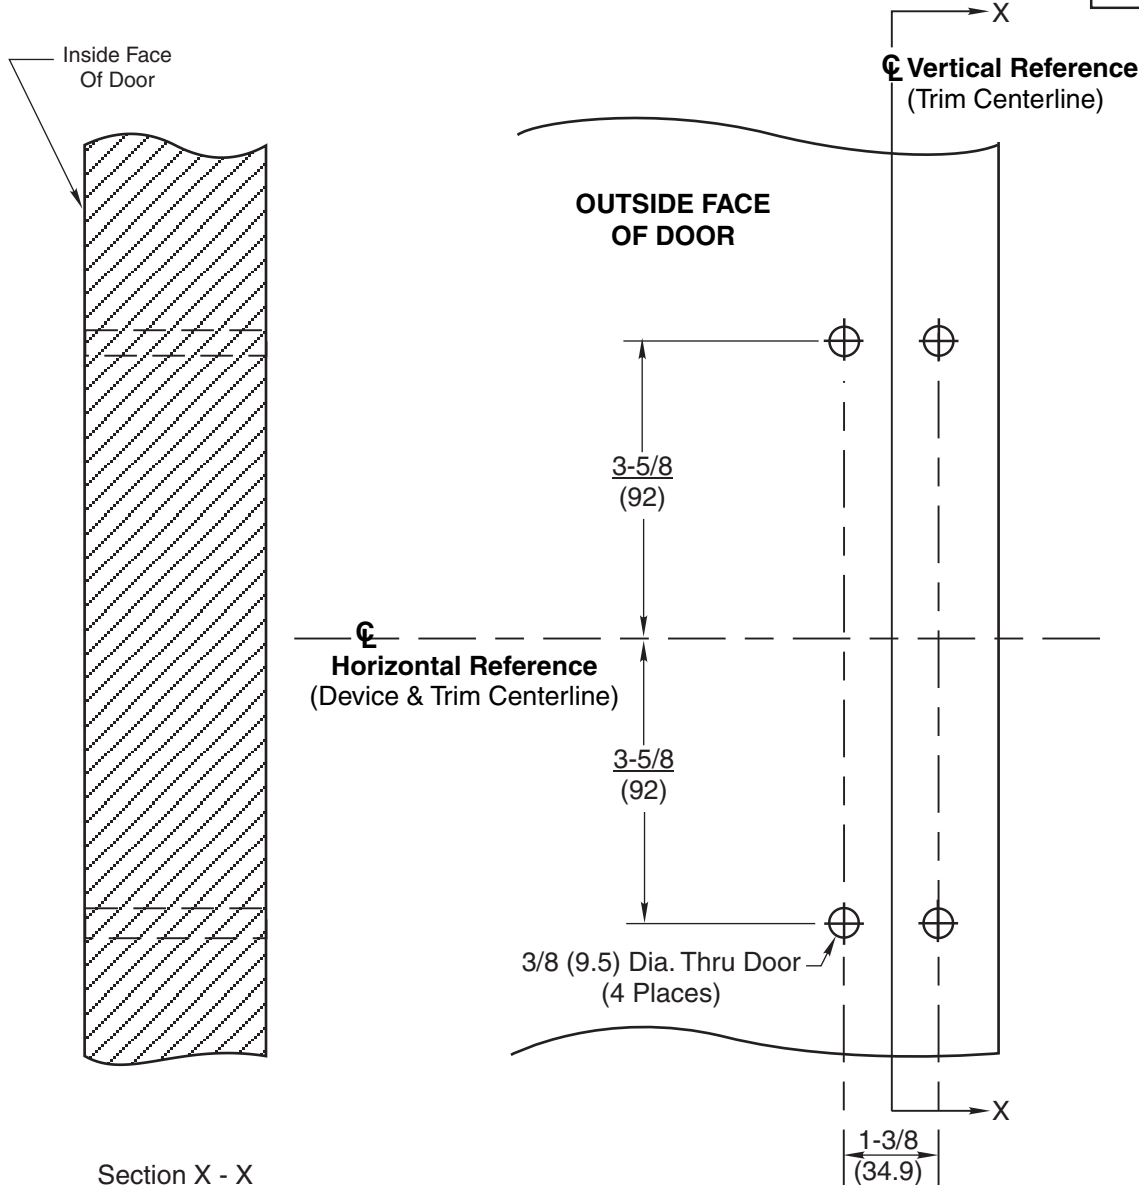

620F Trim
 With 1500(F), 2100(F), 6100(F), or 7100(F) Series
 Rim, Mortise and Vertical Rod Exit Devices
Wood Door Preparation

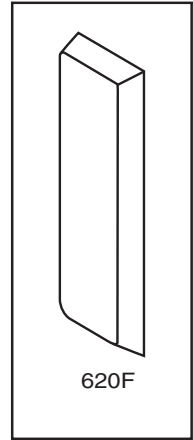

1-800-438-1951
www.yalelocks.com

TEMPLATE NUMBER

7400-1620

DATE

05-15