
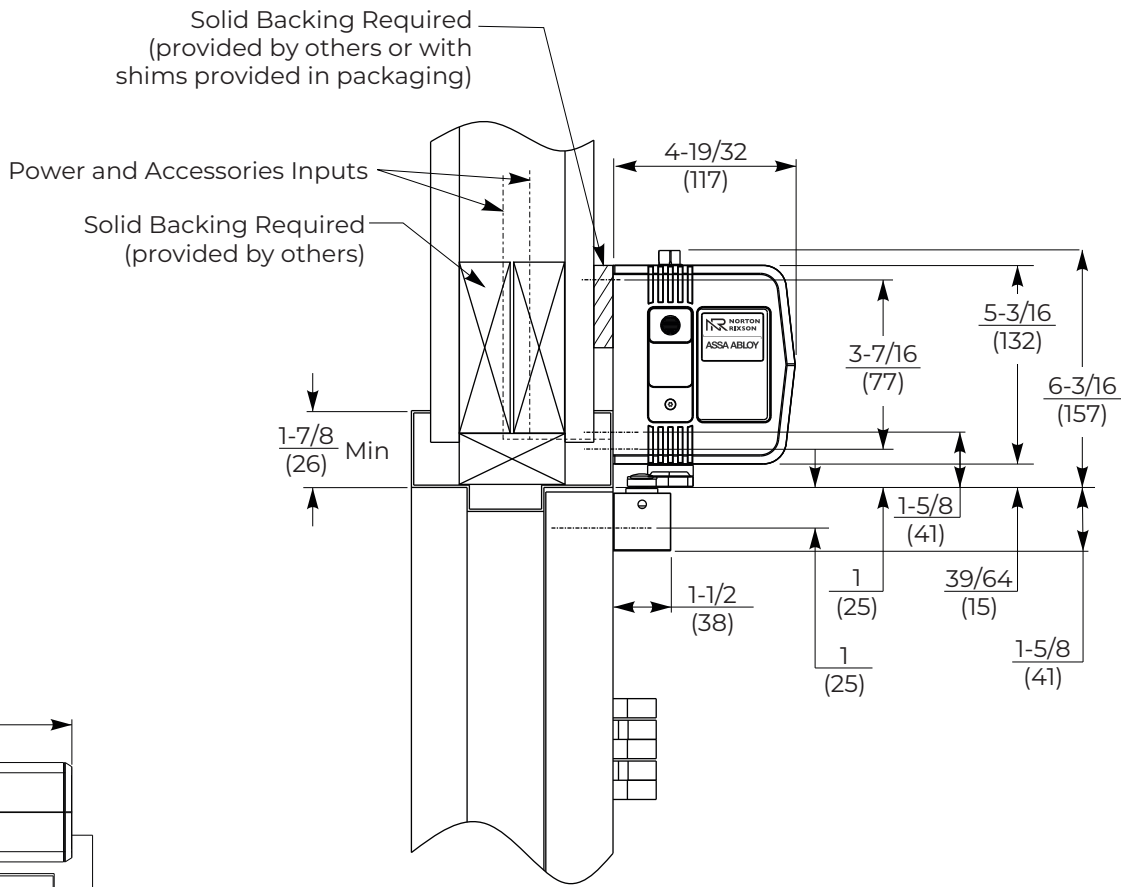


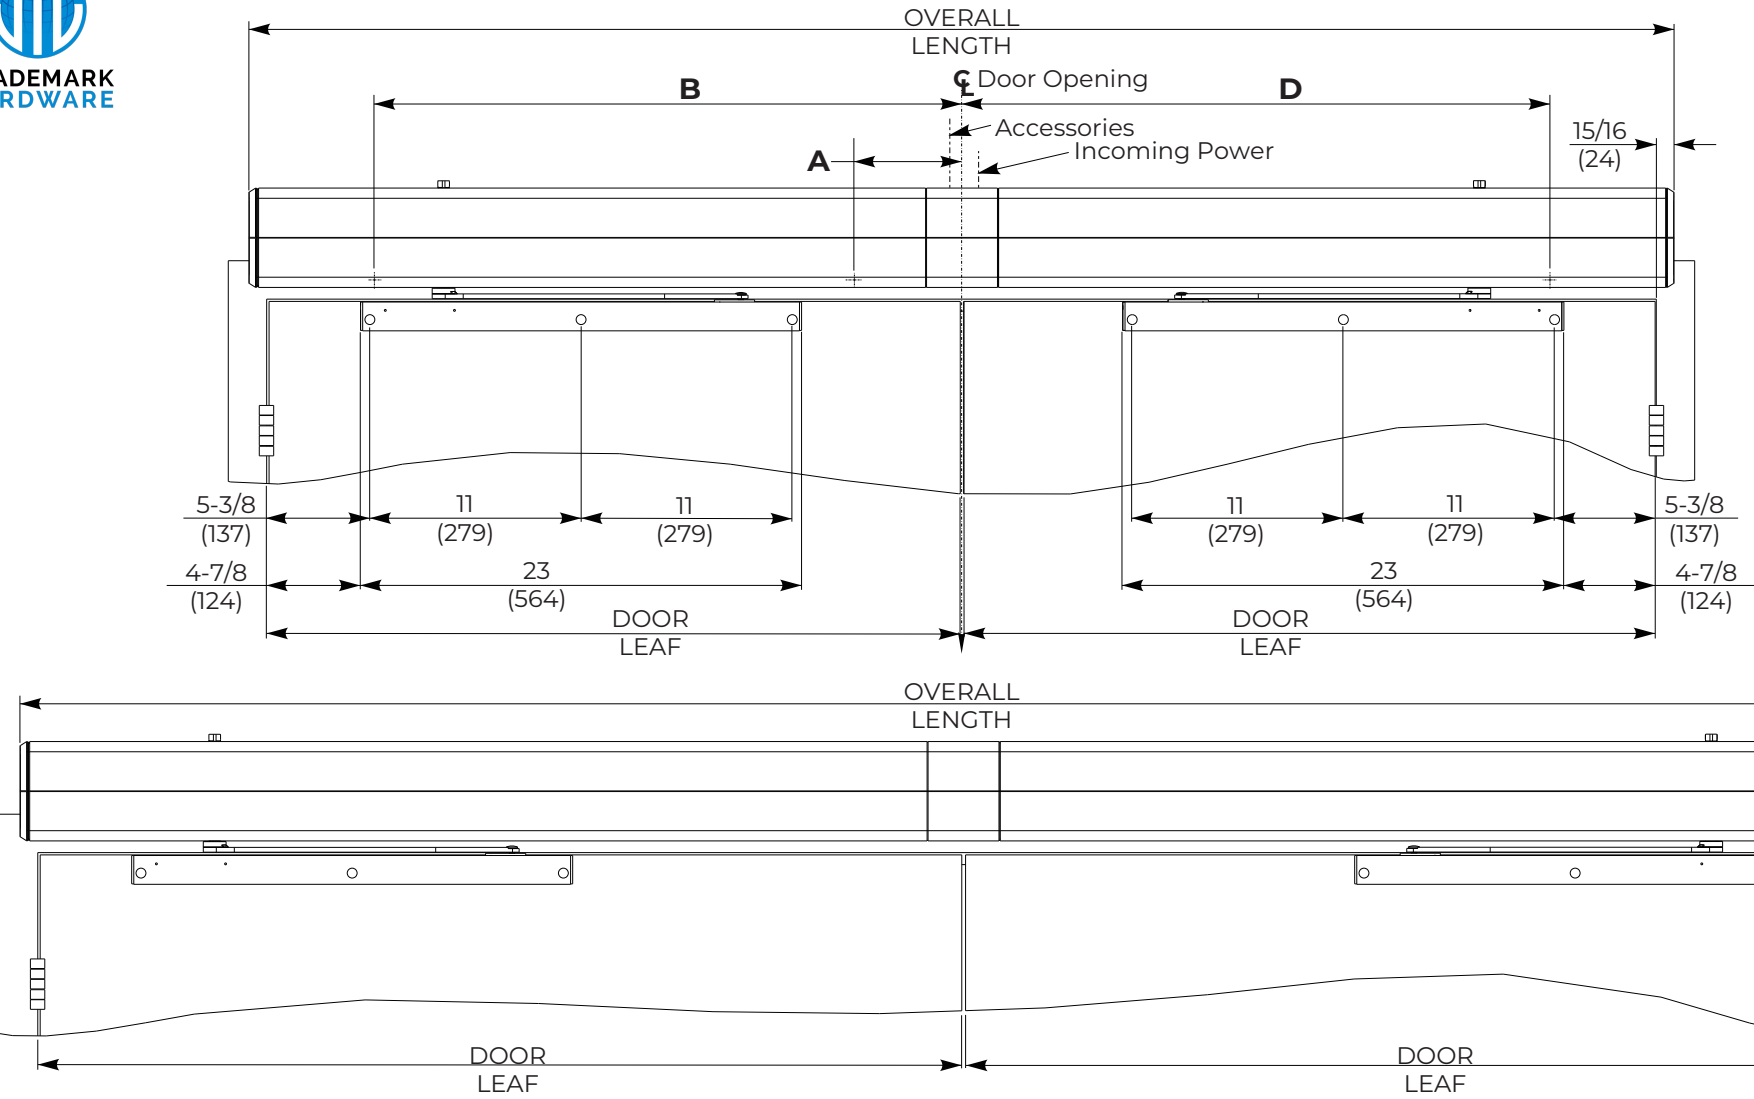


	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6011-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6011-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6011-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6011-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6011-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6011-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6011-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)


- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1044-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product

D6011 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 1/8"



Page 1

TEMPLATE NUMBER	REV	DATE
7360-1051	3	05/23

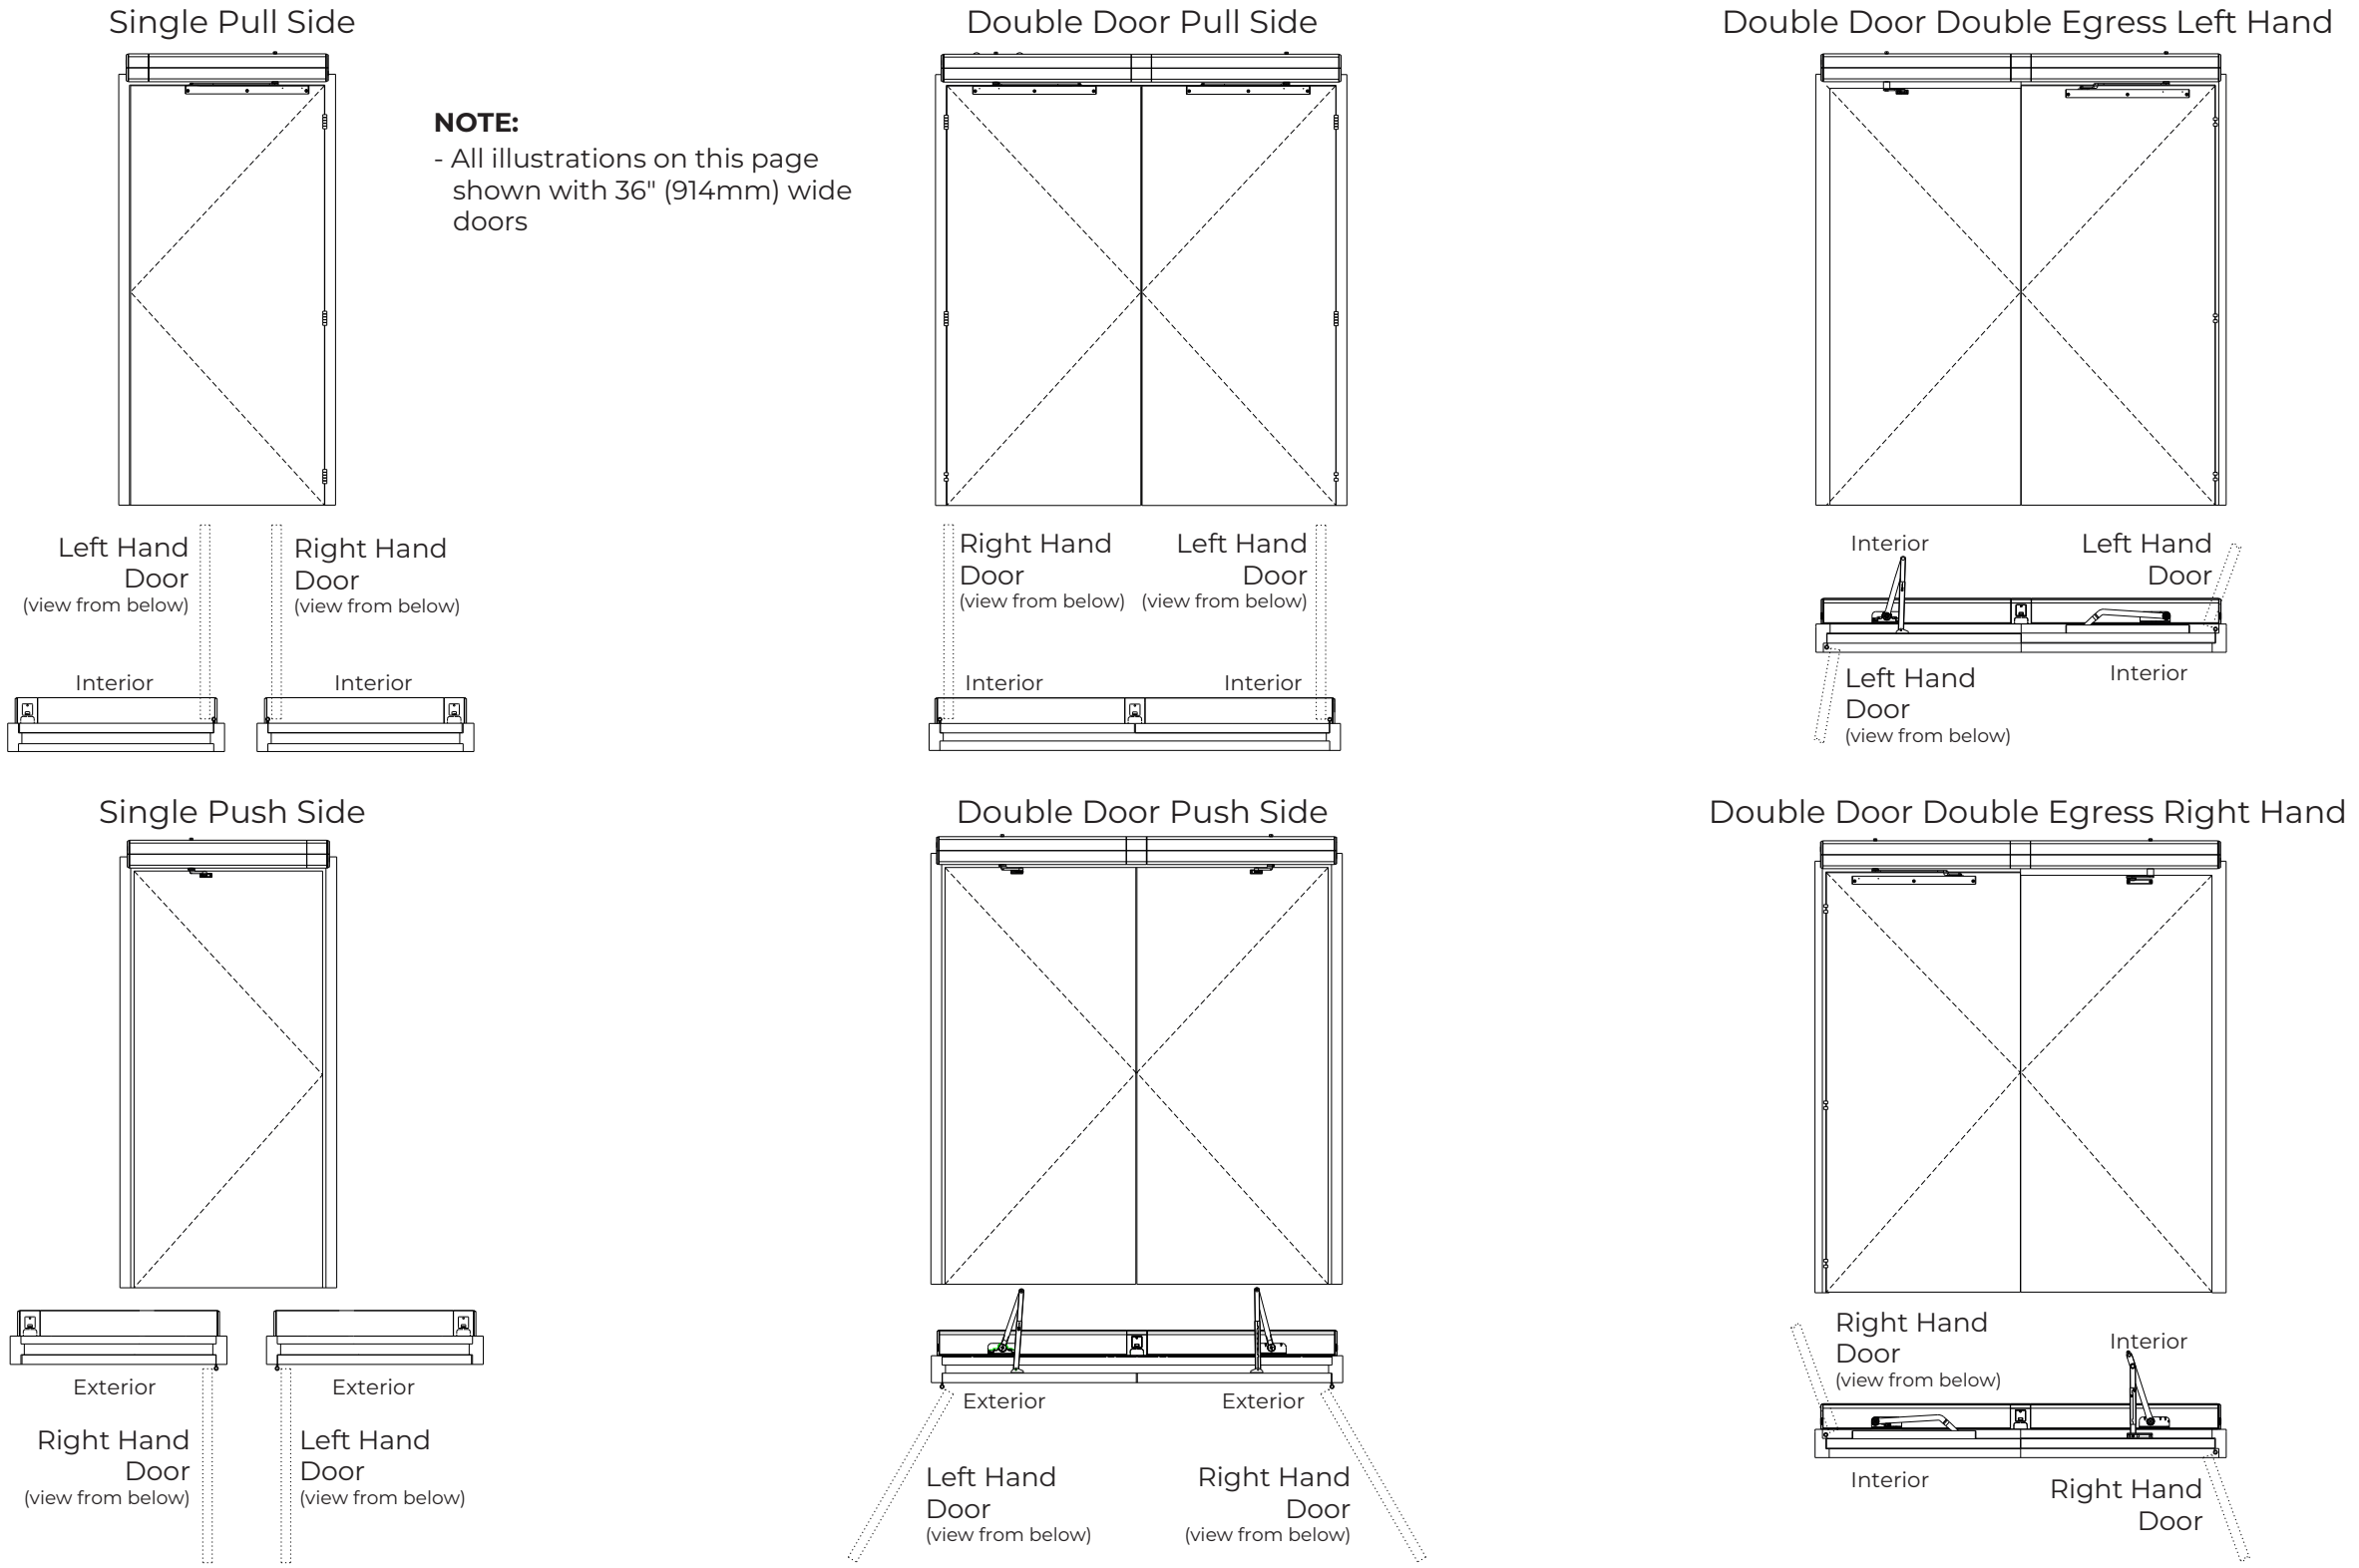

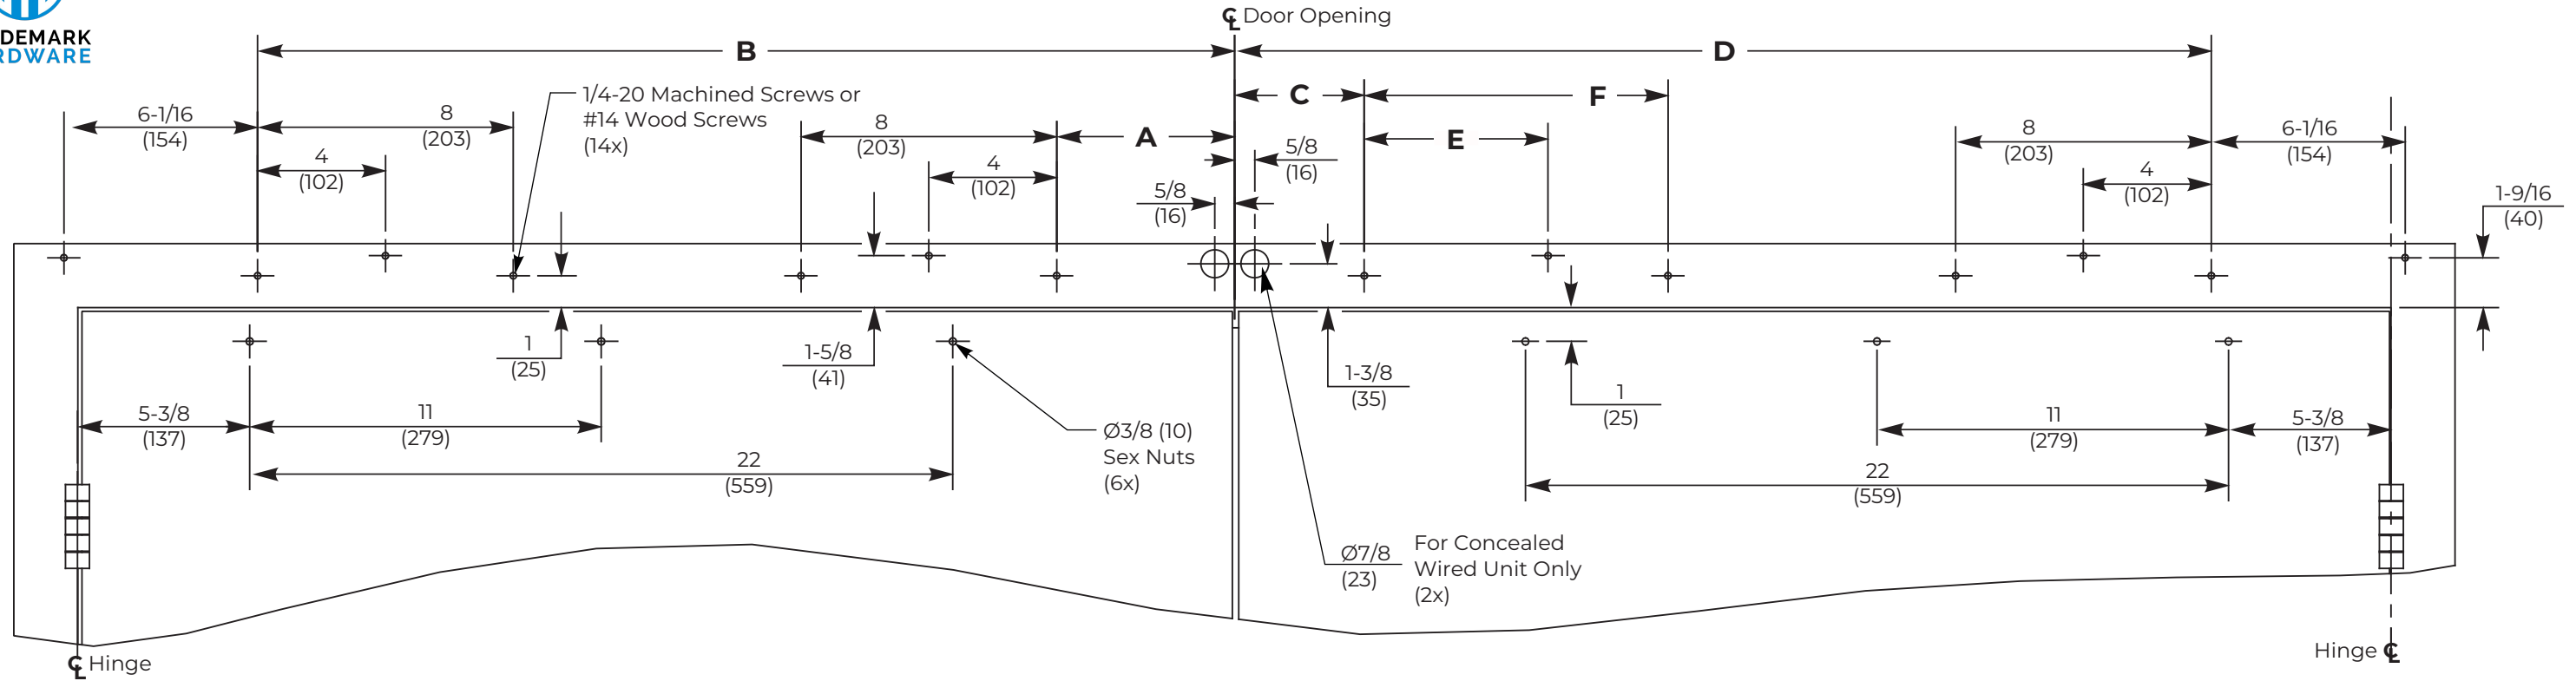




	Dim A	Dim B	Dim C	Dim D	Dim E	Dim F
D6011-36	5-9/16 (141)	30-9/16 (776)	4-1/16 (103)	30-9/16 (776)	5-3/4 (146)	9-1/2 (241)
D6011-38	7-9/16 (192)	32-9/16 (827)	4-1/16 (103)	32-9/16 (827)	7-3/4 (197)	11-1/2 (292)
D6011-40	9-9/16 (243)	34-9/16 (878)	9-9/16 (243)	34-9/16 (878)	4 (102)	8 (203)
D6011-42	11-9/16 (294)	36-9/16 (929)	10-1/16 (256)	36-9/16 (929)	5-3/4 (146)	9-1/2 (241)
D6011-44	13-9/16 (344)	38-9/16 (979)	12-1/16 (306)	38-9/16 (979)	5-3/4 (146)	9-1/2 (241)
D6011-46	15-9/16 (395)	40-9/16 (1030)	14-1/16 (356)	40-9/16 (1017)	5-3/4 (146)	9-1/2 (241)
D6011-48	17-9/16 (446)	42-9/16 (1081)	16-1/16 (408)	42-9/16 (1081)	5-3/4 (146)	9-1/2 (241)

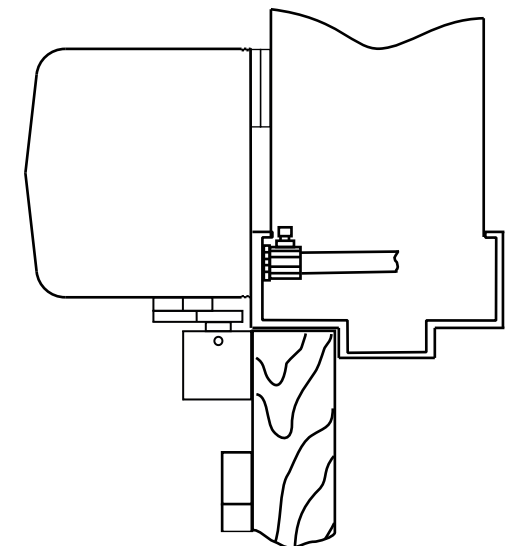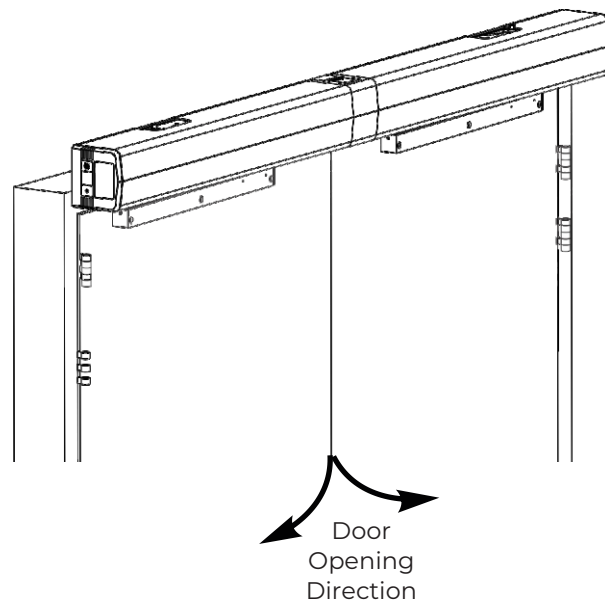

- Do not scale drawing.
- Operator shown for pull side double door application.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

D6011 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 1/8"



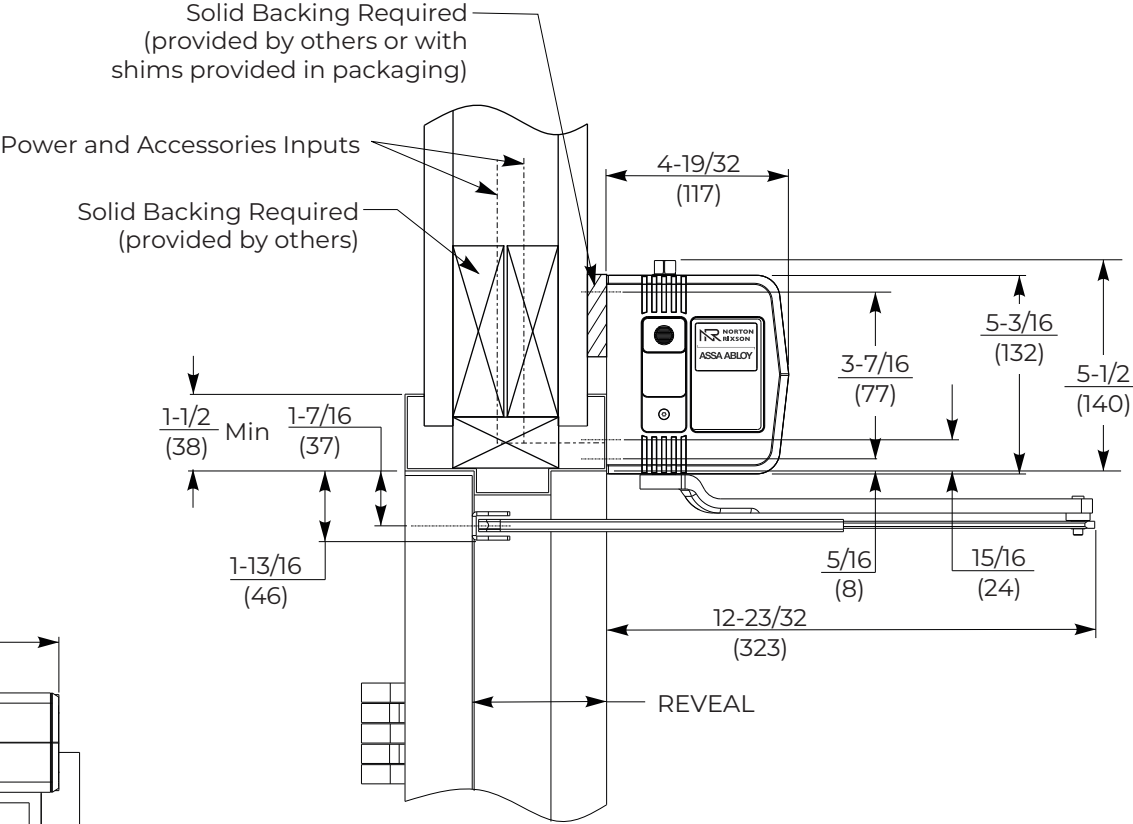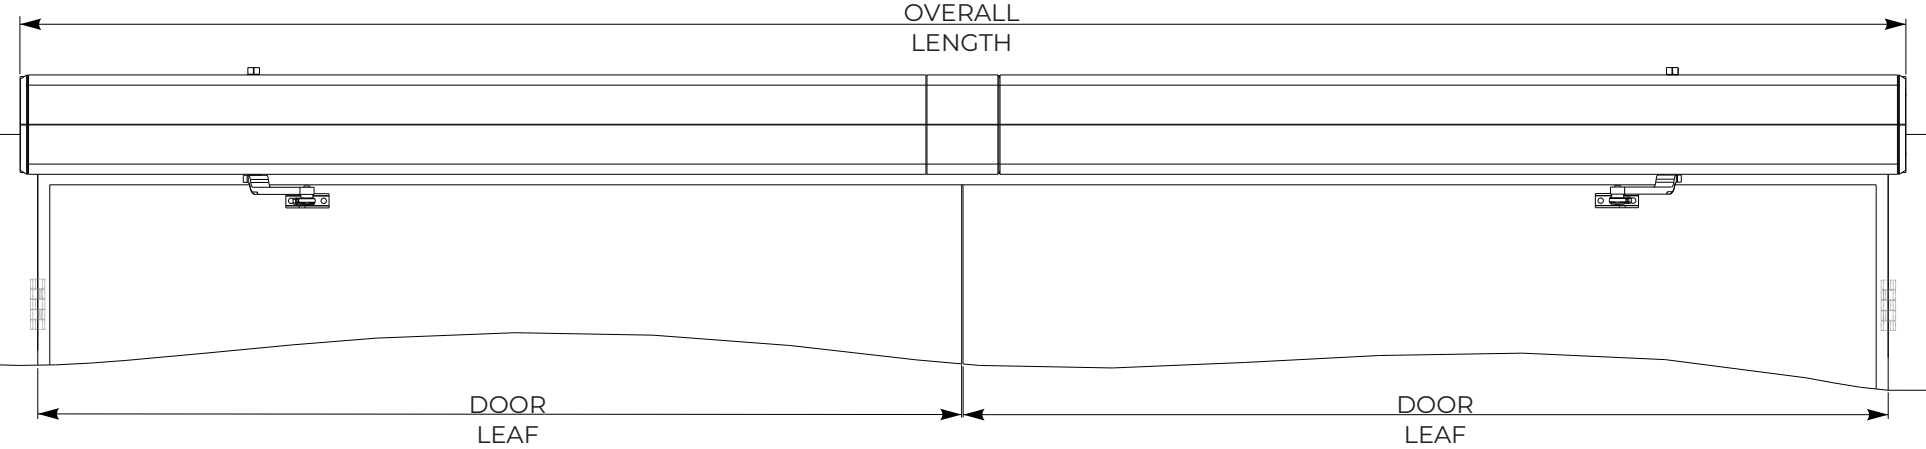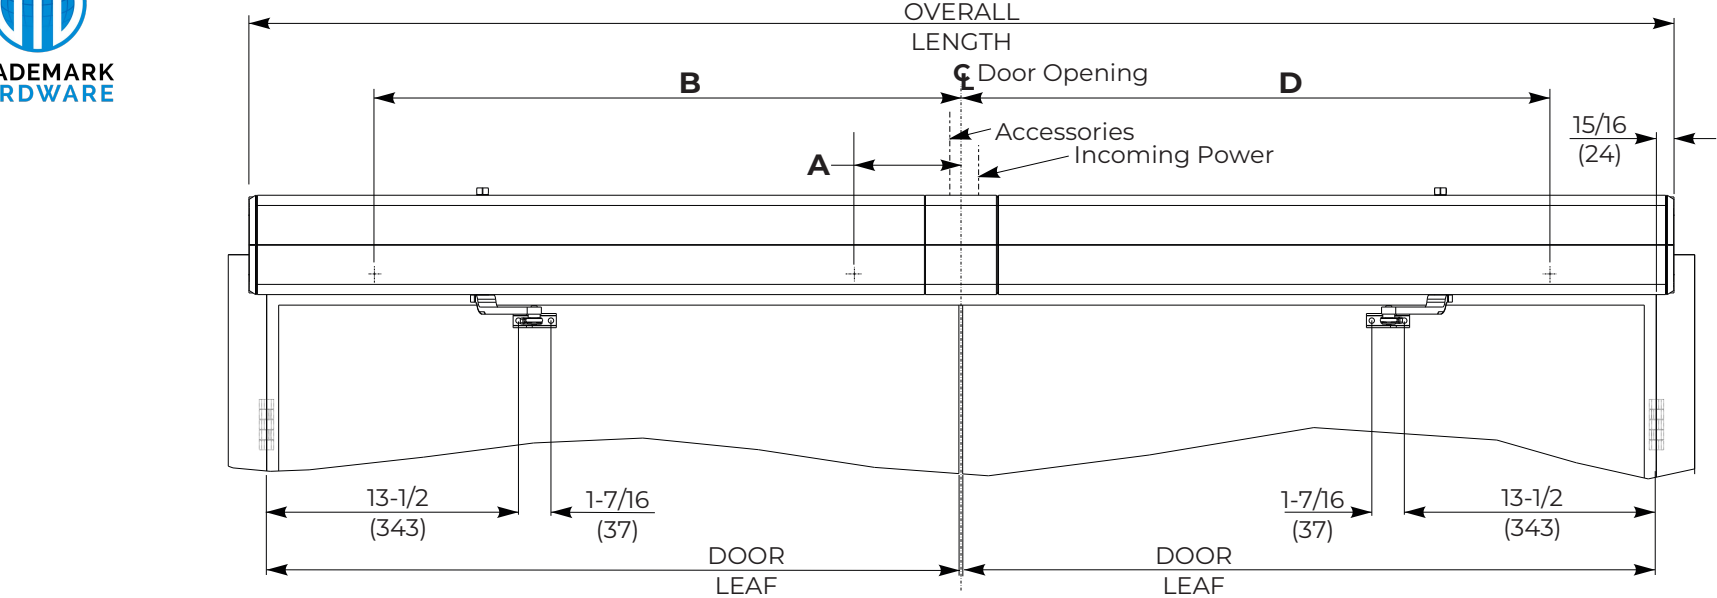

	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6021-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6021-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6021-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6021-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6021-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6021-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6021-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)

- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1045-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product

D6021 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 6-7/8" and Maximum of 110° of opening


Page 1



TEMPLATE NUMBER	REV	DATE
7360-1052	3	05/23




Single Pull Side

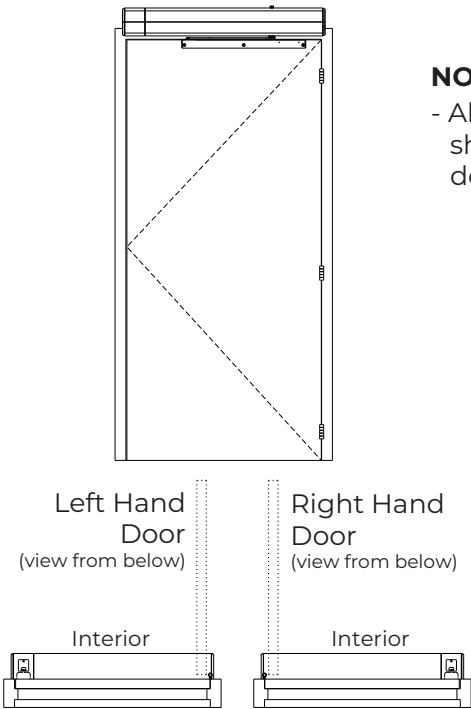


NOTE:
- All illustrations on this page
shown with 36" (914mm) wide
doors


Double Door Pull Side

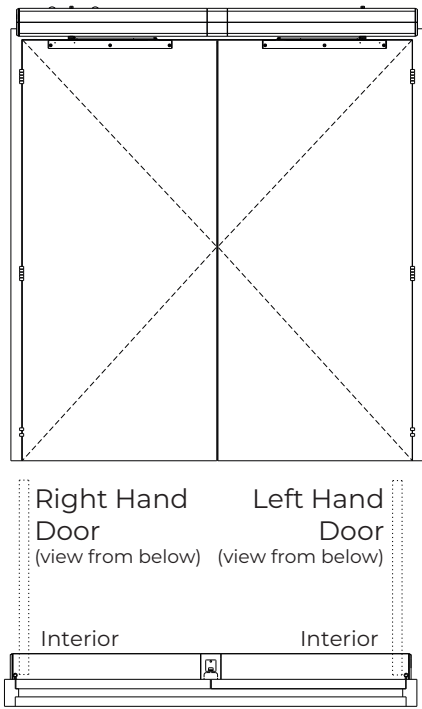


Double Door Double Egress Left Hand

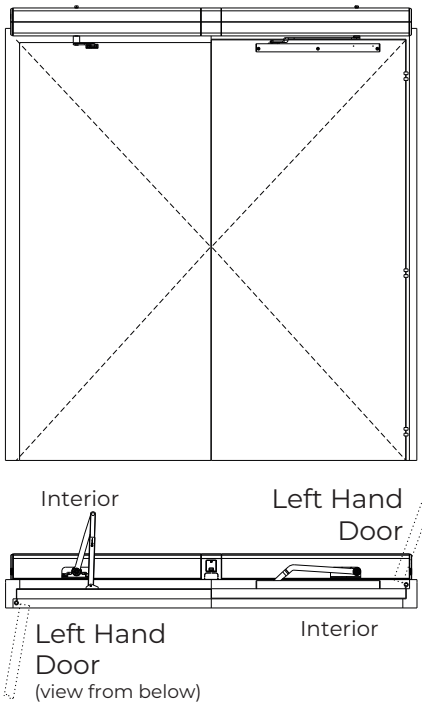


Single Push Side

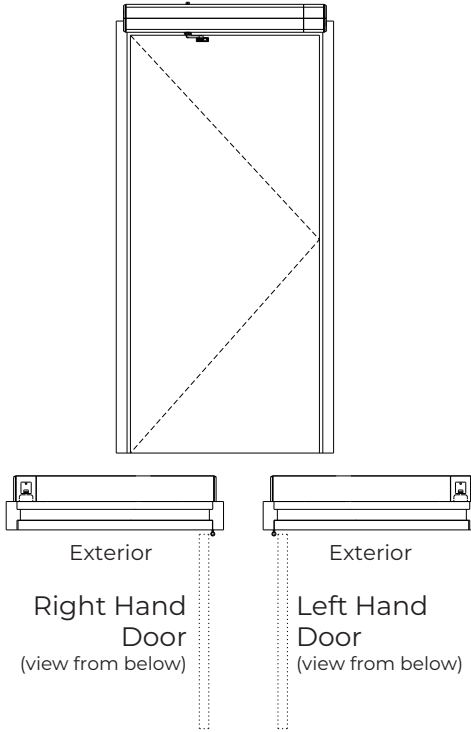

Double Door Push Side

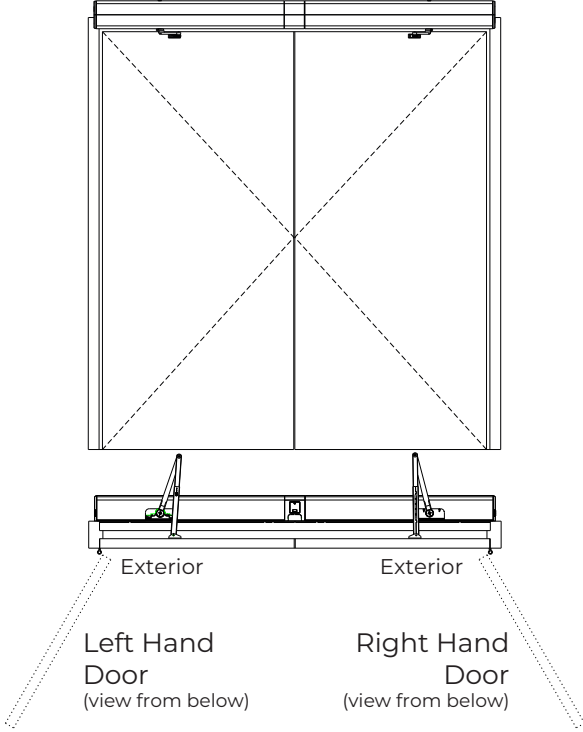

Double Door Double Egress Right Hand

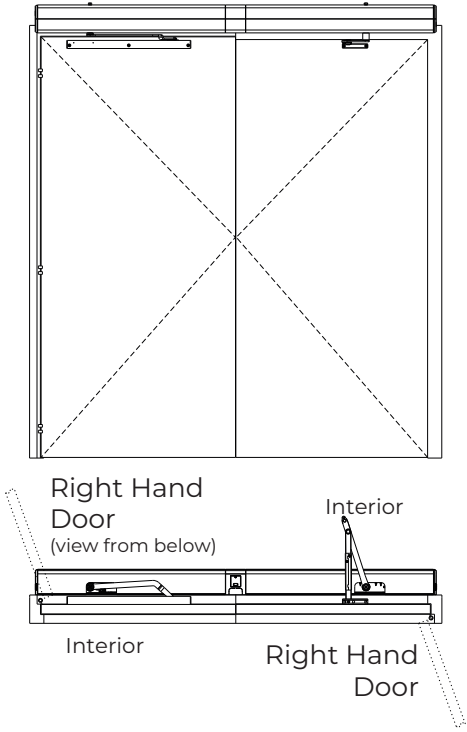





D6021 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 6-7/8" and Maximum of 110° of opening

Page 2



TEMPLATE NUMBER	REV	DATE
7360-1052	3	05/23

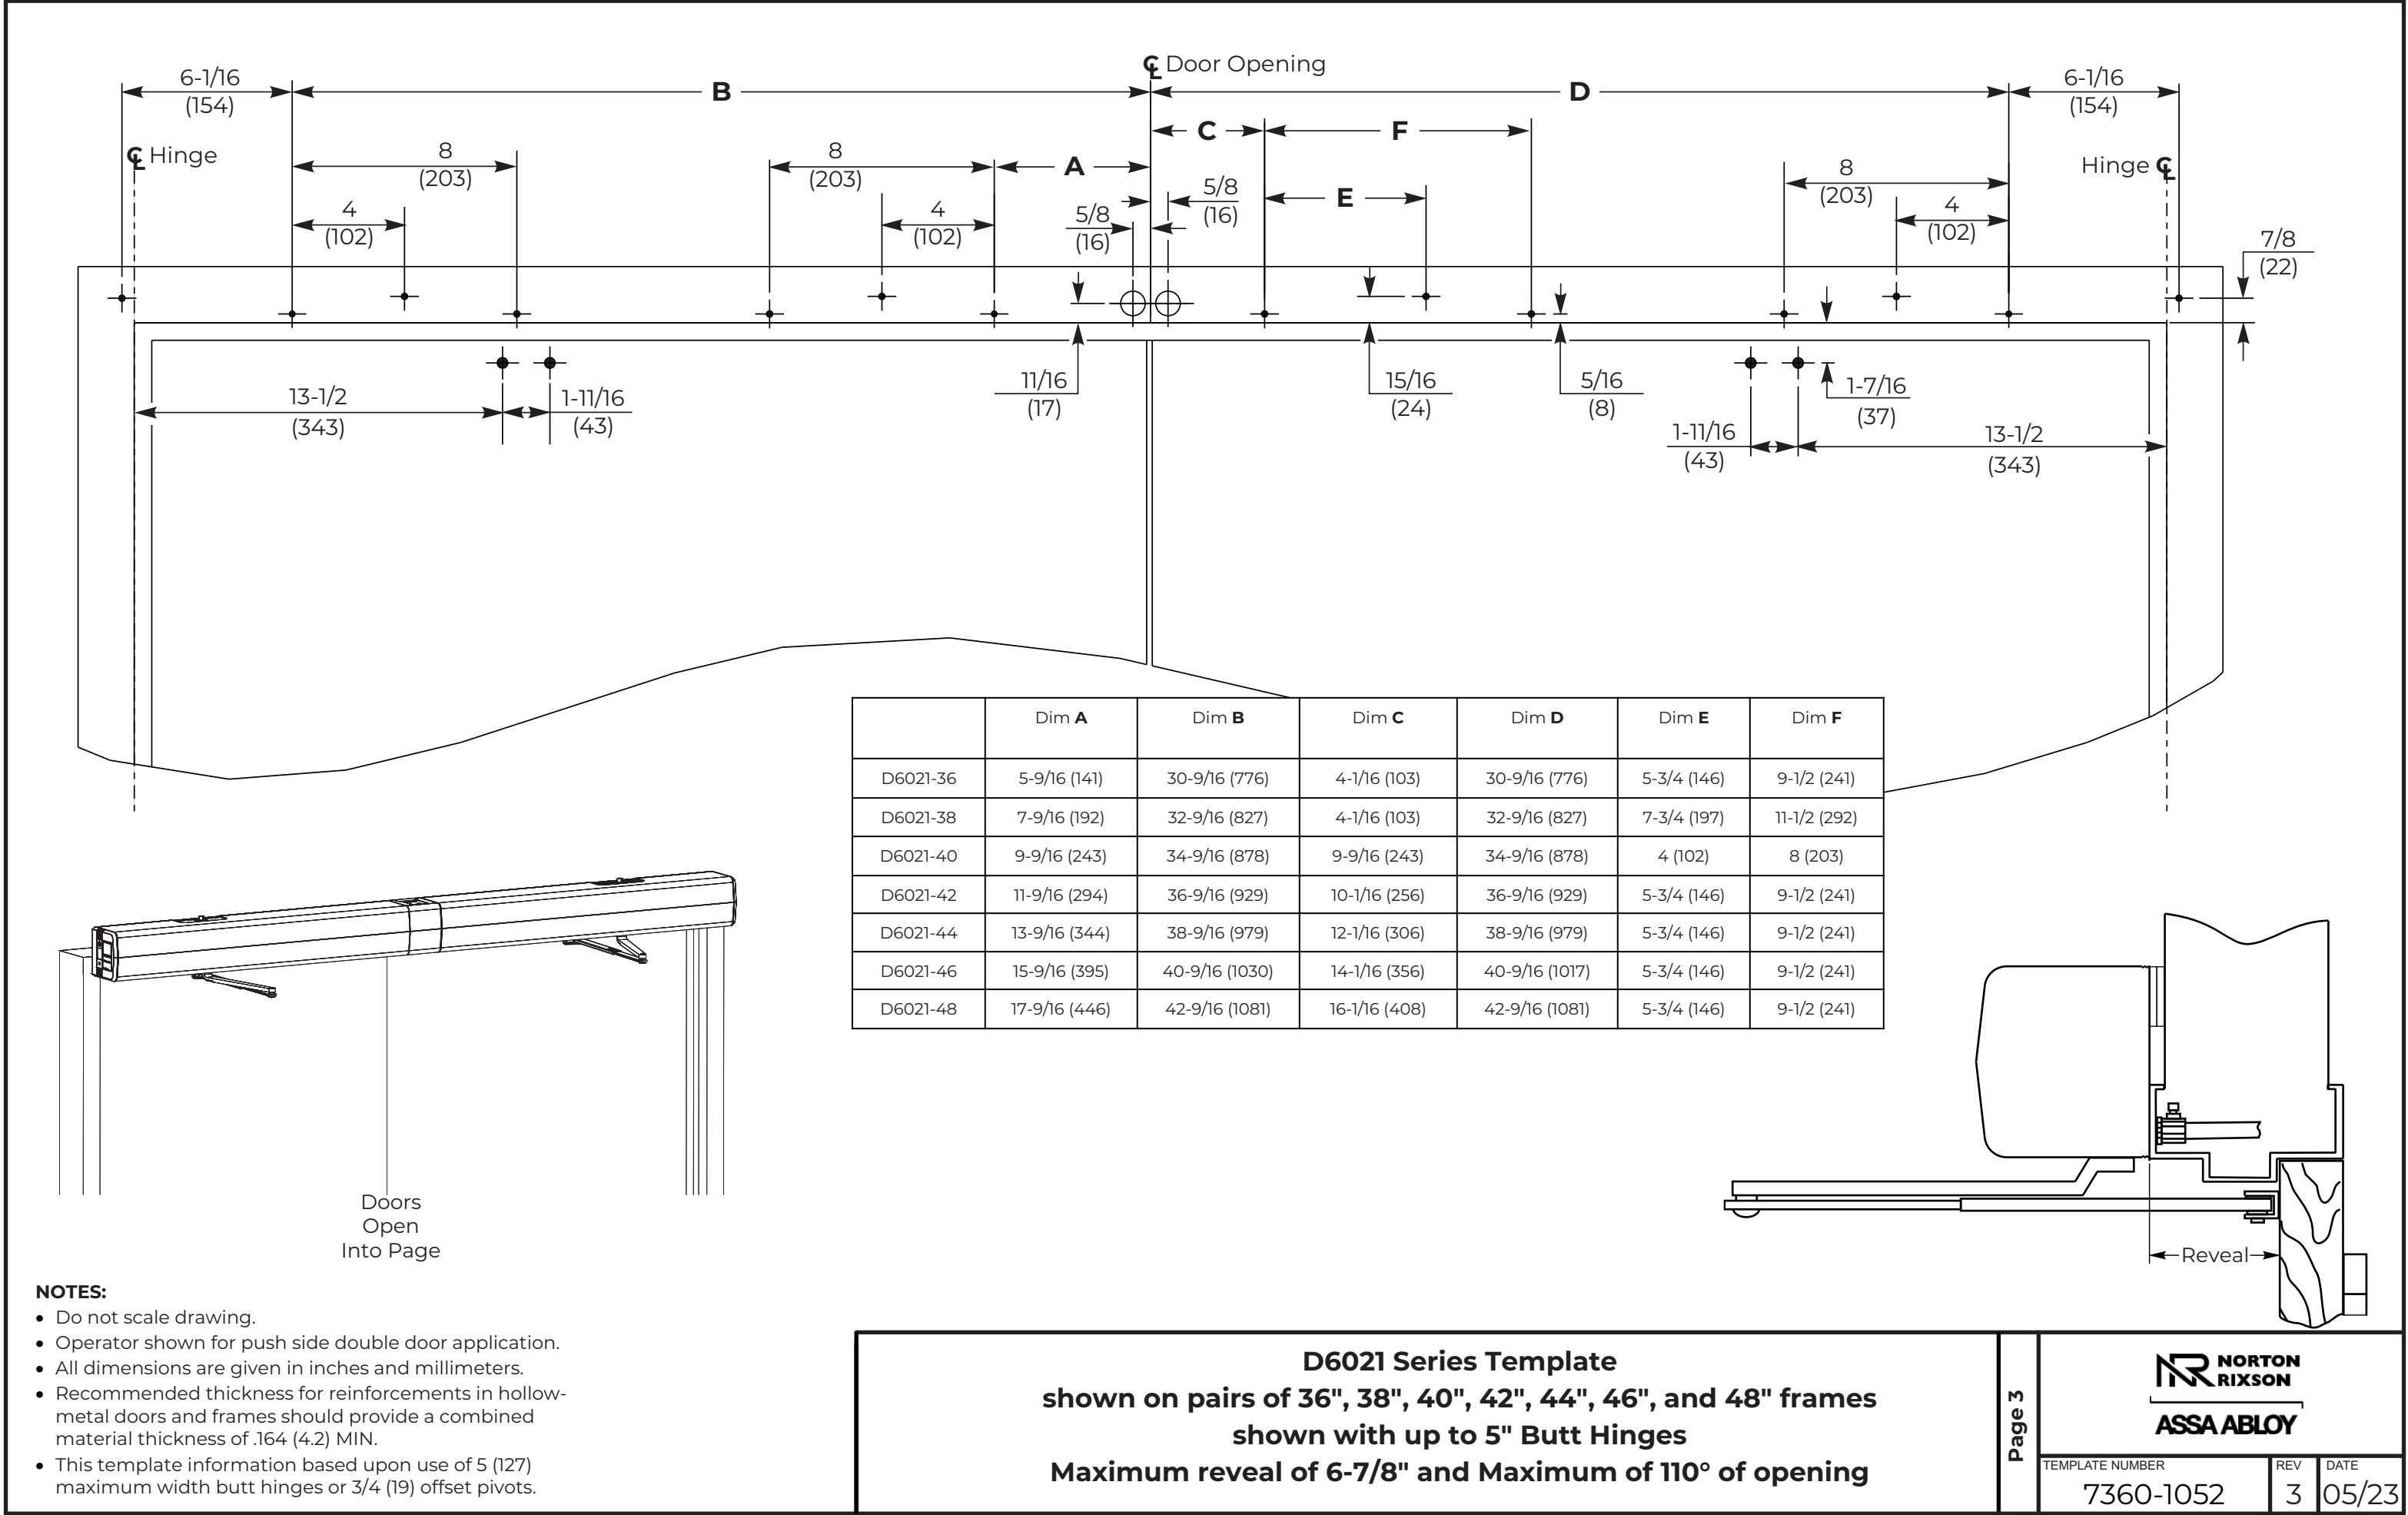

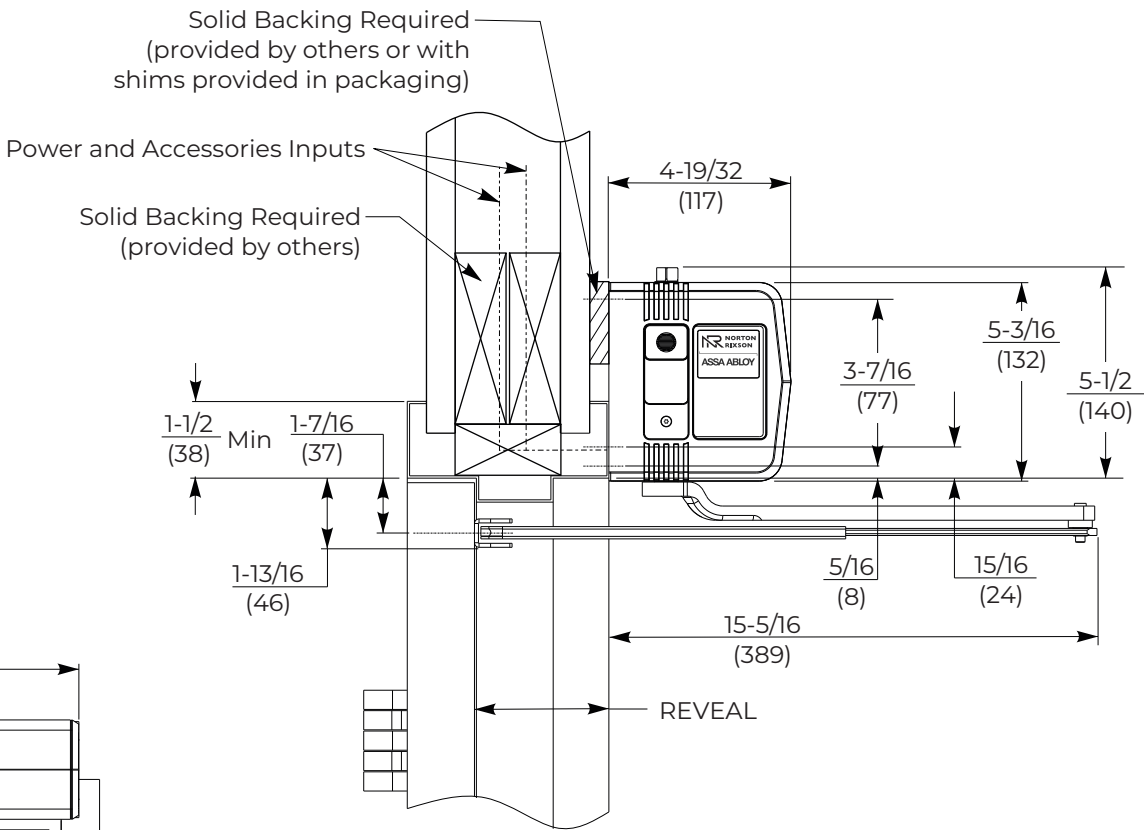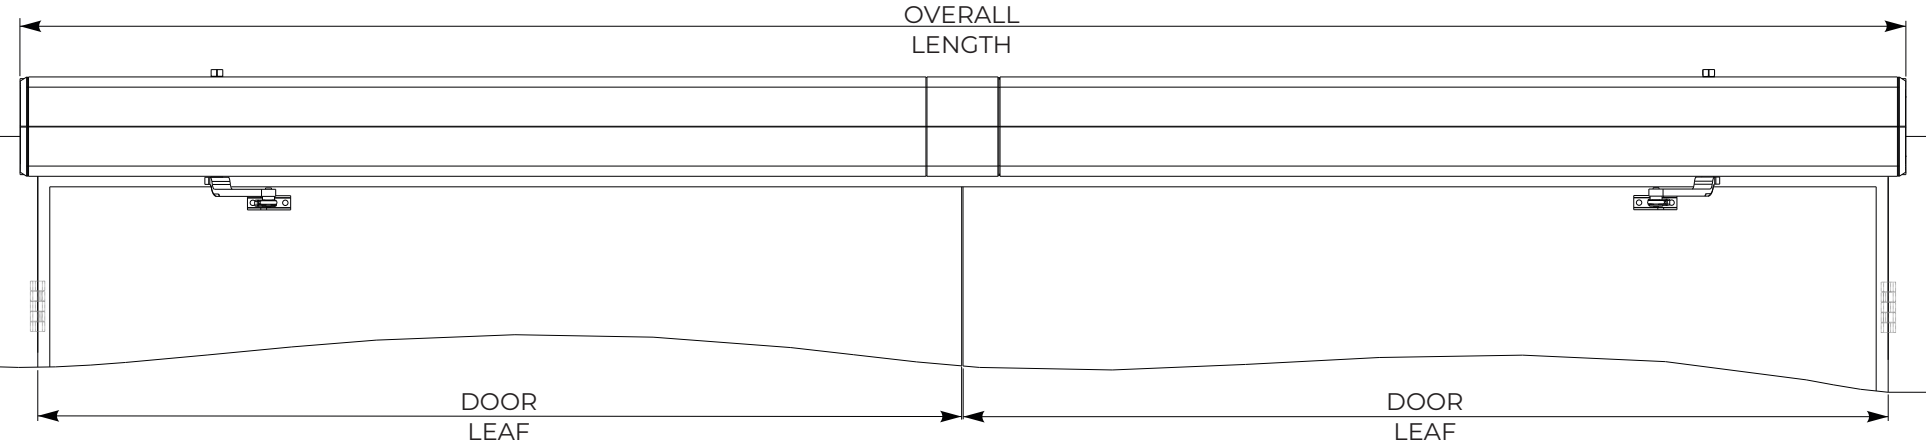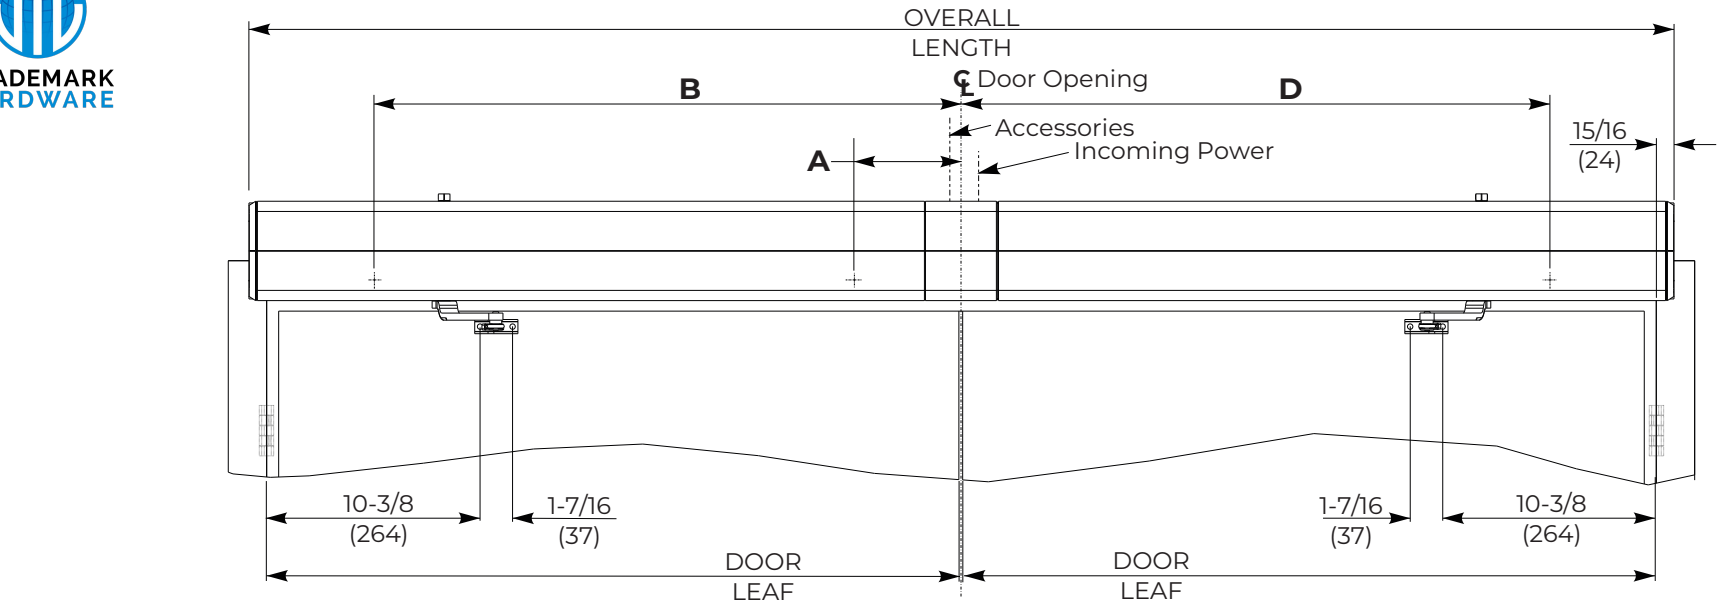

	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6031-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6031-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6031-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6031-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6031-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6031-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6031-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)

- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1045-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product


D6031 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 6-7/8" and Maximum of 180° of opening

Page 1

TEMPLATE NUMBER	REV	DATE
7360-1053	3	05/23




Single Pull Side

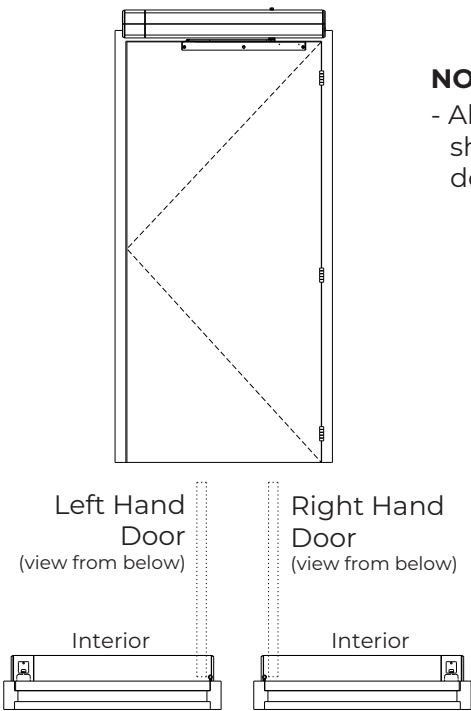


NOTE:
- All illustrations on this page
shown with 36" (914mm) wide
doors


Double Door Pull Side

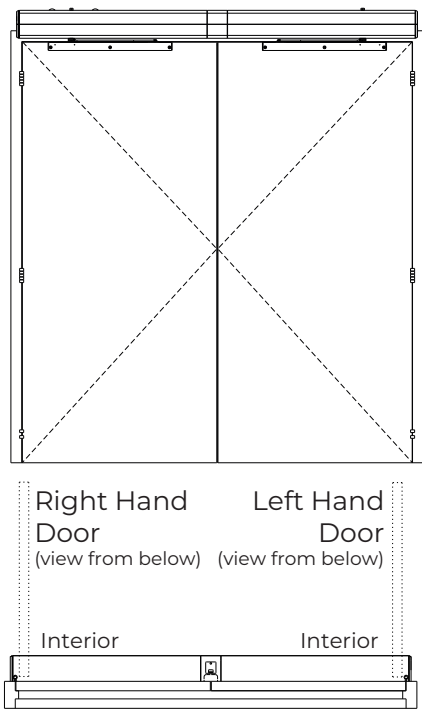


Double Door Double Egress Left Hand

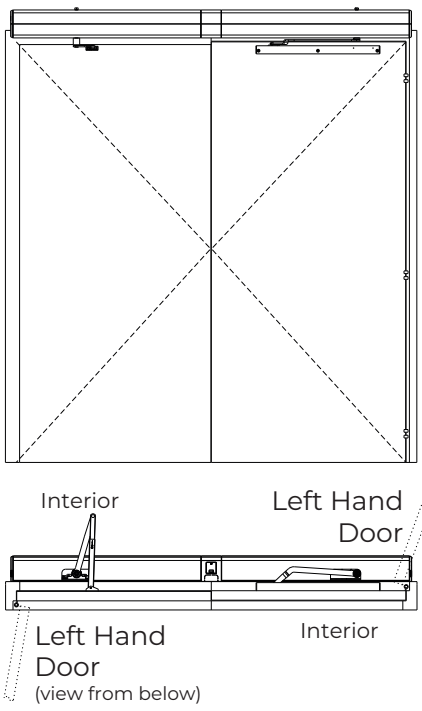


Single Push Side

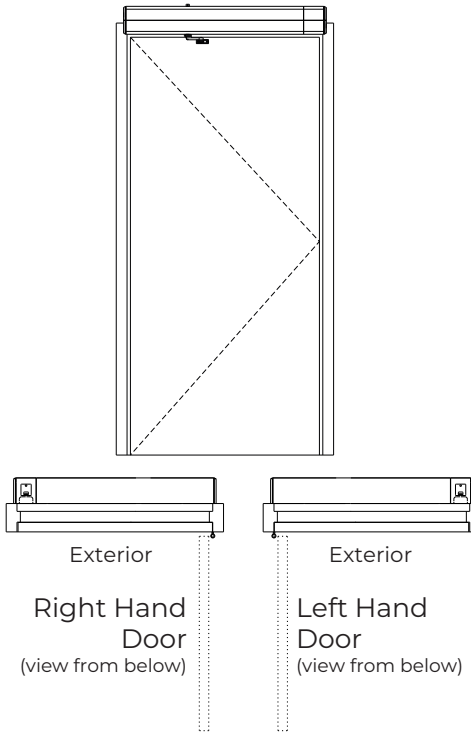

Double Door Push Side

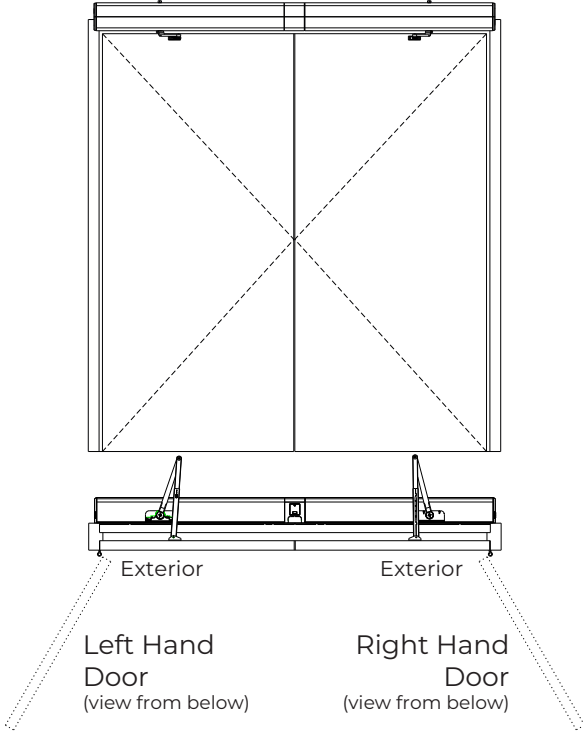

Double Door Double Egress Right Hand

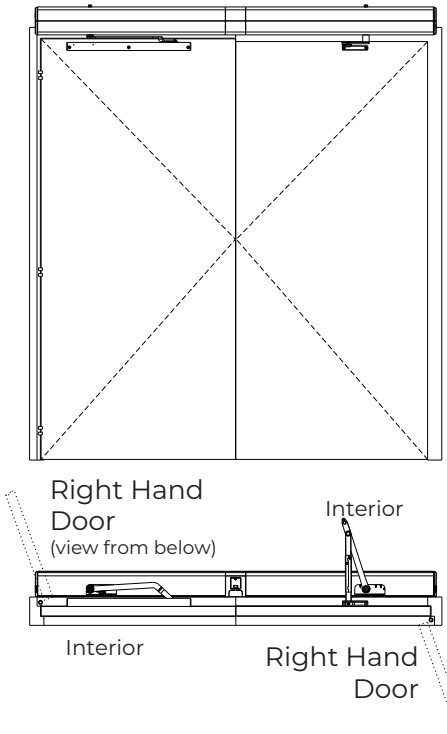




D6031 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Maximum reveal of 6-7/8" and Maximum of 180° of opening

Page 2




TEMPLATE NUMBER	REV	DATE
7360-1053	3	05/23

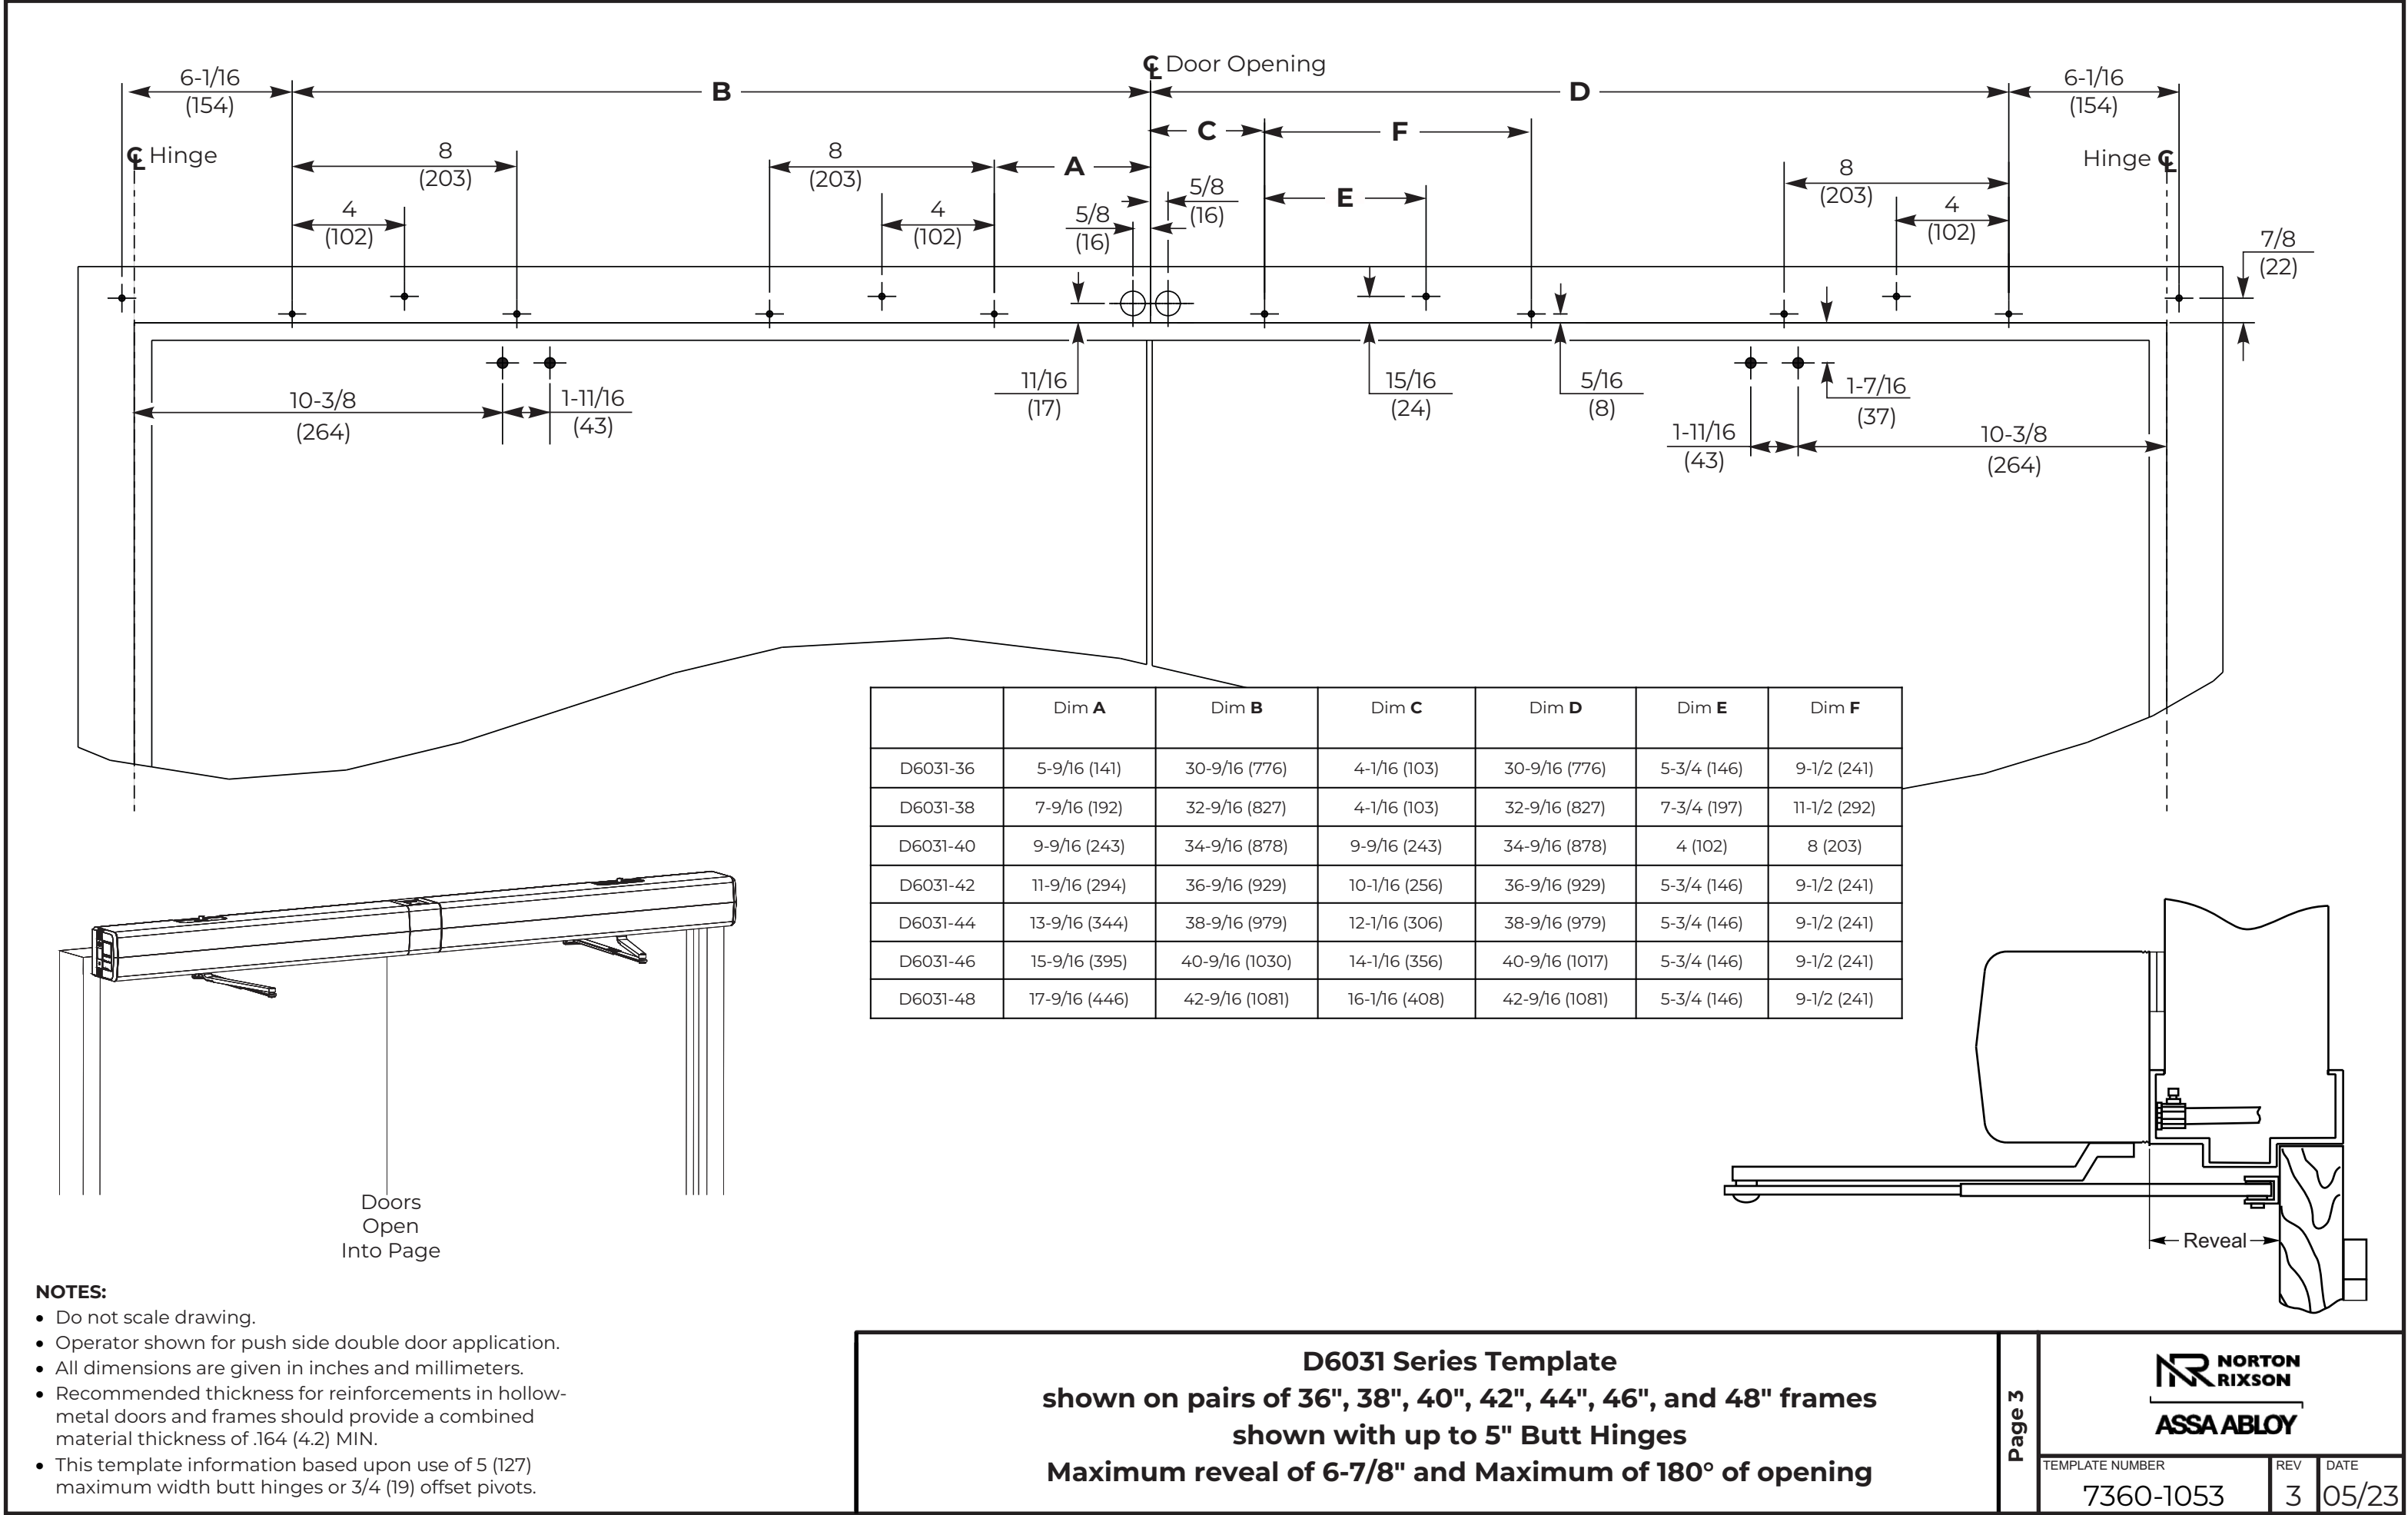

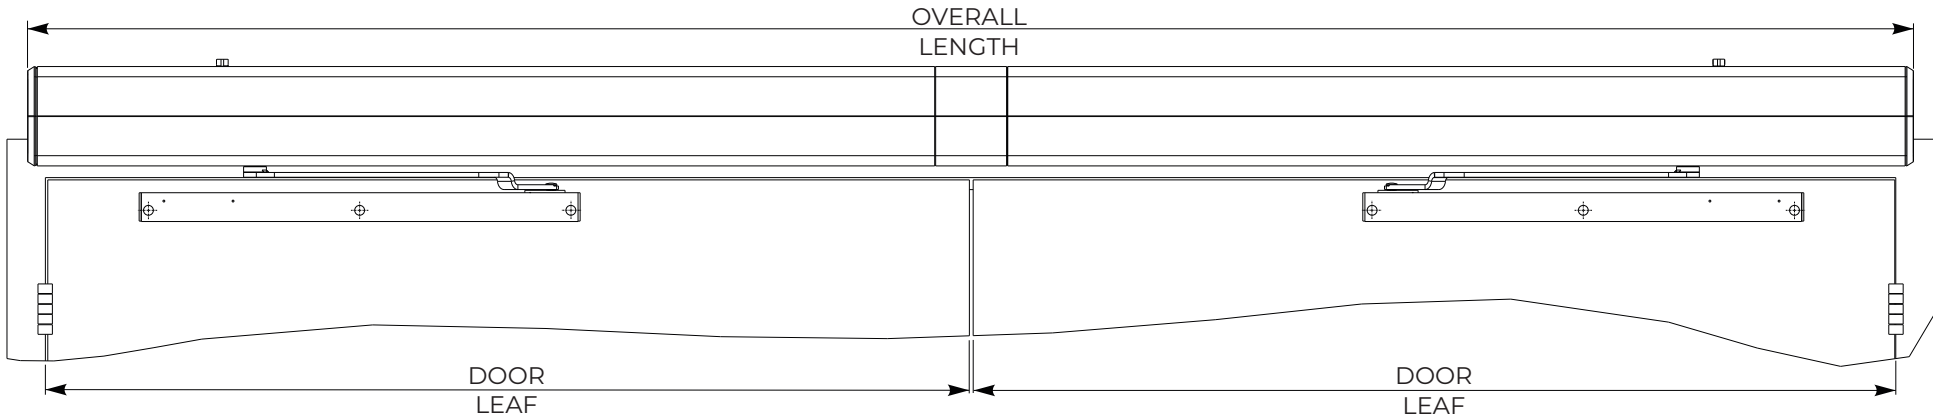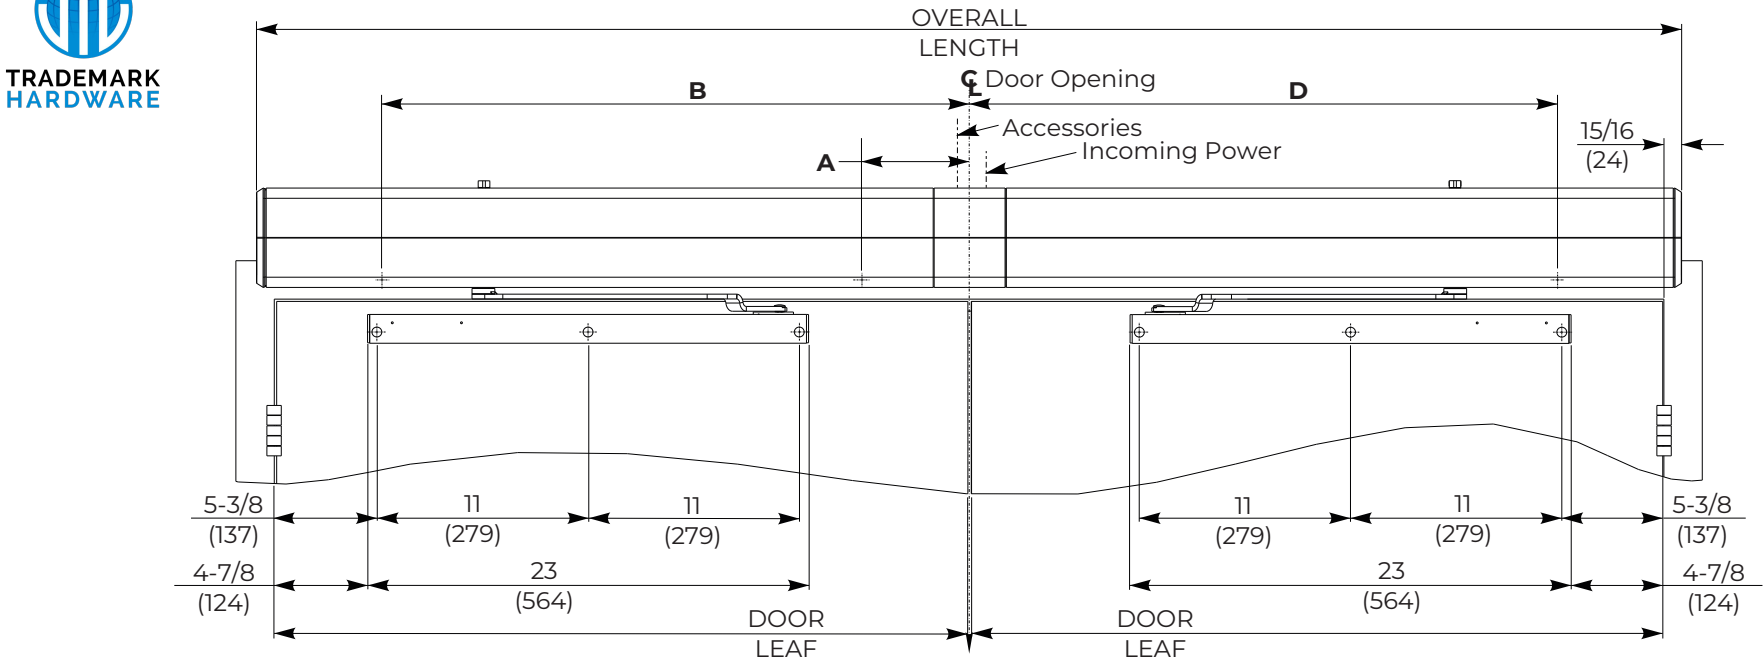

	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6051-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6051-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6051-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6051-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6051-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6051-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6051-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)

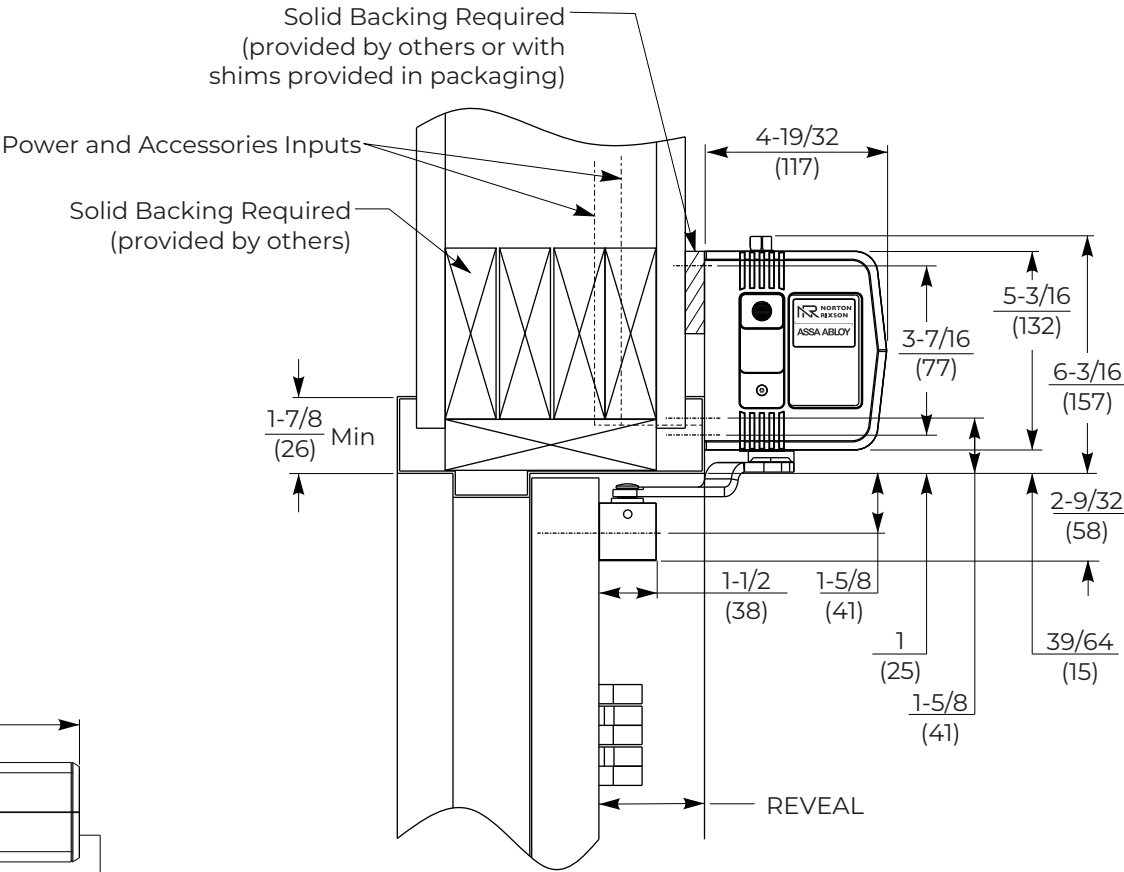

- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1044-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product


D6051 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Reveal of 1/8" to 3" and a Maximum Opening of 110°

Page 1

TEMPLATE NUMBER	REV	DATE
7360-1054	3	05/23




Single Pull Side

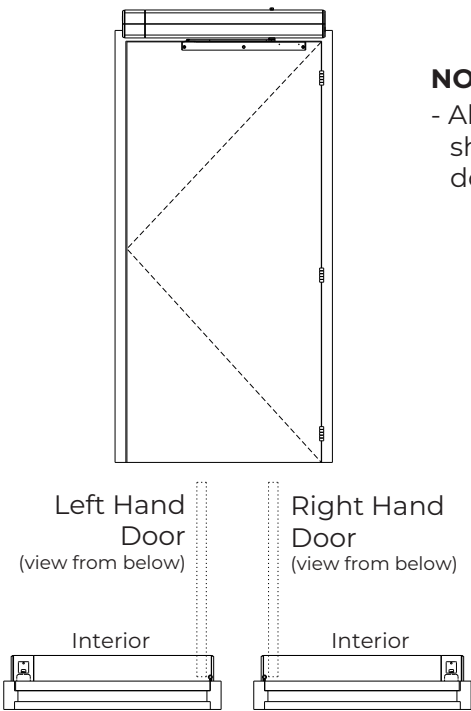


NOTE:
- All illustrations on this page
shown with 36" (914mm) wide
doors


Double Door Pull Side

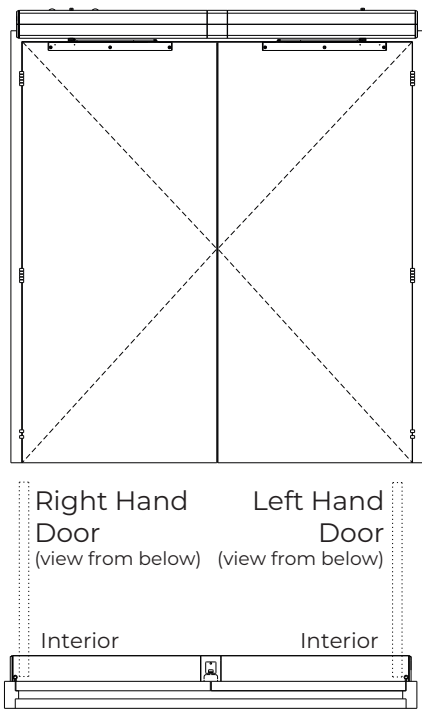


Double Door Double Egress Left Hand

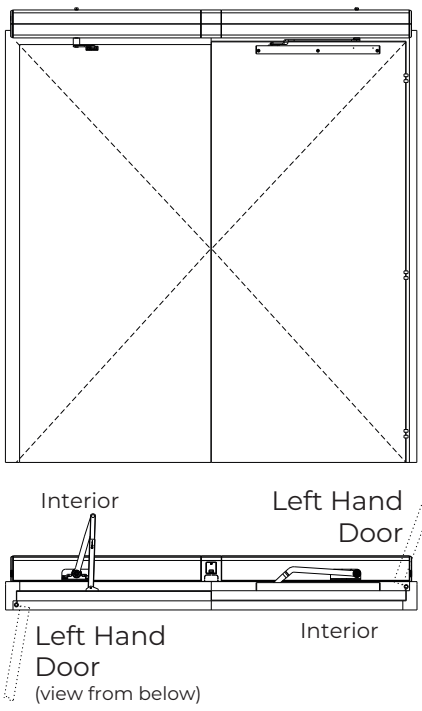


Single Push Side

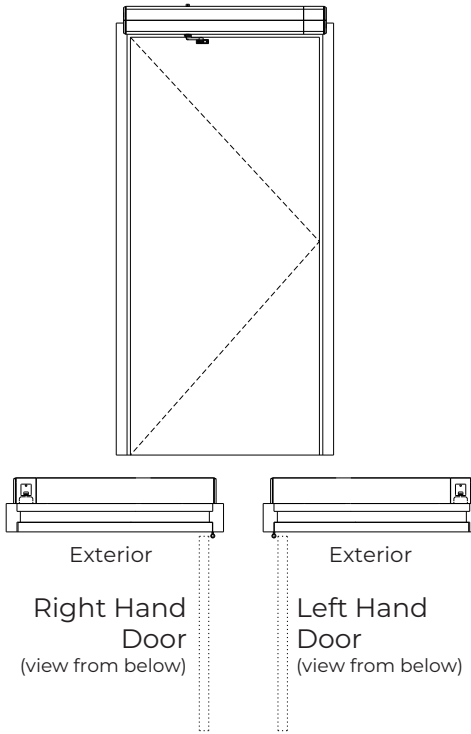

Double Door Push Side

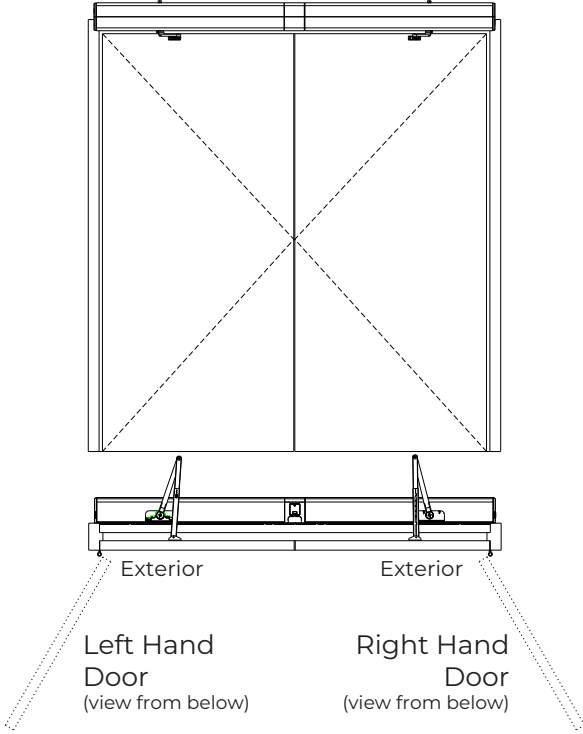

Double Door Double Egress Right Hand

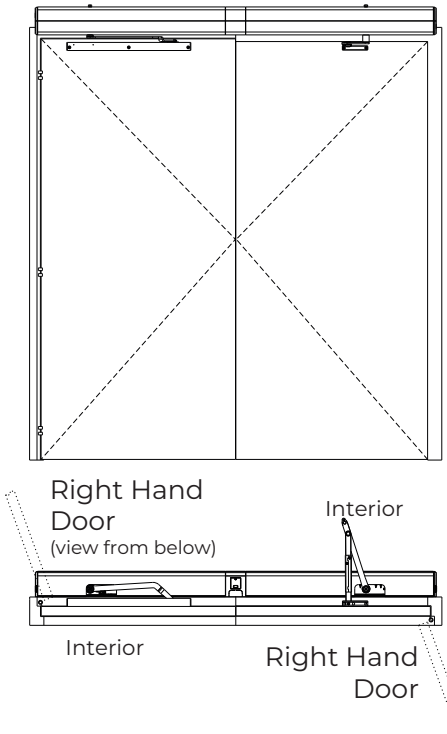


D6051 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Reveal of 1/8" to 3" and a Maximum Opening of 110°



Page 2



TEMPLATE NUMBER	REV	DATE
7360-1054	3	05/23

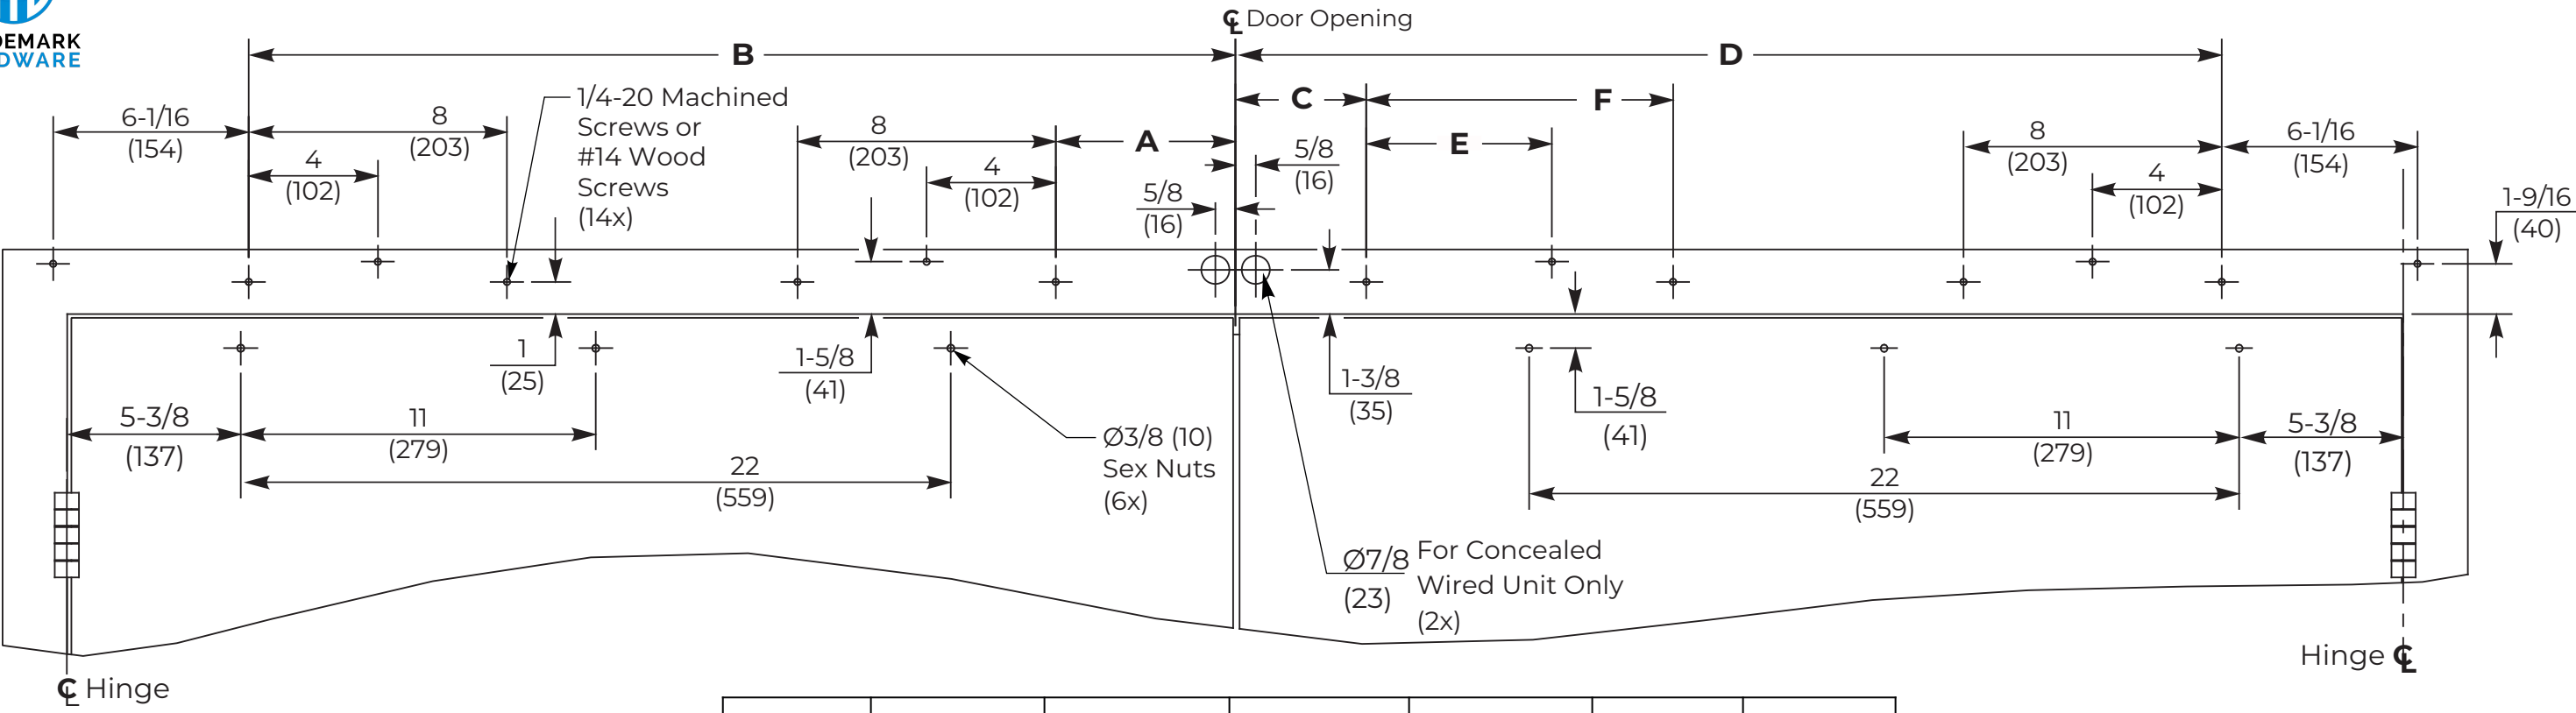

	Dim A	Dim B	Dim C	Dim D	Dim E	Dim F
D6051-36	5-9/16 (141)	30-9/16 (776)	4-1/16 (103)	30-9/16 (776)	5-3/4 (146)	9-1/2 (241)
D6051-38	7-9/16 (192)	32-9/16 (827)	4-1/16 (103)	32-9/16 (827)	7-3/4 (197)	11-1/2 (292)
D6051-40	9-9/16 (243)	34-9/16 (878)	9-9/16 (243)	34-9/16 (878)	4 (102)	8 (203)
D6051-42	11-9/16 (294)	36-9/16 (929)	10-1/16 (256)	36-9/16 (929)	5-3/4 (146)	9-1/2 (241)
D6051-44	13-9/16 (344)	38-9/16 (979)	12-1/16 (306)	38-9/16 (979)	5-3/4 (146)	9-1/2 (241)
D6051-46	15-9/16 (395)	40-9/16 (1030)	14-1/16 (356)	40-9/16 (1017)	5-3/4 (146)	9-1/2 (241)
D6051-48	17-9/16 (446)	42-9/16 (1081)	16-1/16 (408)	42-9/16 (1081)	5-3/4 (146)	9-1/2 (241)

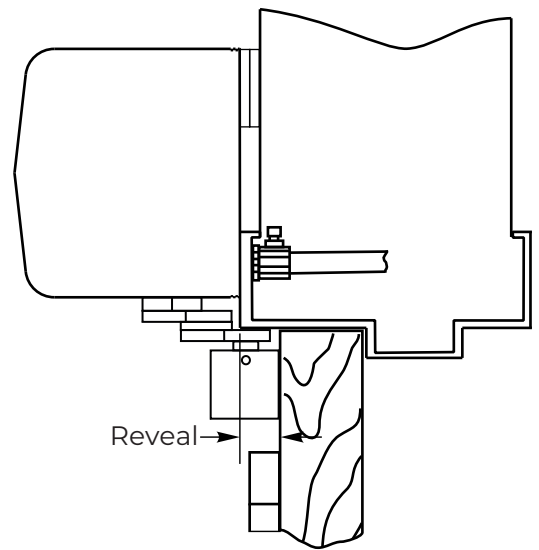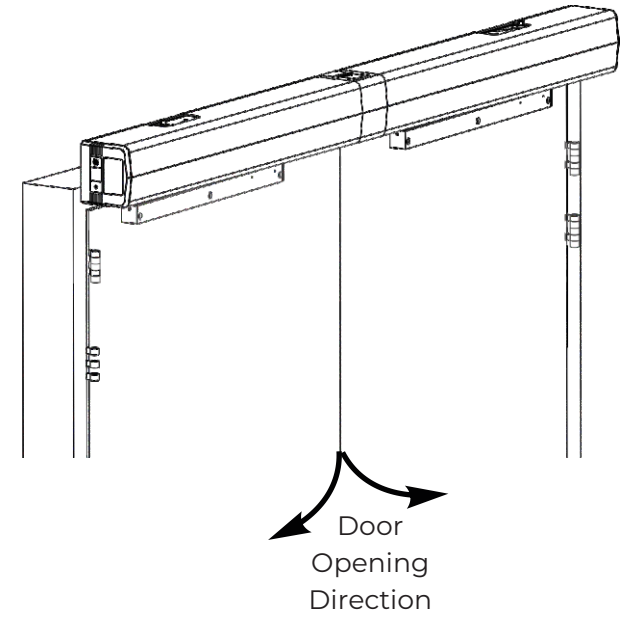

- NOTES:**
- Do not scale drawing.
 - Operator shown for pull side double door application.
 - All dimensions are given in inches and millimeters.
 - Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
 - This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

D6051 Series Template

shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames

shown with up to 5" Butt Hinges

Reveal of 1/8" to 3" and a Maximum Opening of 110°

Page 3

ASSA ABLOY

TEMPLATE NUMBER

7360-1054




REV

3

DATE

05/23

Approved 2023-07-12

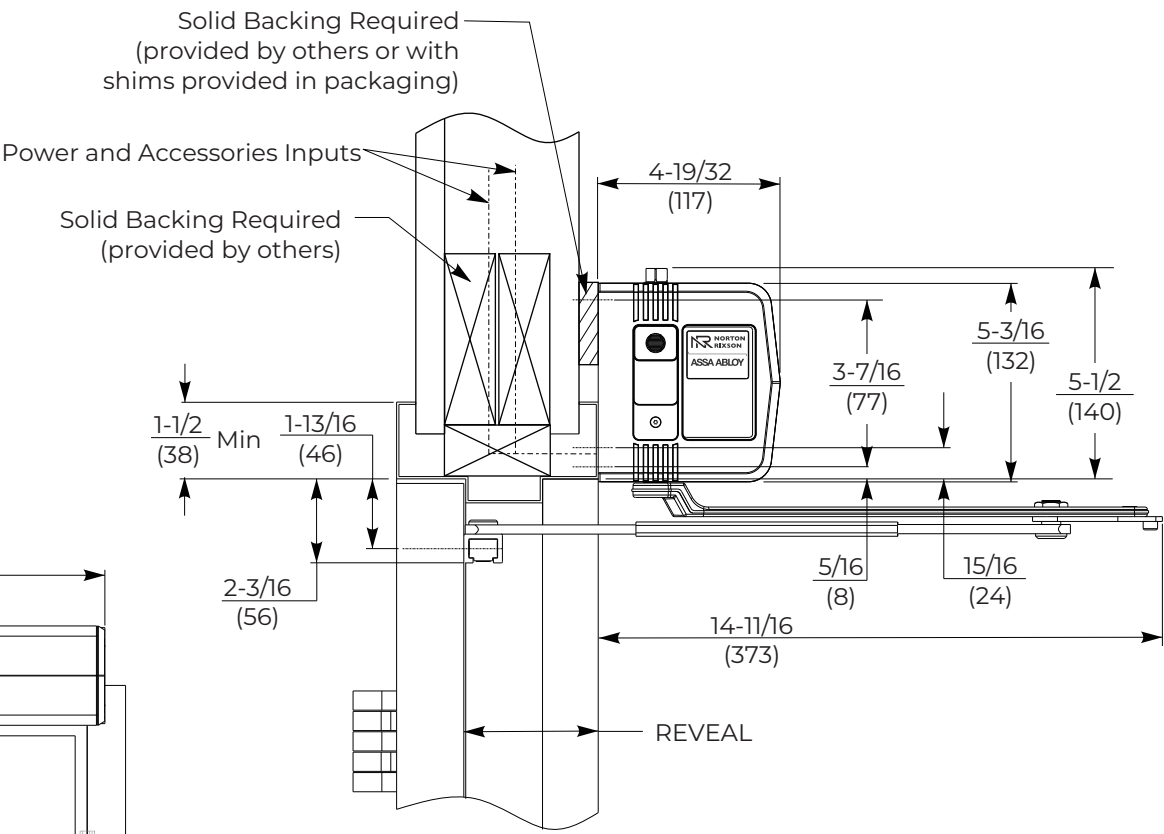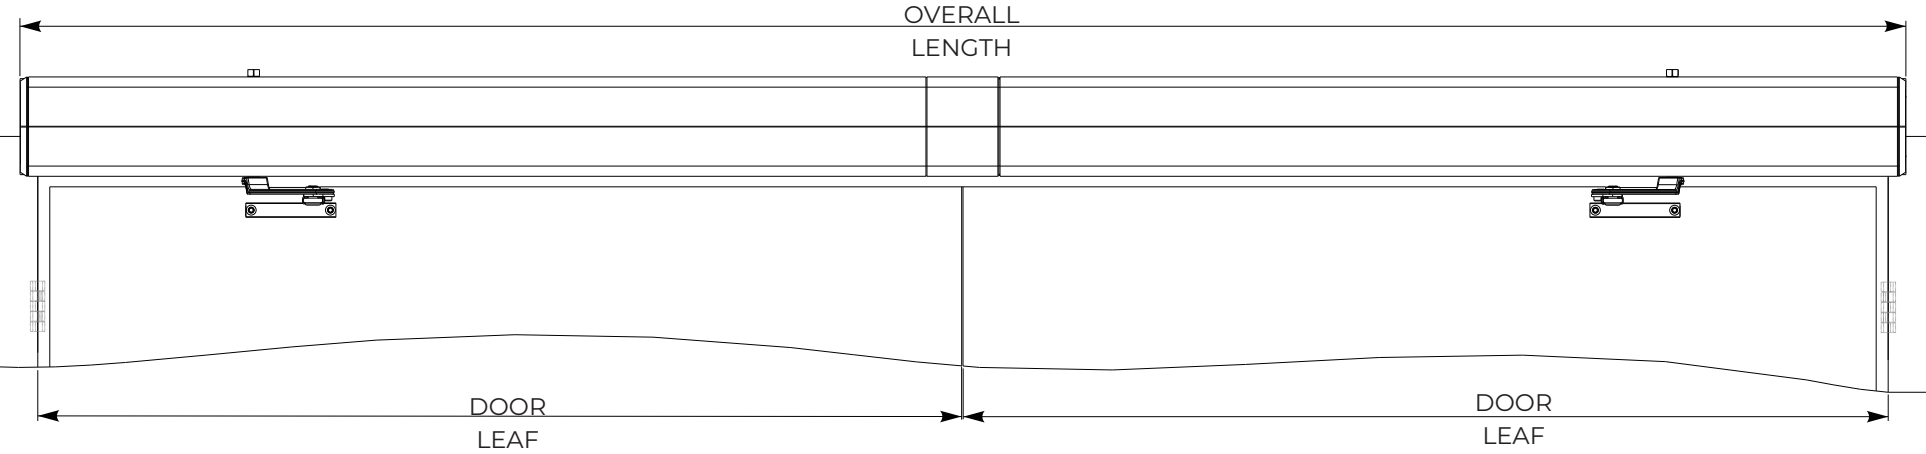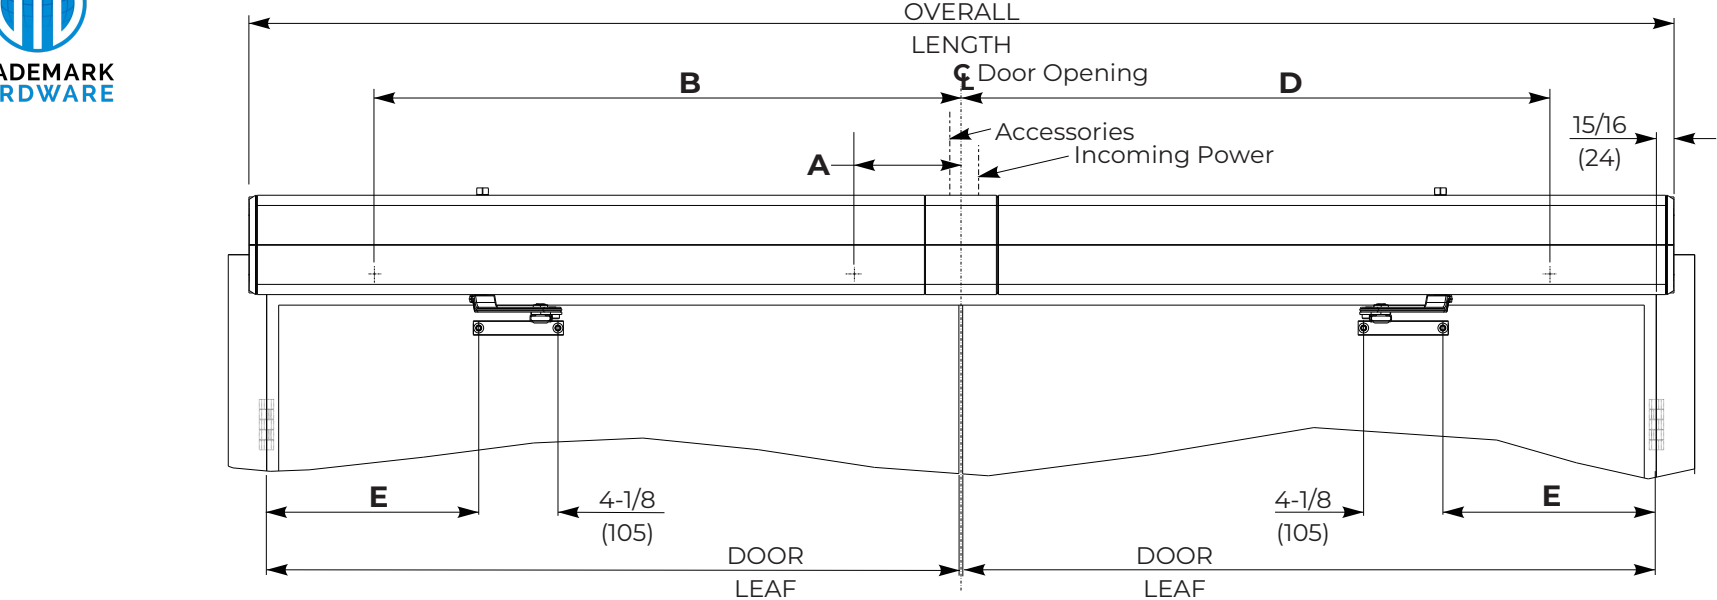

	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6061-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6061-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6061-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6061-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6061-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6061-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6061-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)

- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1046-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product

	85°	90°	95°	100°	105°	110°
Dim E	13-1/4 (337)	12-5/8 (320)	12 (305)	11-1/2 (292)	11-1/8 (283)	10-3/4 (273)

D6061 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Reveal of 2-1/4" to 4-3/4" and Opening of 85° to 110°


Page 1



TEMPLATE NUMBER	REV	DATE
7360-1055	3	05/23




Single Pull Side

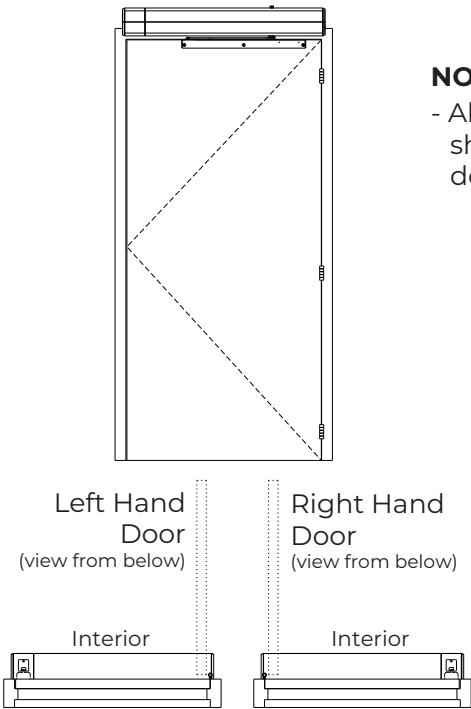


NOTE:
- All illustrations on this page
shown with 36" (914mm) wide
doors


Double Door Pull Side

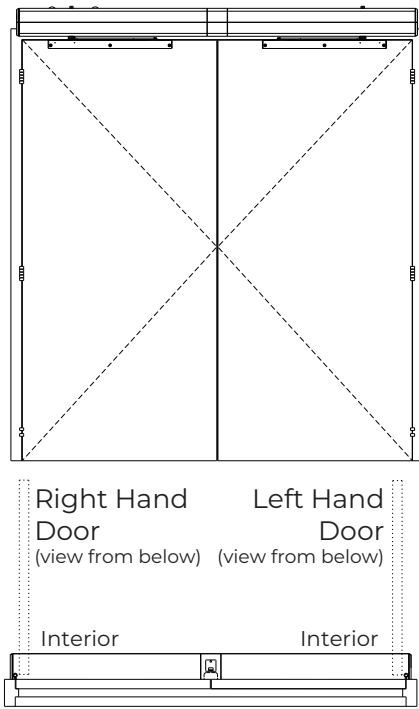


Double Door Double Egress Left Hand

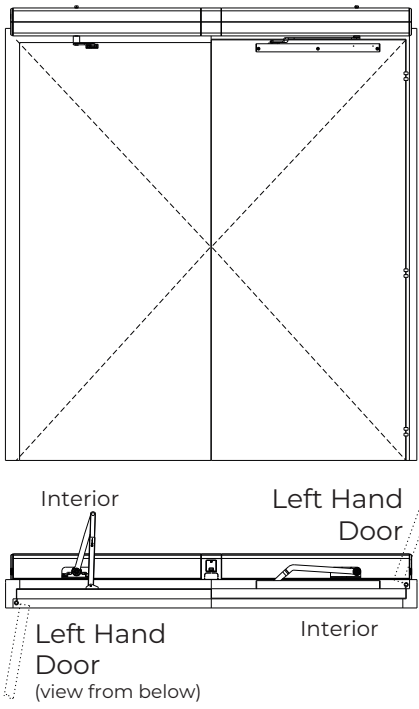


Single Push Side

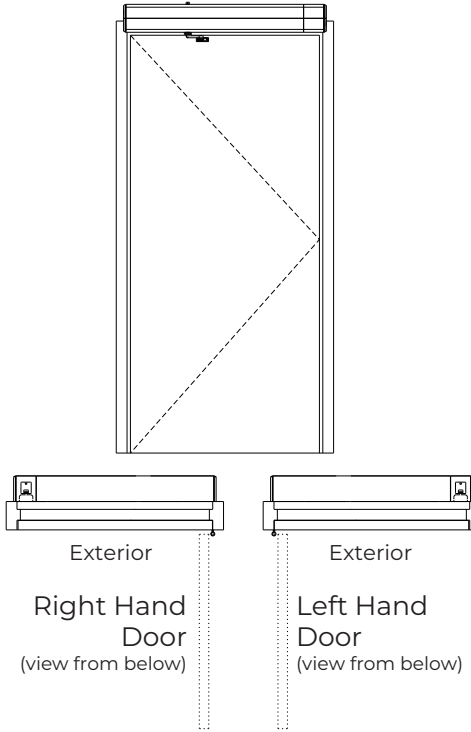

Double Door Push Side

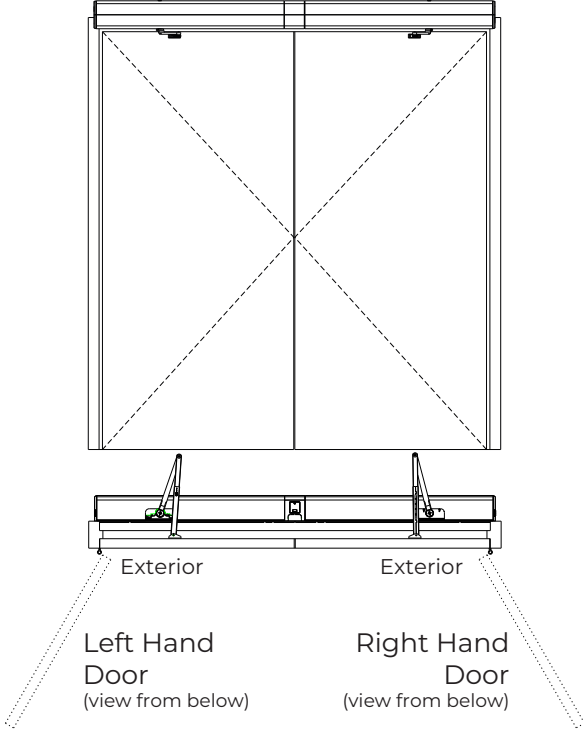

Double Door Double Egress Right Hand

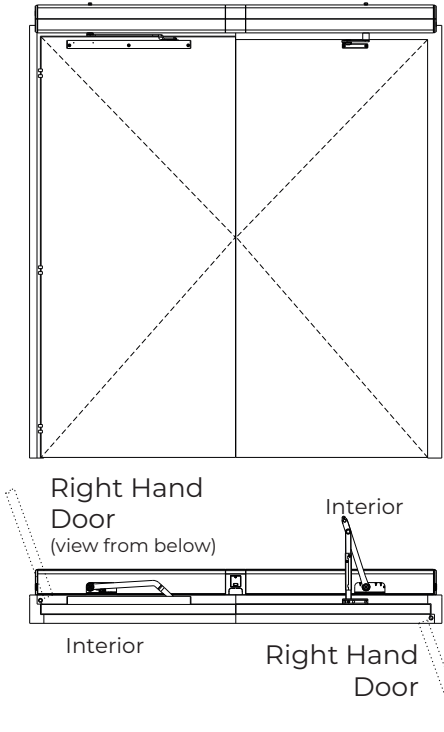


D6061 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Reveal of 2-1/4" to 4-3/4" and Opening of 85° to 110°

Page 2



TEMPLATE NUMBER	REV	DATE
7360-1055	3	05/23

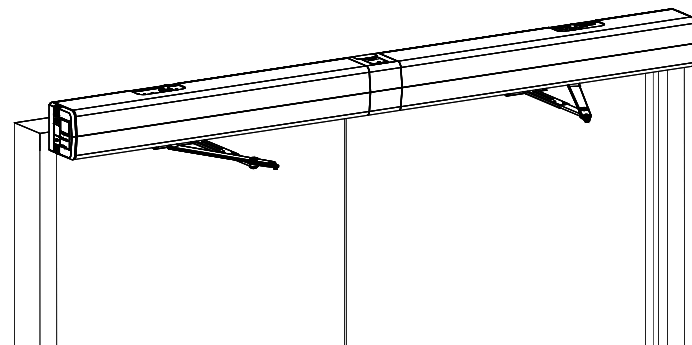

9-1/2 (241)
9-1/2 (241)
9-1/2 (241)

110°
10-3/4 (273)

- Do not scale drawing.
- Operator shown for push side double door application.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

	Dim A	Dim B	Dim C	Dim D	Dim E	Dim F
D6011-36	5-9/16 (141)	30-9/16 (776)	4-1/16 (103)	30-9/16 (776)	5-3/4 (146)	9-1/2 (241)
D6011-38	7-9/16 (192)	32-9/16 (827)	4-1/16 (103)	32-9/16 (827)	7-3/4 (197)	11-1/2 (292)
D6011-40	9-9/16 (243)	34-9/16 (878)	9-9/16 (243)	34-9/16 (878)	4 (102)	8 (203)
D6011-42	11-9/16 (294)	36-9/16 (929)	10-1/16 (256)	36-9/16 (929)	5-3/4 (146)	9-1/2 (241)
D6011-44	13-9/16 (344)	38-9/16 (979)	12-1/16 (306)	38-9/16 (979)	5-3/4 (146)	9-1/2 (241)
D6011-46	15-9/16 (395)	40-9/16 (1030)	14-1/16 (356)	40-9/16 (1017)	5-3/4 (146)	9-1/2 (241)
D6011-48	17-9/16 (446)	42-9/16 (1081)	16-1/16 (408)	42-9/16 (1081)	5-3/4 (146)	9-1/2 (241)

	85°	90°	95°	100°	105°	110°
Dim G	13-1/4 (337)	12-5/8 (320)	12 (305)	11-1/2 (292)	11-1/8 (283)	10-3/4 (273)

Reveal of 2-1/4" to 4-3/4" and Opening of 85° to 110°

Page 3



TEMPLATE NUMBER



7360-1055

REV

3

DATE _____

05/23

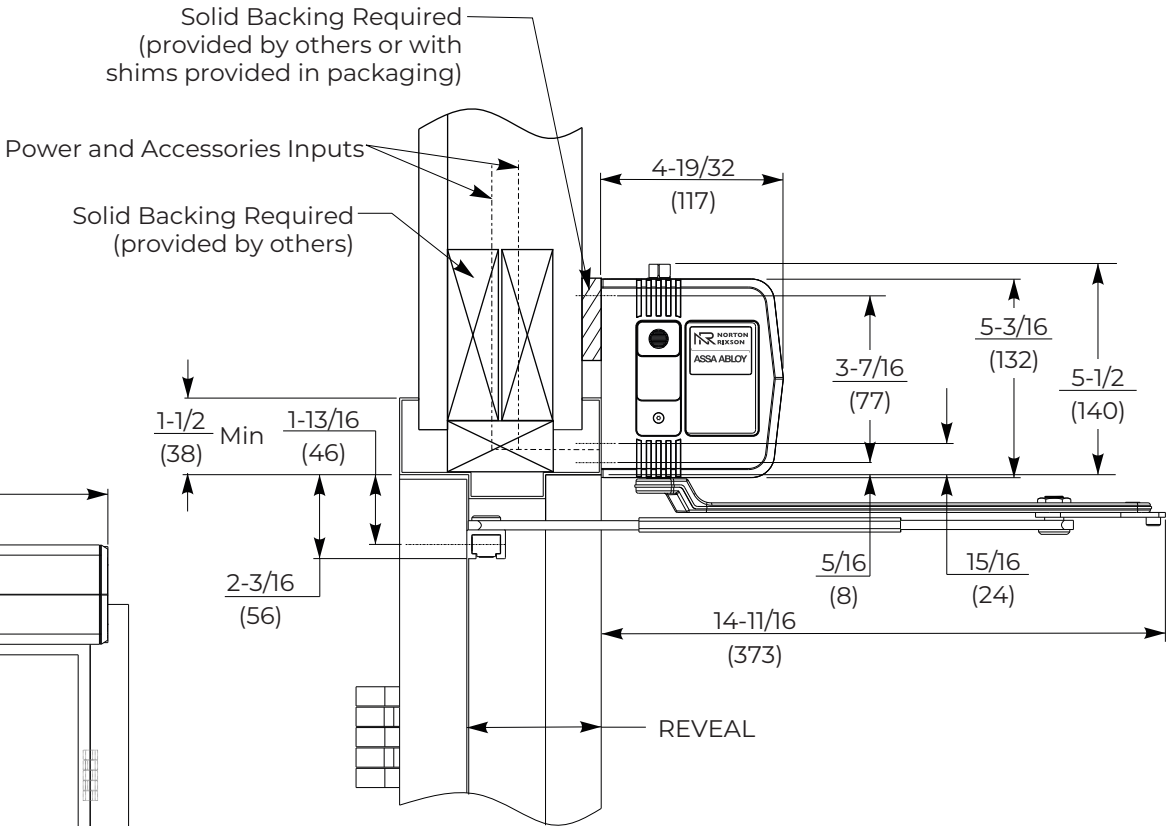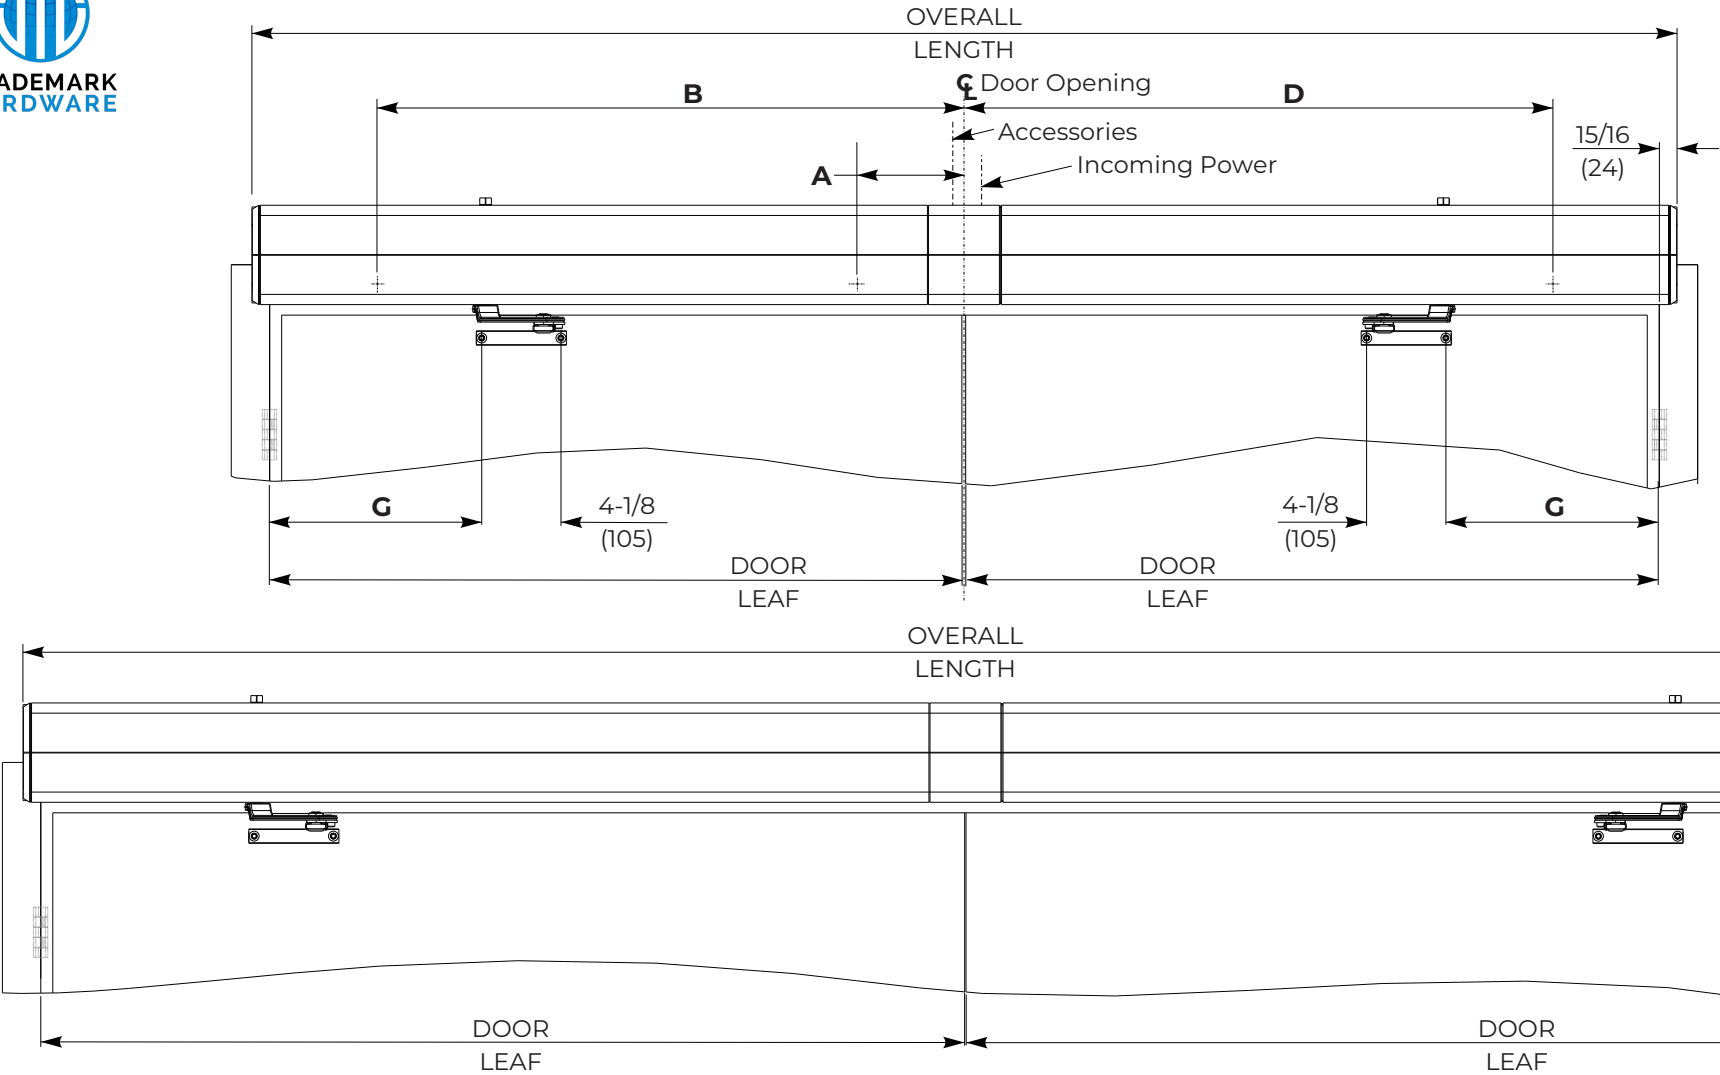

	Door Leaf Width	OAL (Overall Length)	Dim A	Dim B	Dim D
D6061-36	36 (914)	74-1/4 (1886)	5-9/16 (141)	30-9/16 (776)	30-9/16 (776)
D6061-38	38 (965)	78-1/4 (1988)	7-9/16 (192)	32-9/16 (827)	32-9/16 (827)
D6061-40	40 (1016)	82-1/4 (2089)	9-9/16 (243)	34-9/16 (878)	34-9/16 (878)
D6061-42	42 (1067)	86-1/4 (2191)	11-9/16 (294)	36-9/16 (929)	36-9/16 (929)
D6061-44	44 (1118)	90-1/4 (2292)	13-9/16 (344)	38-9/16 (979)	38-9/16 (979)
D6061-46	46 (1168)	94-1/4 (2394)	15-9/16 (395)	40-9/16 (1030)	40-9/16 (1017)
D6061-48	48 (1219)	98-1/4 (2496)	17-9/16 (446)	42-9/16 (1081)	42-9/16 (1081)

- NOTES:**
- Dimensions shown in inches / (mm) unless specified otherwise.
 - Electrical requirements:
 - Power input of 120VAC, 5Amp minimum
 - Accessories circuit for activation to operator and low voltage
 - For initial set up, doors much be un-latched and free to move
 - For additional installation instructions, see instruction sheet 80-9360-1046-020. Visit www.NortonRixson.com
 - Refer to page 2 for proper handling of product


	85°	90°	95°	100°	105°	110°
Dim G	13-1/4 (337)	12-5/8 (320)	12 (305)	11-1/2 (292)	11-1/8 (283)	10-3/4 (273)


D6071 Series Template
shown on pairs of 36", 38", 40", 42", 44", 46", and 48" frames
shown with up to 5" Butt Hinges
Reveal of 4-13/16" to 7-3/8" and Opening of 85° to 110°

Page 1




TEMPLATE NUMBER	REV	DATE
7360-1056	2	05/23

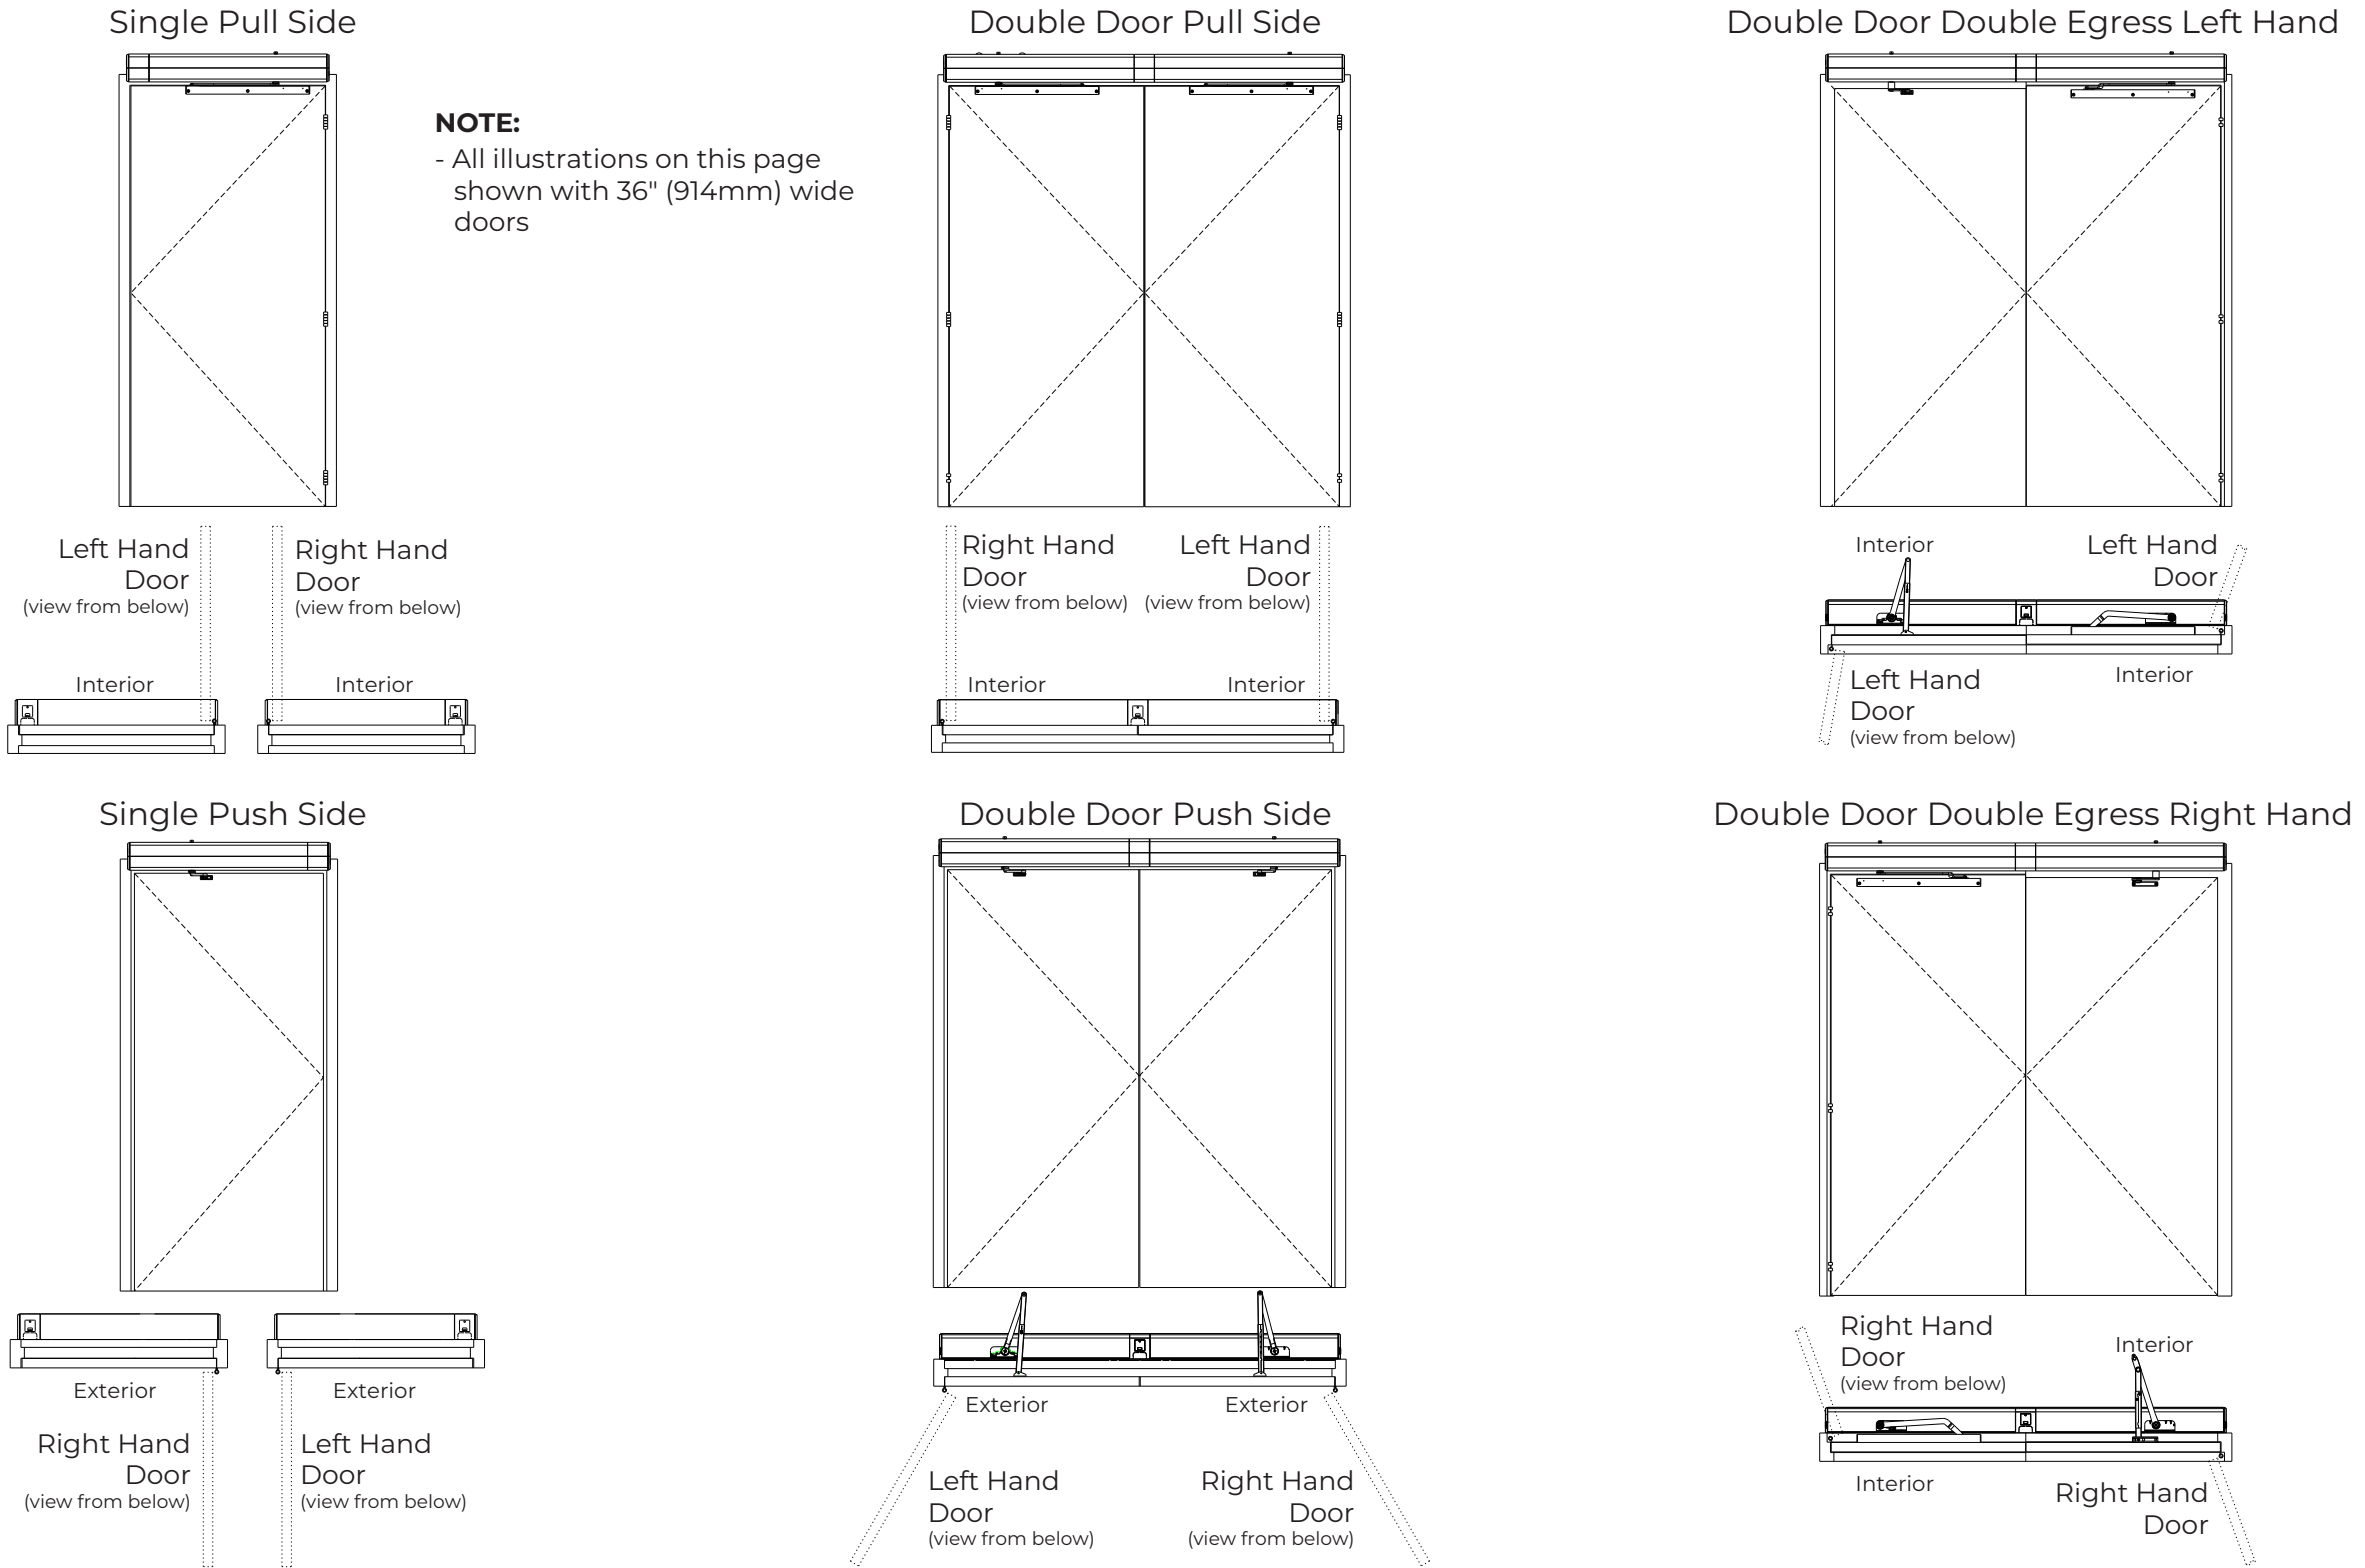

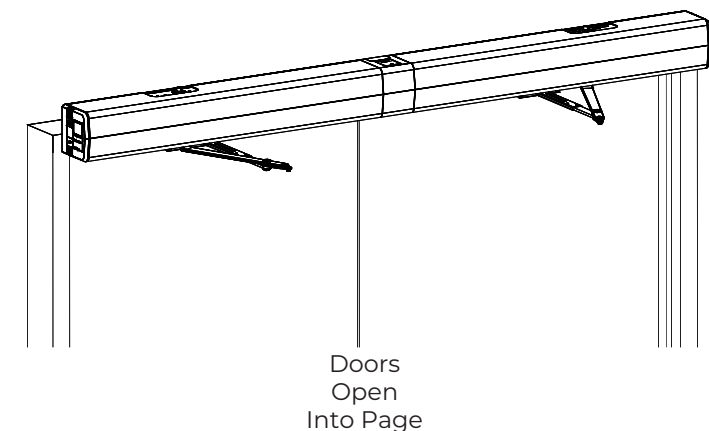

	85°	90°	95°	100°	105°	110°
Dim G	13-1/4 (337)	12-5/8 (320)	12 (305)	11-1/2 (292)	11-1/8 (283)	10-3/4 (273)

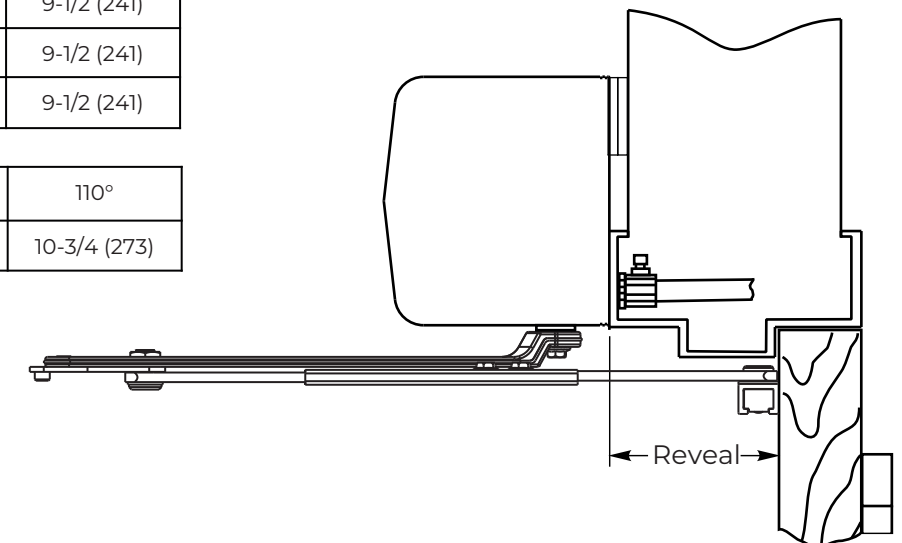

- Do not scale drawing.
- Operator shown for push side double door application.
- All dimensions are given in inches and millimeters.
- Recommended thickness for reinforcements in hollow-metal doors and frames should provide a combined material thickness of .164 (4.2) MIN.
- This template information based upon use of 5 (127) maximum width butt hinges or 3/4 (19) offset pivots.

Reveal of 4-13/16" to 7-3/8" and Opening of 85° to 110°


**NORTON
RIXSON**

ASSA ABLOY

7360-1056

2

05/23

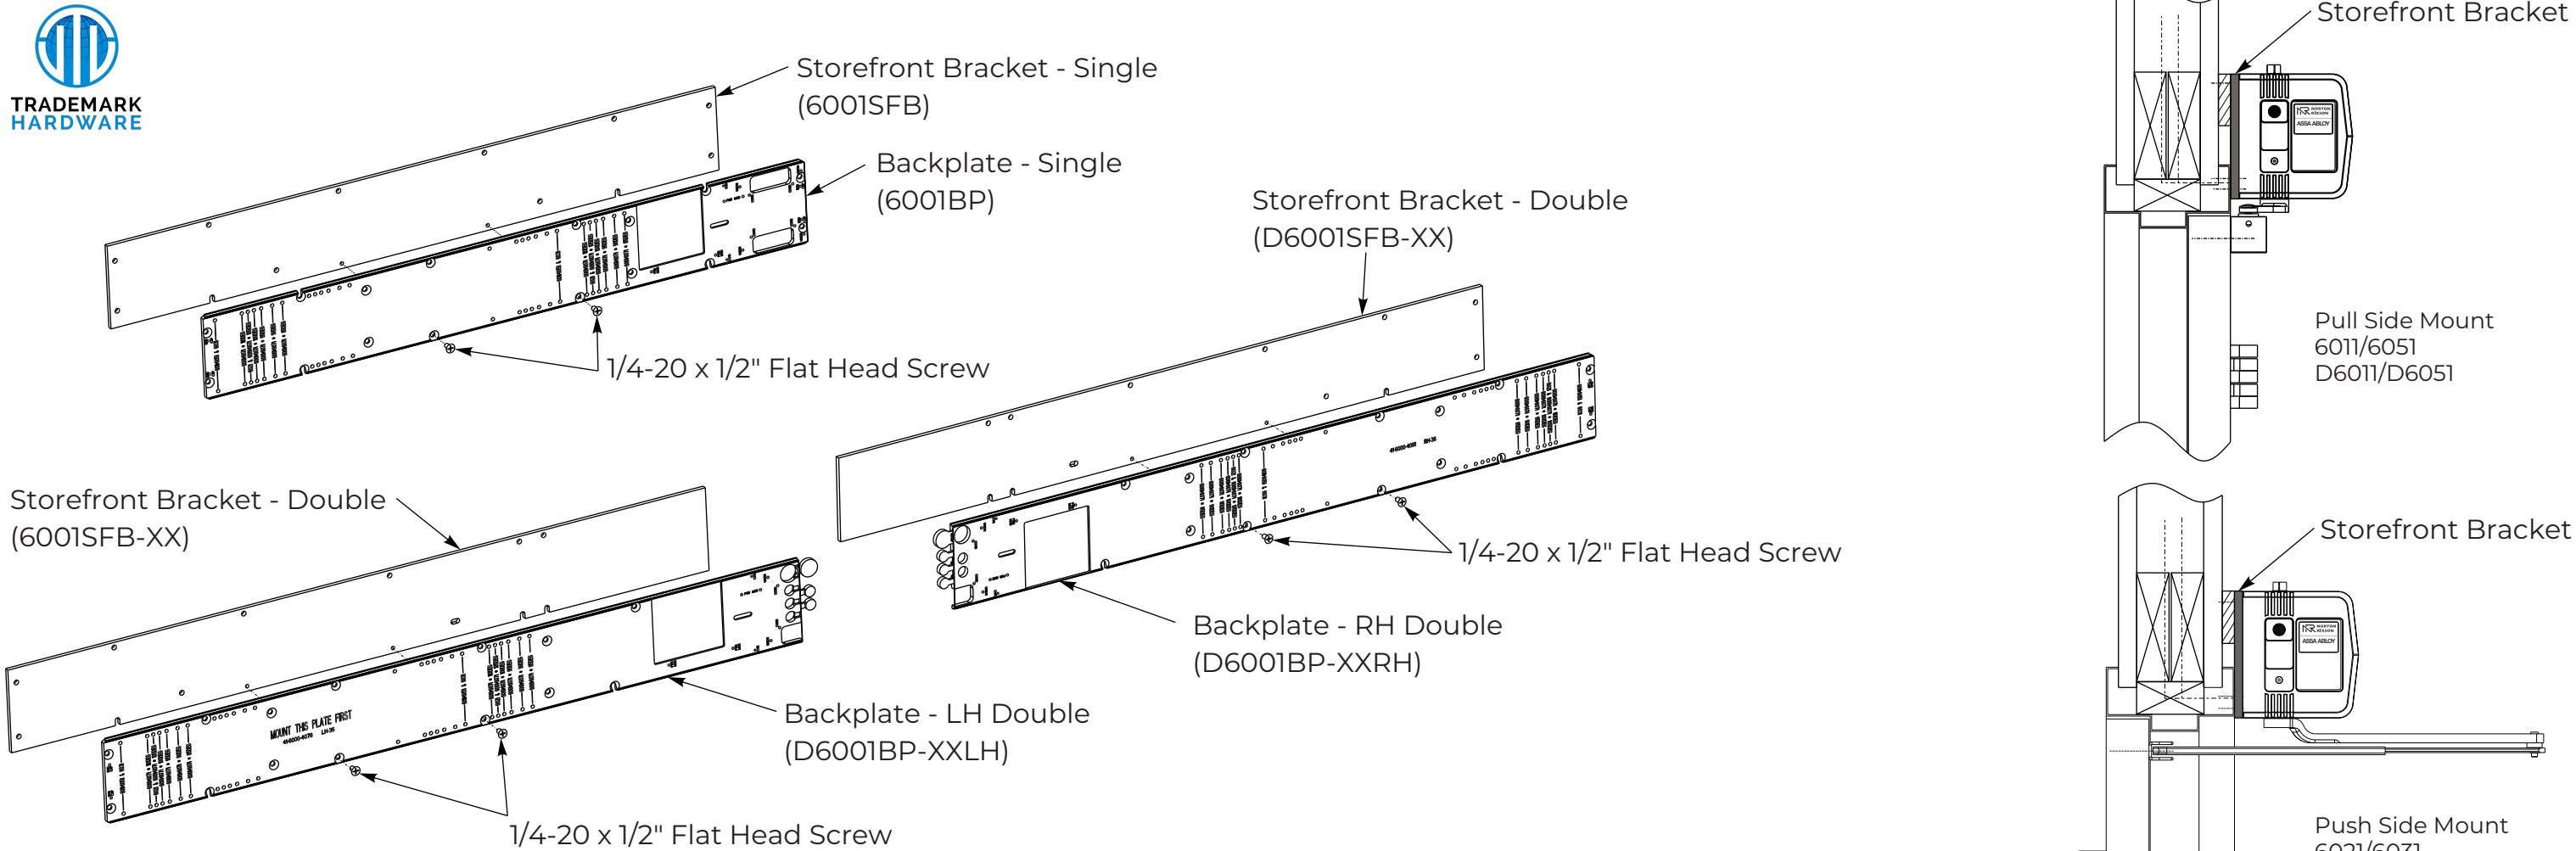

Installation Sequence:

1. Before installing back plate onto frame, secure back plate and store front bracket together using (2) 1/4-20 x 1/2" flat head screws provided with store front bracket in the holes indicated above.

NOTE: Countersunk mounting holes in back plate should align with clearance holes in the store front bracket.

2. Proceed with '**Prepare Frame and Doors: B. Mount Back plates.**' using back plate / store front bracket assembly in place of just the back plate.

**Store Front Bracket
6001 / D6001 Series Operator
Installation Template**

Approved 2023-07-12

**NORTON
RIXSON**
ASSA ABLOY

TEMPLATE NUMBER	REV	DATE
7360-1063	2	05/23